


ELECTRICAL SECTION

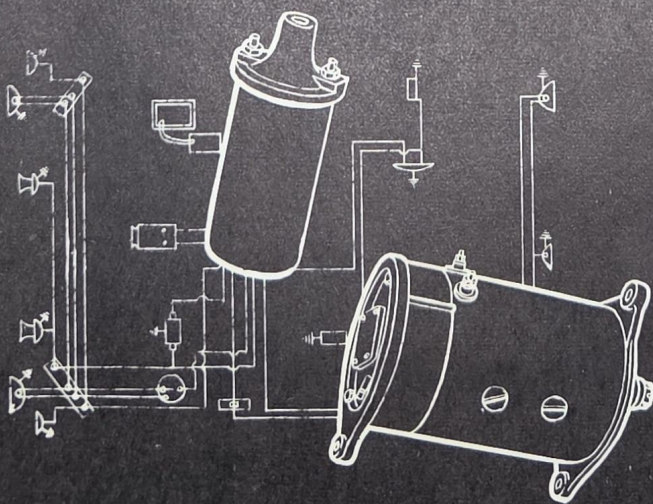

GROUP
2.000



SUB INDEX

ILLUSTRATIONS

	Page
Starting Motor	118
Generator Parts	119
Generator 12 Volt	120
Ignition Distributor	121
Ignition Distributor 6 Cyl.	122
Ignition Distributor V-8	123
Headlamp Sealed Beam	124
1949-50 Tail Lamp	124
1957 Ignition Distributor	125
Steering Wheel	126
1957 Tail and Stop Lamp	126
1955 Tail Lamp	127
Rear License Lamps	128
Headlamp Rings	129
Direction Signal	129


PARTS DATA

	Group
Pedal Starter	2.004
Starting Motor	2.041
Coil Ignition	2.170
Cylinder Ignition Lock	2.188
Wire Set, Spark Plug	2.239
Plug, Spark	2.270
Pulley, Generator	2.274
Generator	2.275
Bolt Battery Clamp	2.331
Cable Battery	2.341
Distributor, Ignition	2.361
Point Set, Contact	2.384
Condenser, Distributor	2.393
Switch, Stop Lamp	2.447
Regulator, Voltage	2.500
Ammeter	2.515
Harness, Chassis Wiring	2.555
Lamp, Parking	2.585
Lamp, Tail and Stop	2.679
Lamp, Rear Licence	2.700
Headlamp	2.725
Horn	2.810
Ring, Horn Blowing	2.830

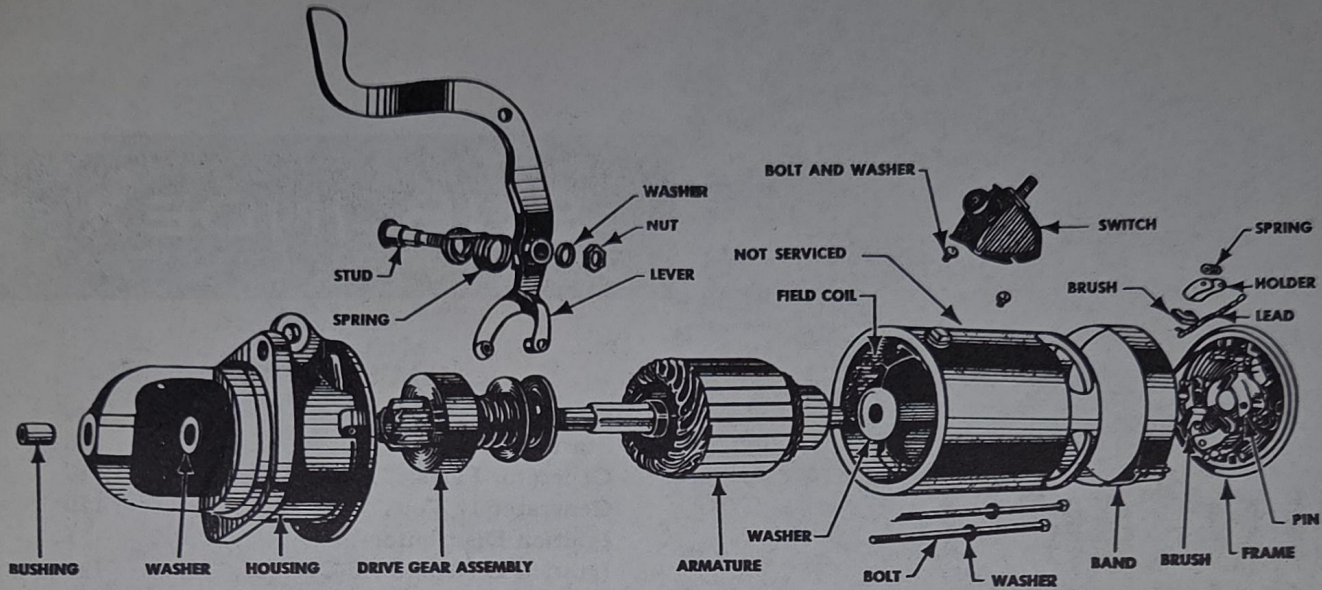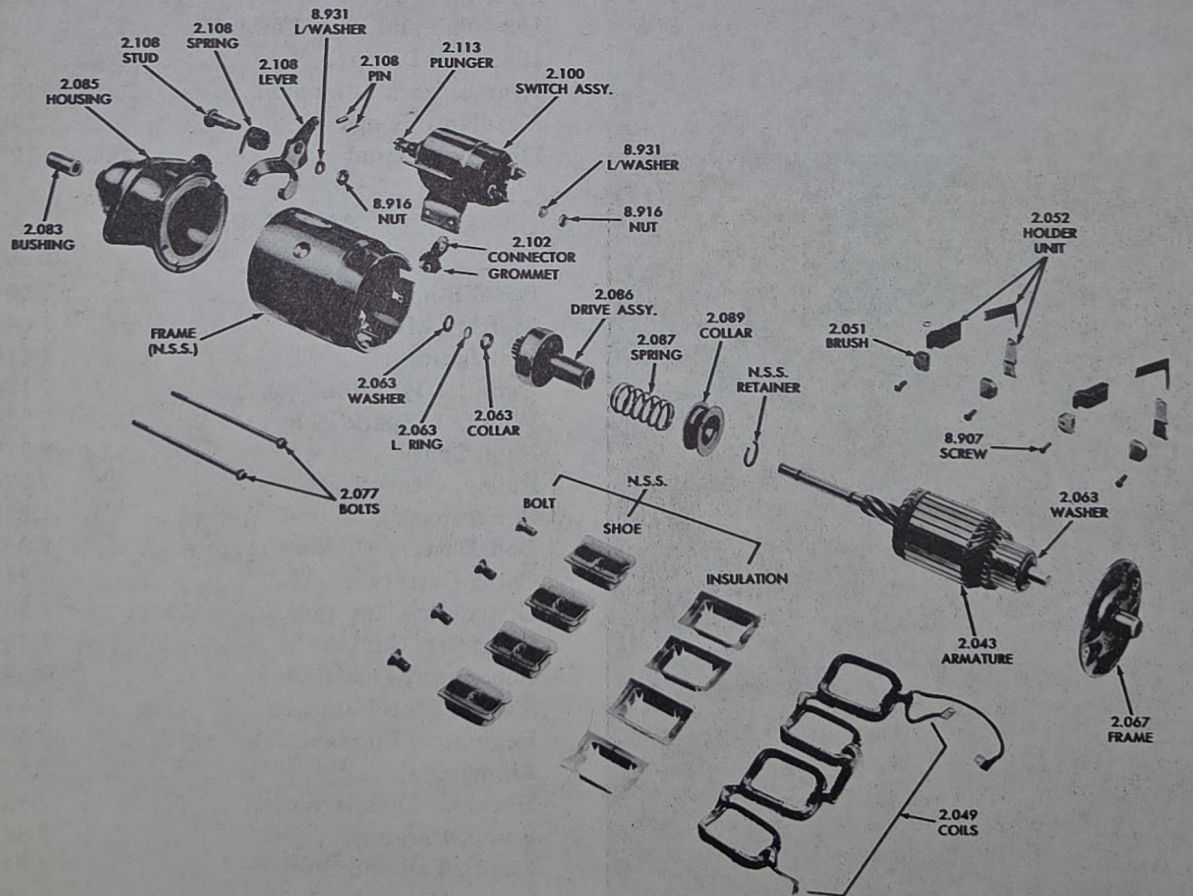
1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**STARTING MOTOR****"L" HEAD ENGINE****STARTING MOTOR**
20-22

1946-
-1957

Pontiac PARTS

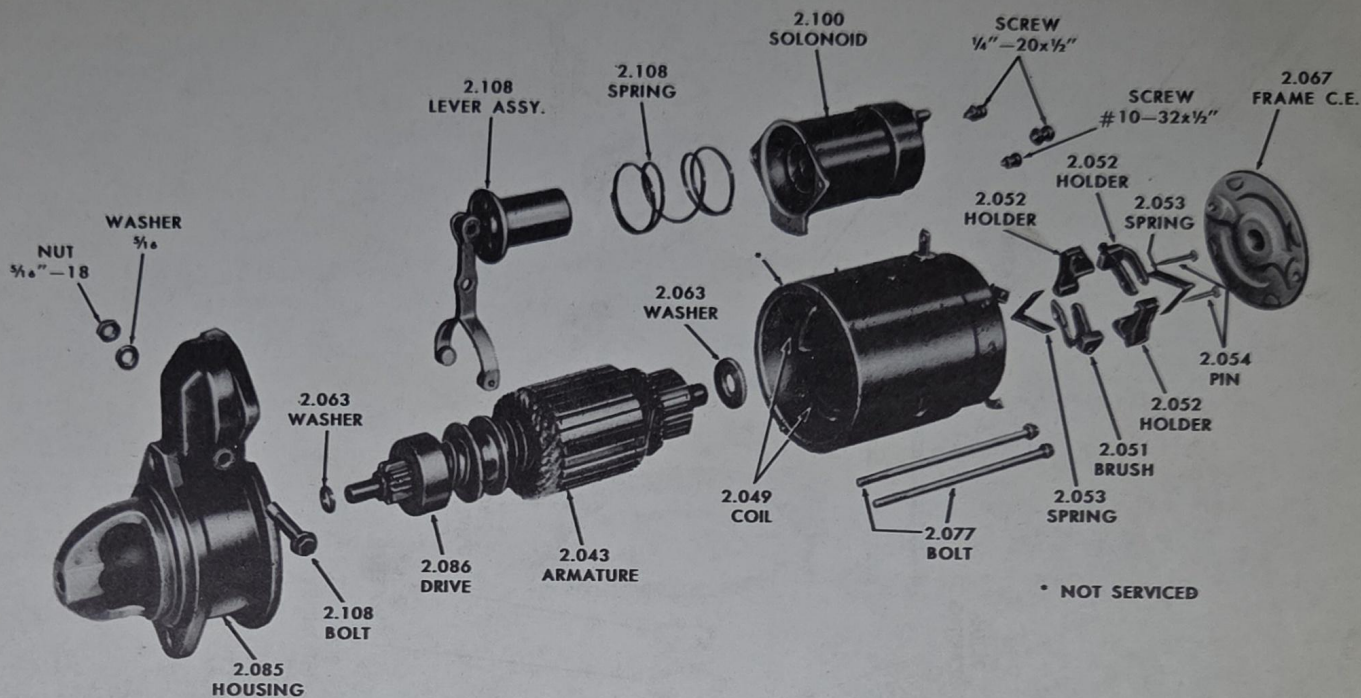 CATALOGUE NO. 572


STARTING MOTOR

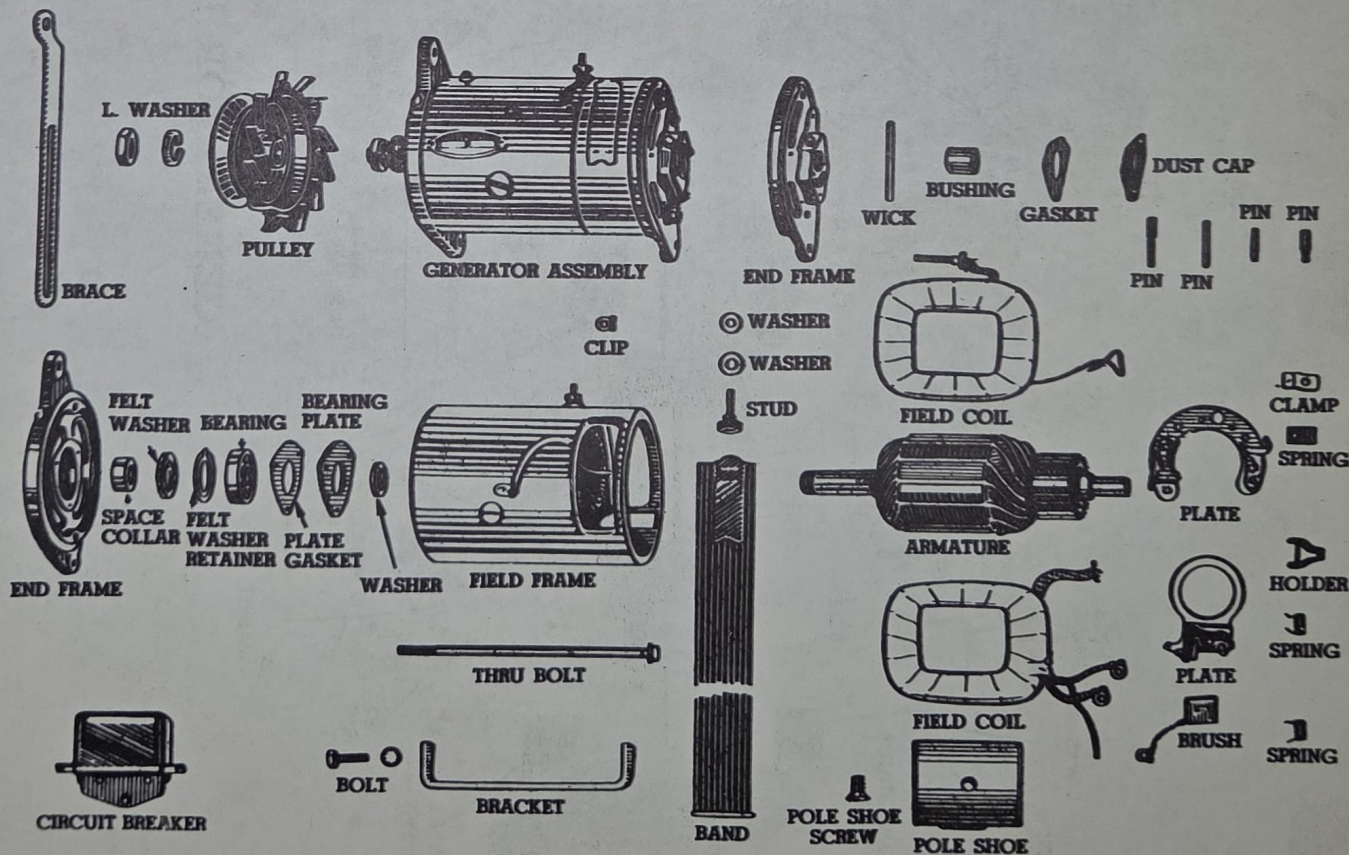


GENERATOR PARTS

This illustration for information only, Parts Serviced by Delco Remy

1946-
-1957


Pontiac


PARTS
CATALOGUE NO. 572

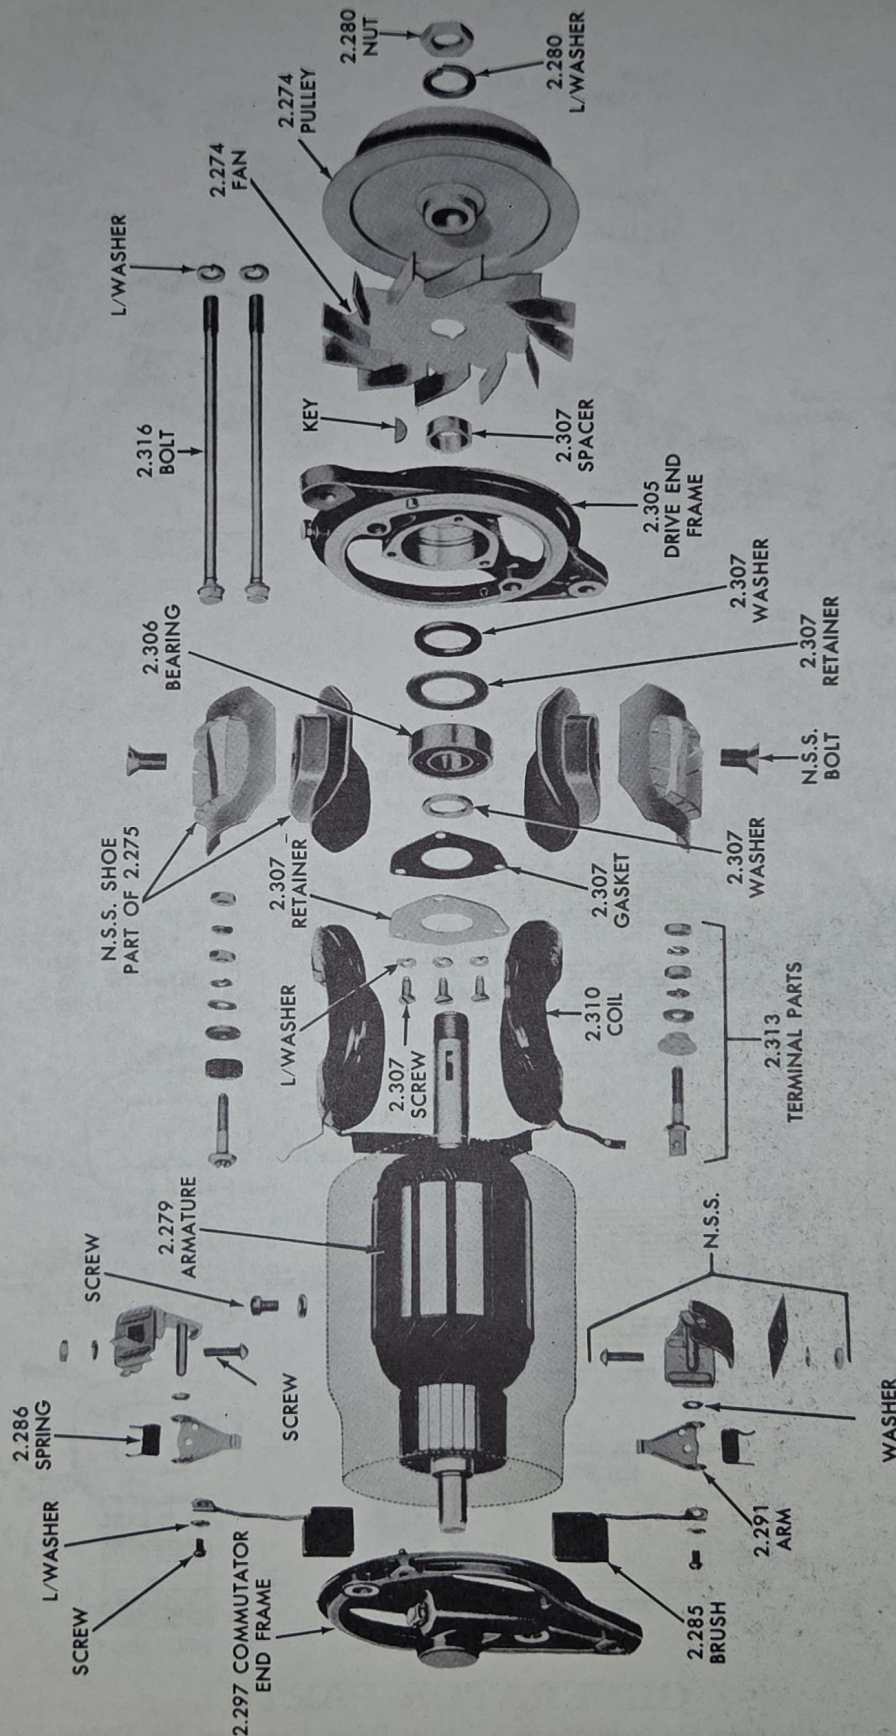

GENERATOR 12 VOLT


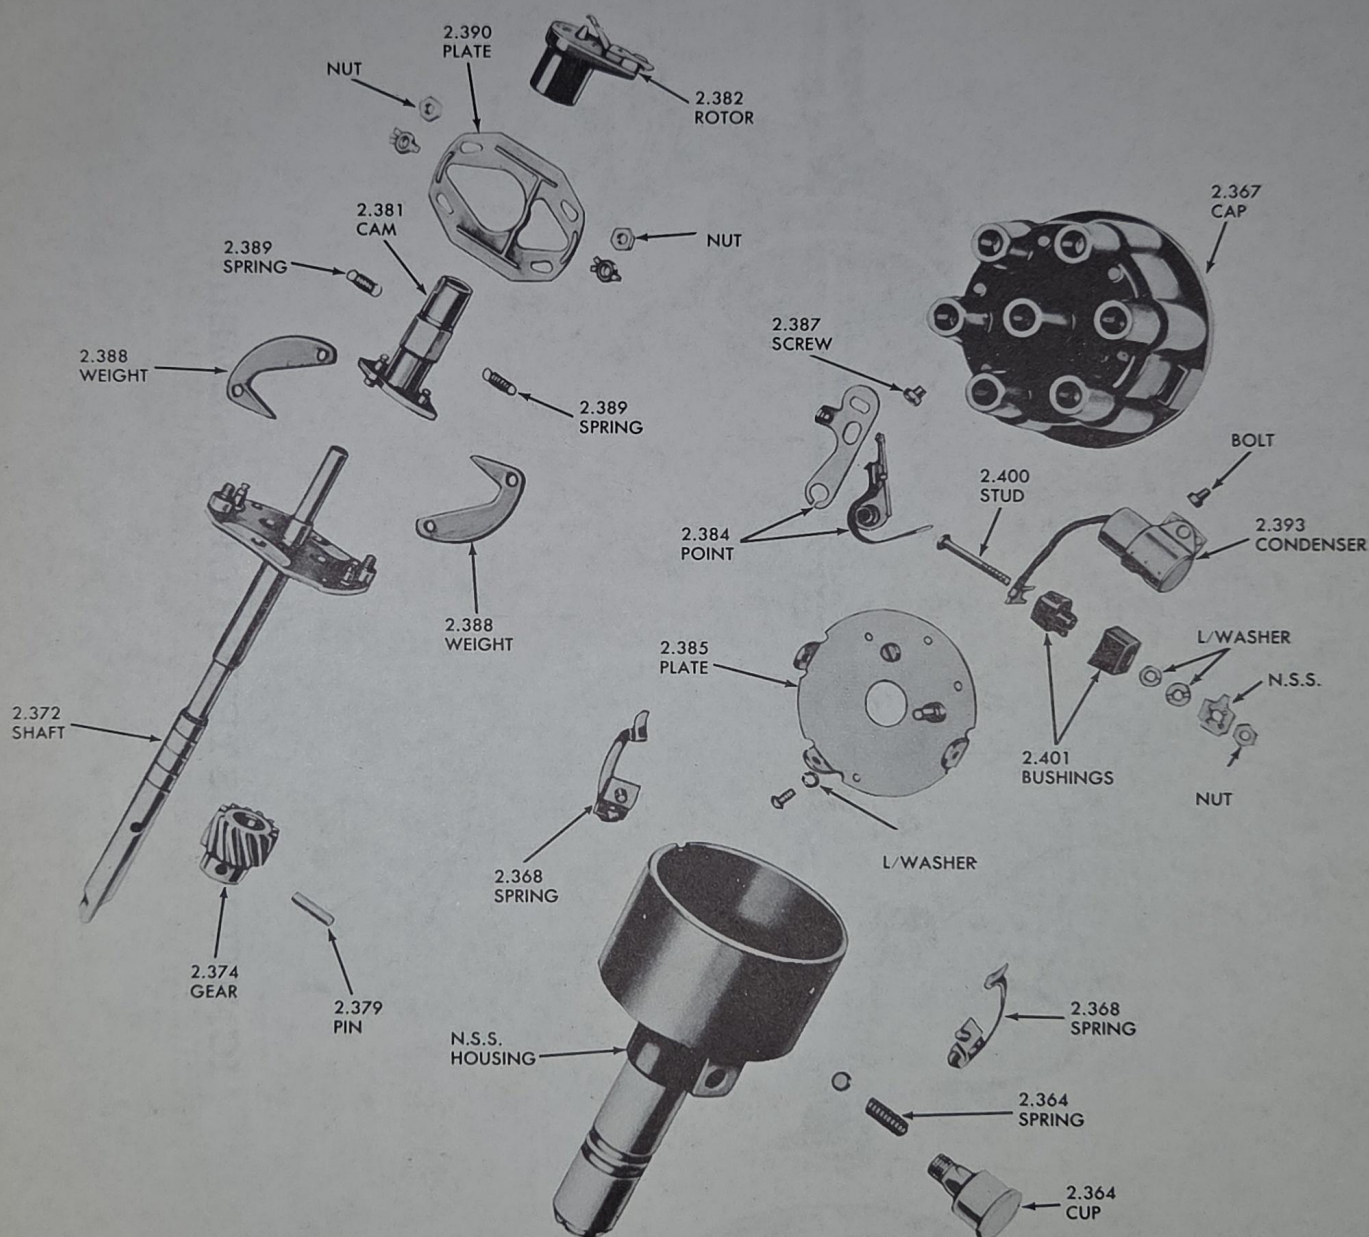



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**1955-56 6 CYL. IGNITION DISTRIBUTOR**

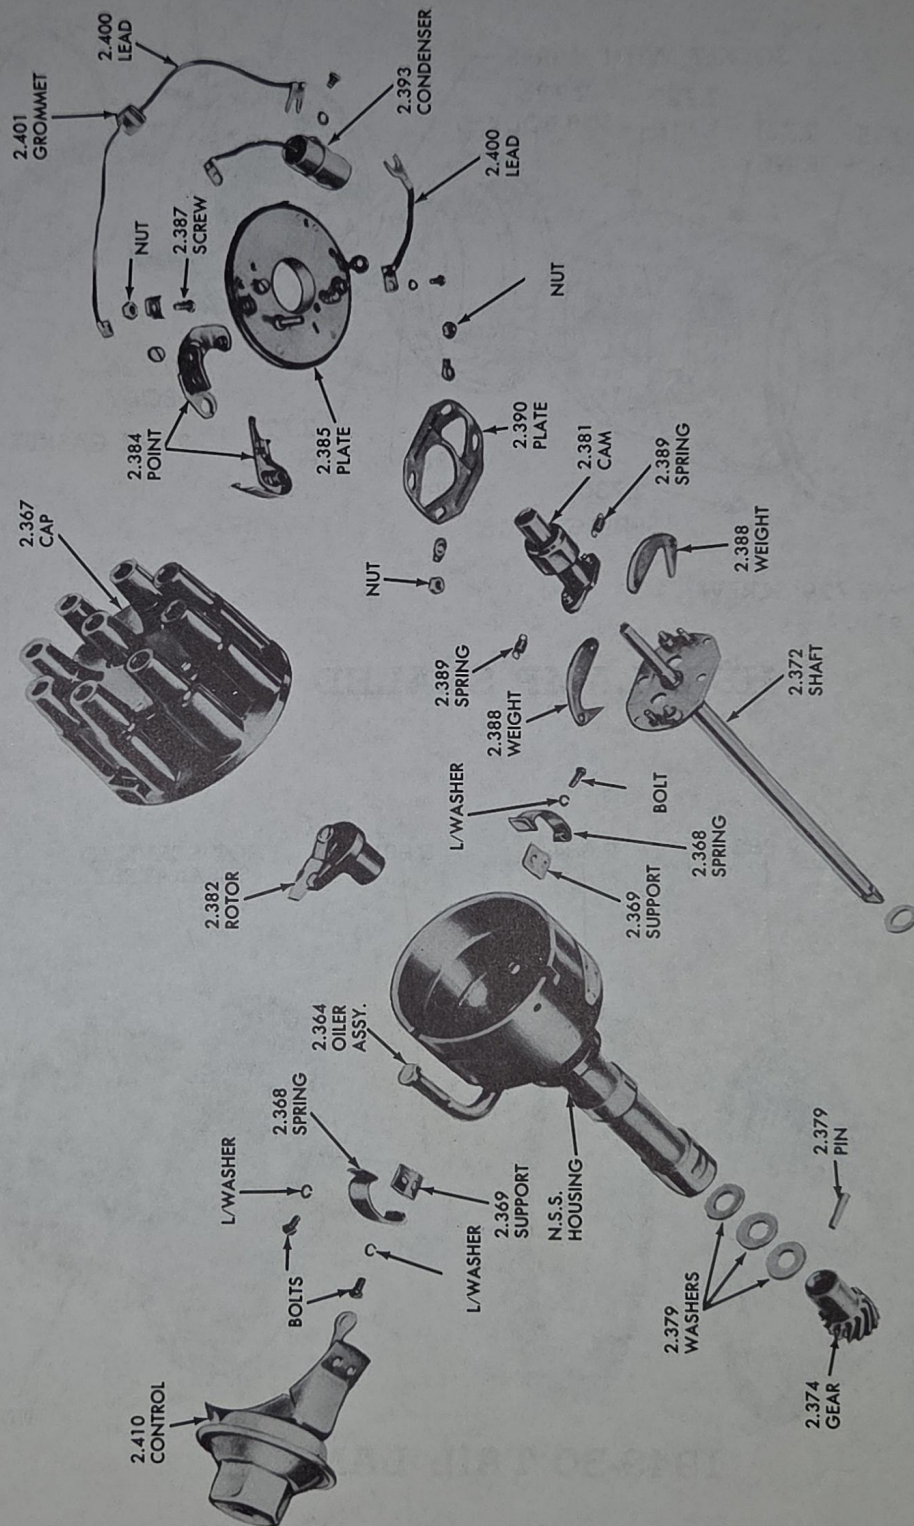1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572

1955-56 8 CYL. IGNITION DISTRIBUTOR

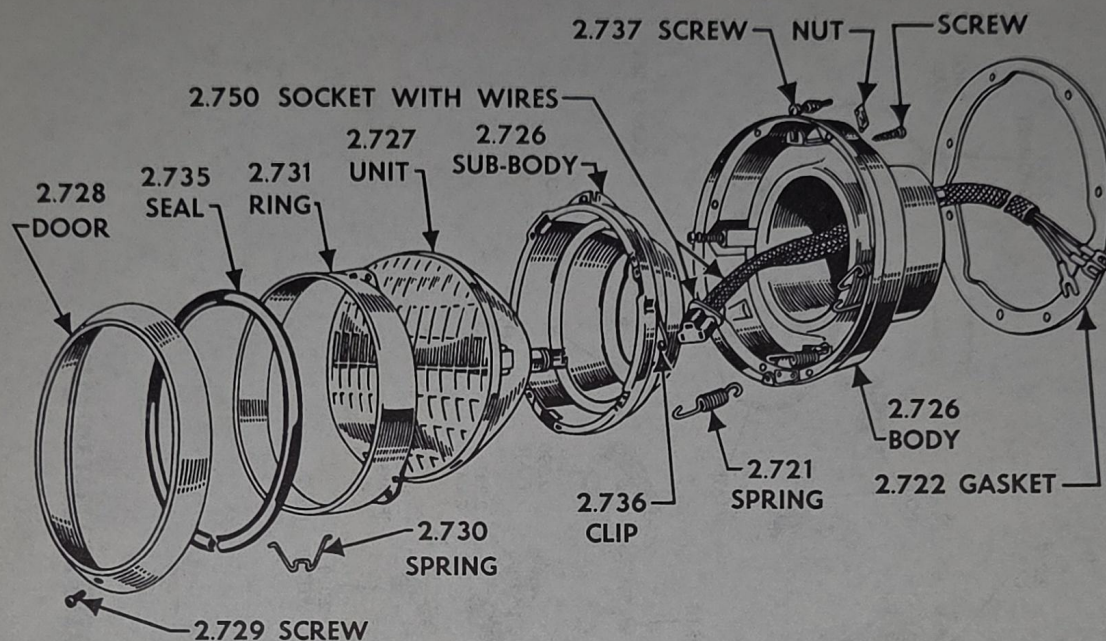
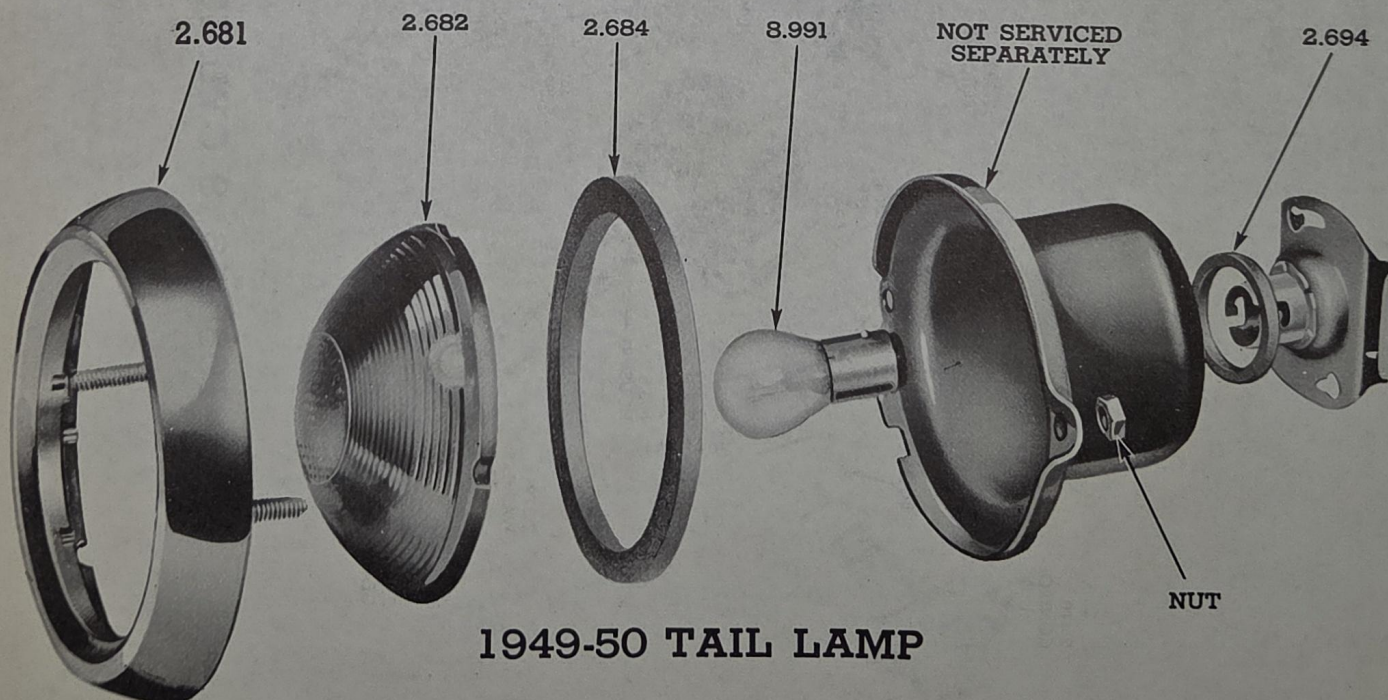


1946-
1957*Pontiac***PARTS**
CATALOGUE NO. 572**HEADLAMP SEALED BEAM****1949-50 TAIL LAMP**

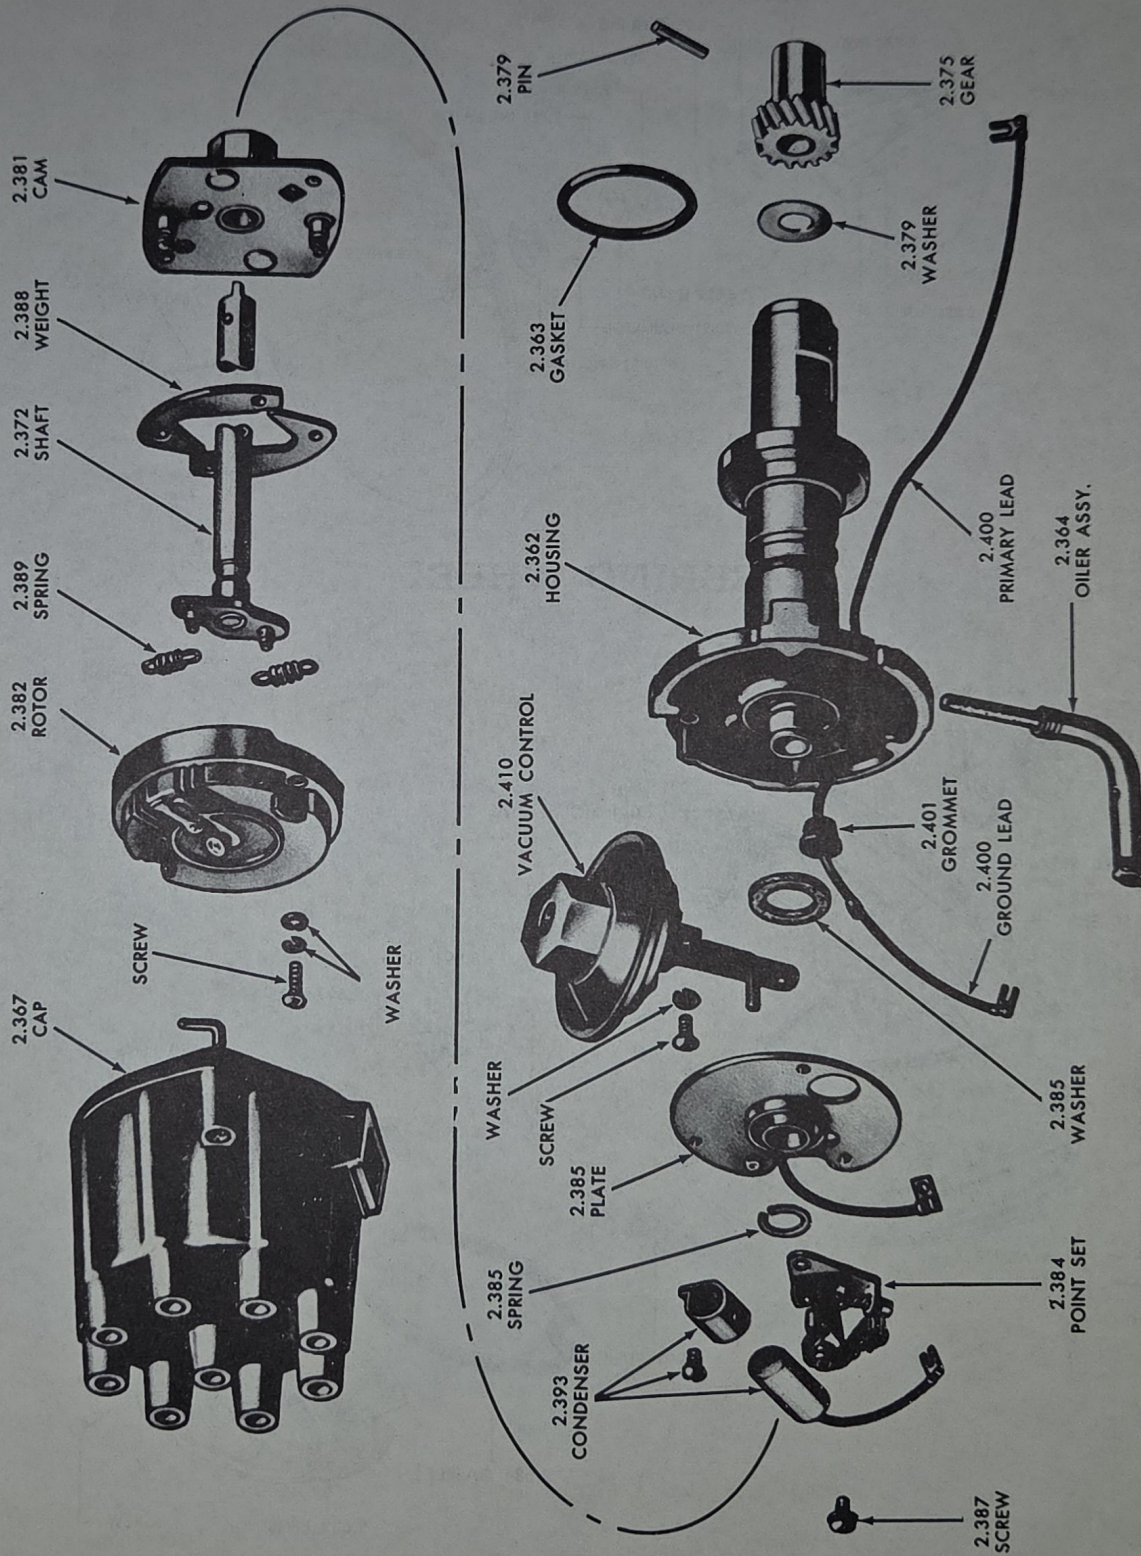1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572


1957 IGNITION DISTRIBUTOR

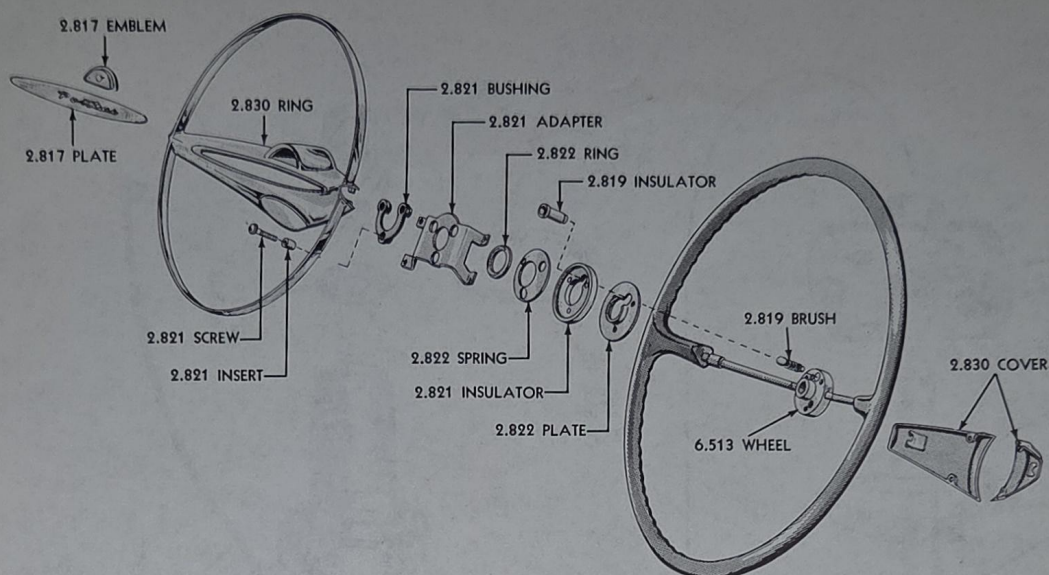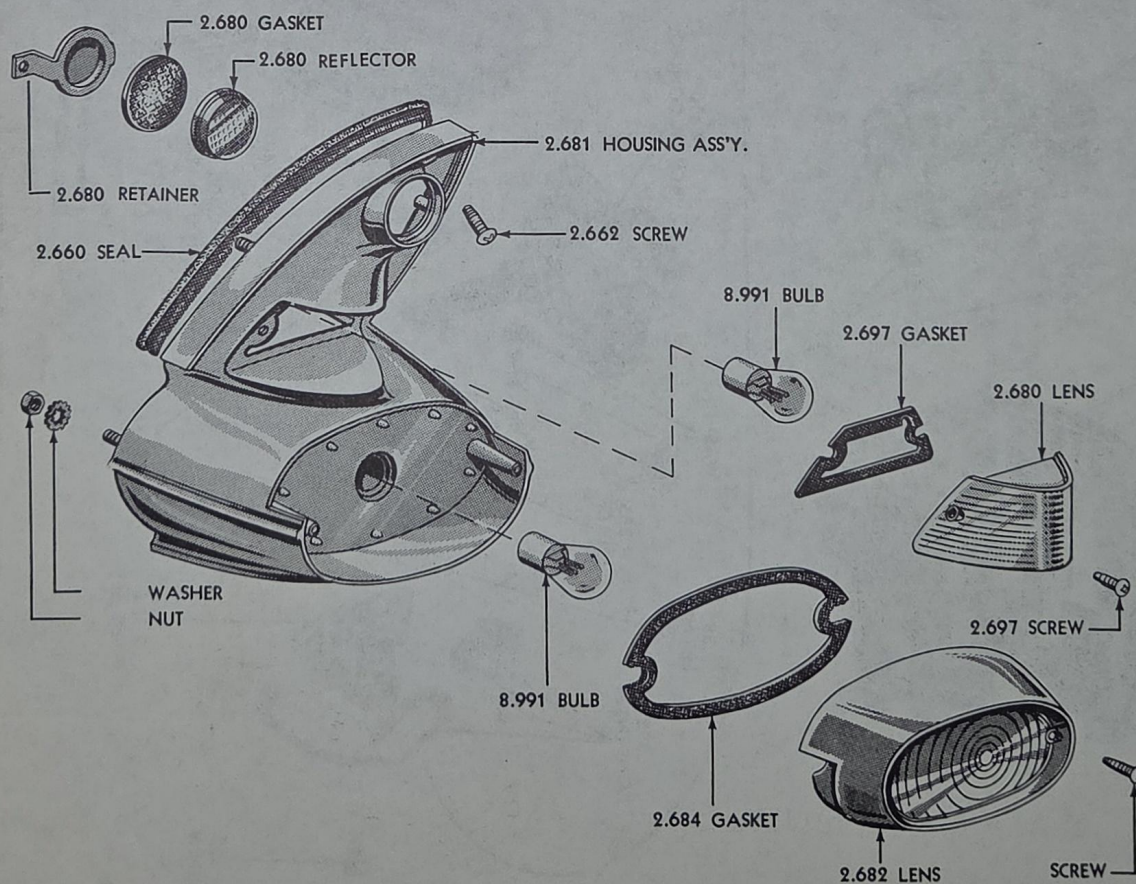


1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**STEERING WHEEL****1957 TAIL AND STOP-LAMP**


126


PARTS*Engineered for
Premium Performance*

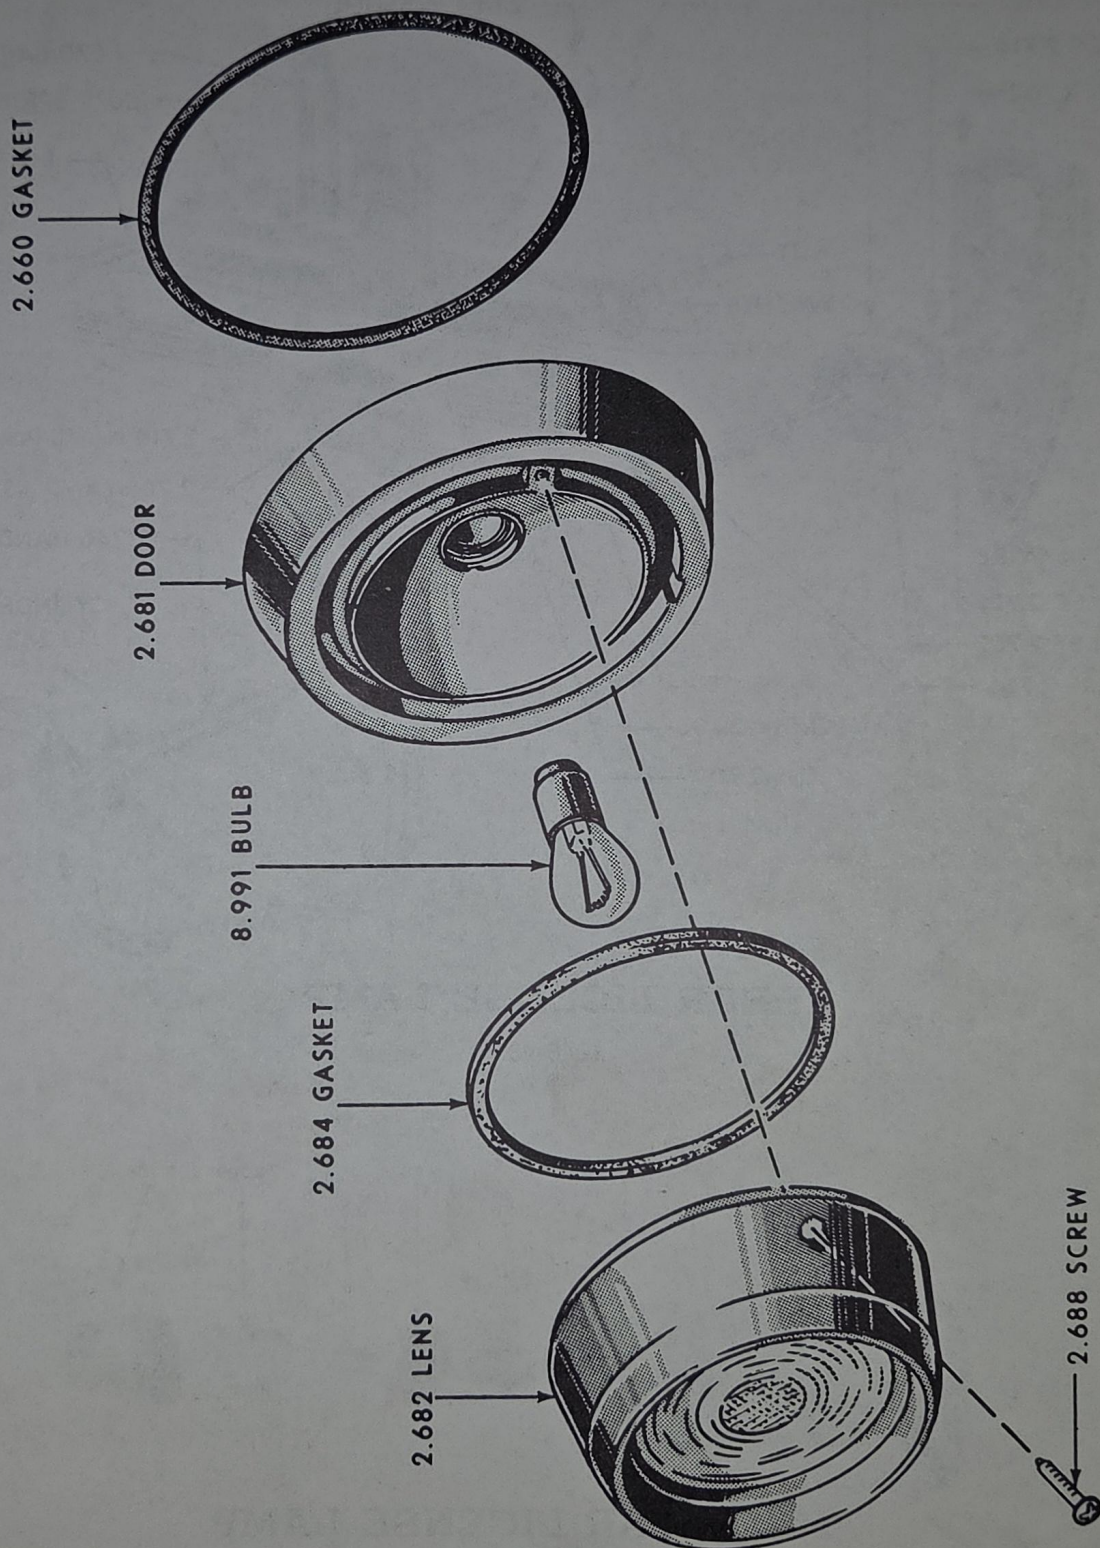

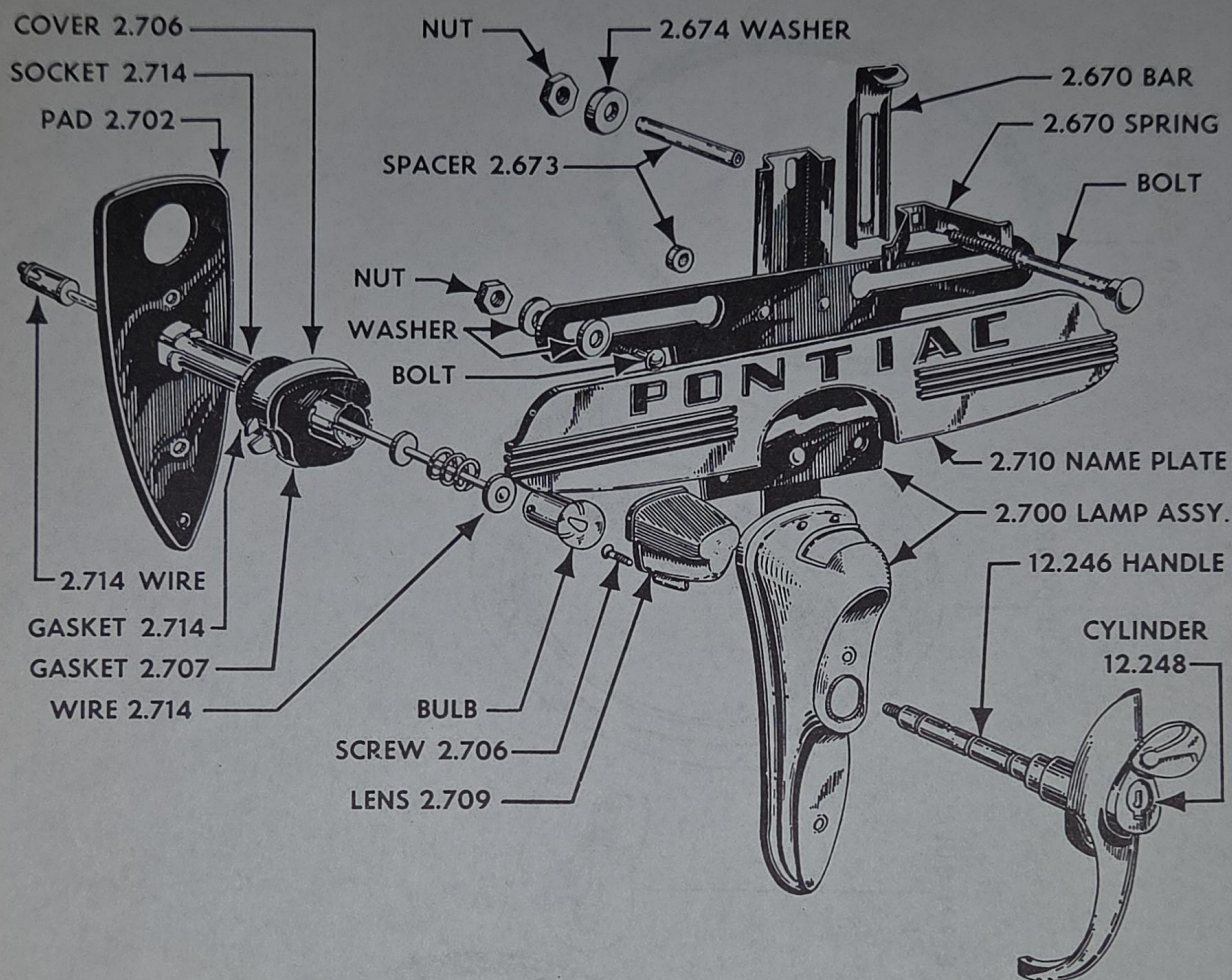
1946-
1957*Pontiac***PARTS**
CATALOGUE NO. 572**REAR LICENSE LAMP**

1946-48

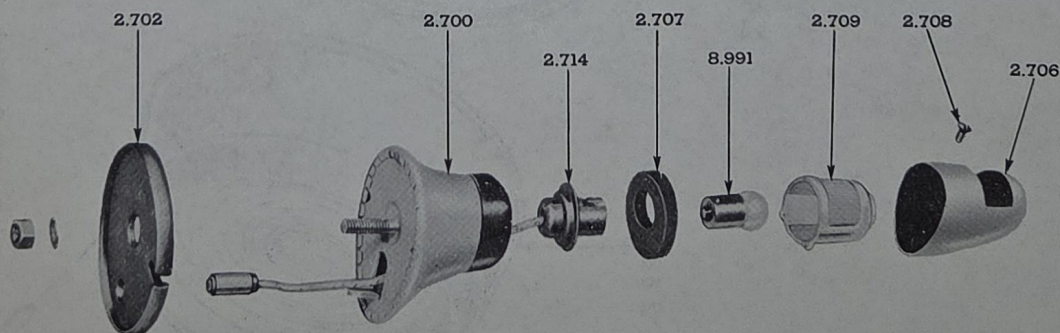**1949 REAR LICENSE LAMP**

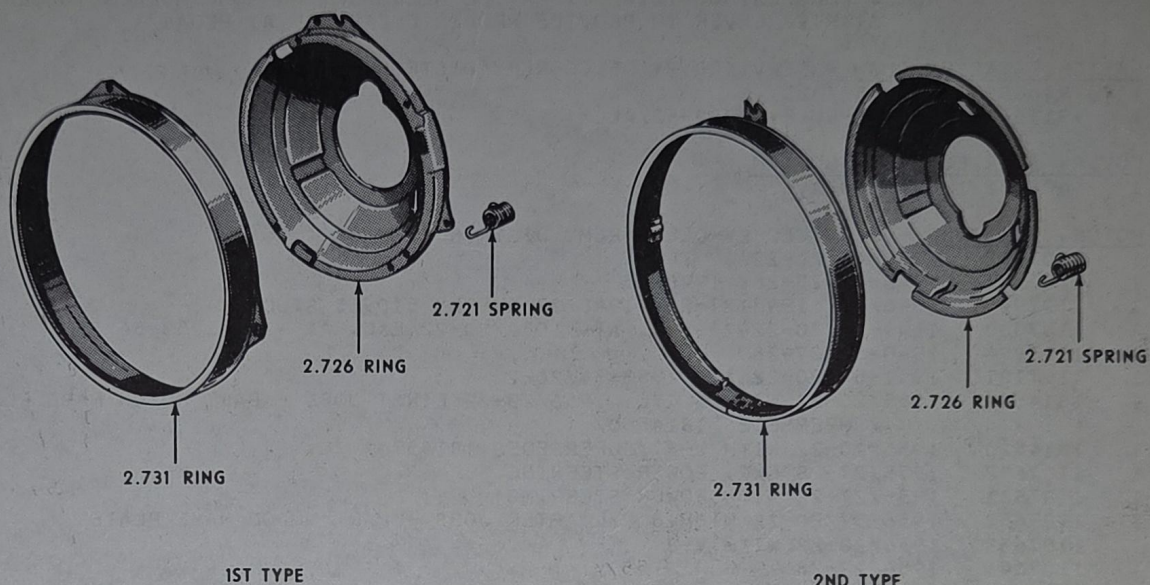1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572

1955-56 HEADLAMP RINGS

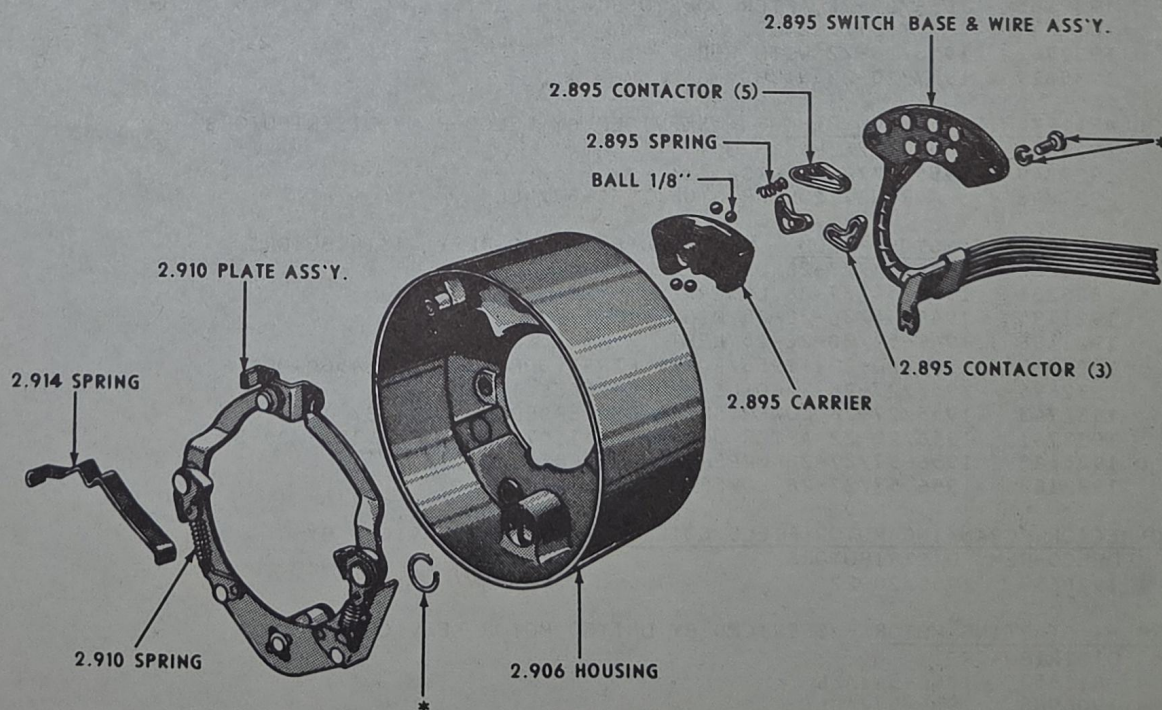

1955 DIRECTION SIGNAL



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**2.004 PEDAL, STARTER**

1 512180 1946-48/ALL SEE NOTE

NOTE. WHEN USING 512180 IT MAY BE NECESSARY ON SOME MODELS TO BEND
STARTER LEVER TO PROVIDE PROPER CLEARANCE AT PEDAL**2.004 SWITCH, STARTER PUSH - SERVICED BY DELCO-REMY DISTRIBUTORS**

1 1996053 1949-52/ALL

1 1911548 FERRULE, 1949-52/ALL

2.020 COVER, STARTER PEDAL BUTTON

1 408232 1946-48/ALL

2.041 MOTOR, STARTING - SERVICED BY DELCO REMY DISTRIBUTORS

1 1107039 1946-48/20-22

1 1107947 1946-47/25-26, 1948/25

1 1107947 1946/28, 1947/27-28, 1948/27 SUPPLY 510965 STUD

1 1107080 1949-51/20-22-25 EXC. AT, 1952/20-22 EXC. AT -25, 1953-54/25

1 1107994 1949-54/27-28

1 1107101 1951-52/20-22 AT, 1953-54/20-22

1 1814510 1955/20-22 WITH 6 CYL, 1956/20-22 FIRST JOBS - PART NO ON NAME PLATE
/SUPERSEDES 1814560/

1 1814520 1955/20-22 WITH V-8 /SUPERSEDES 1814570/

1 1107632 1955/27-28 EXC. POWER STEERING

1 1107631 1955/27-28 WITH POWER STEERING

1 1107652 1956-57/20-22 WITH 6 CYL AFTER JOBS - PART NO ON NAME PLATE

1 1107653 1956/20-22 WITH V-8

1 1107641 1956/27-28

1 1107694 1957/20-22 TG WITH V-8 /1107660/

1 1107664 1957/20-22 WITH V-8 EXC TG

1 1107661 1957/27-28

2.041 BRACE, STARTING MOTOR

1 5760976 1956-57/20-22 WITH V-8 /5757769/

2.043 ARMATURE, STARTING MOTOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1 1917855 1946-48/ALL EXC. 20-22, 1949-54/ALL

1 1926626 1955/ALL, 1956/20-22 FIRST JOBS USE WITH 1814560 MOTOR

1 1932185 1956/20-22 AFTER JOBS USE WITH 1107652 MOTOR WITH 6 CYL -27-28,
1957/ALL

1 1933762 1956/20-22 WITH V-8

1 1935829 1957/20-22 WITH V-8

2.044 COLLAR, STARTER CLUTCH PINION - SERVICED BY DELCO-REMY DISTRIBUTORS

1 1927850 1955-57/ALL, THRUST

1 1927849 1955-57/ALL, STOP

1 1927848 RING, COLLAR STOP 1955-57/ALL

2.049 COIL, STARTING MOTOR FIELD - SERVICED BY DELCO-REMY DISTRIBUTORS

1 826282 1948-54/27-28 UPPER

1 826281 1948-54/27-28 LOWER

1 1921195 1949-54/20-22-25 RIGHT

1 1921196 1949-54/20-22-25 LEFT

1 1928969 1955/20-22, 1956/20-22 FIRST JOBS WITH 1814560 MOTOR

1 1932696 1955/27-28 3 COILS /SUPERSEDES 1927213/

1 1932743 1955/27-28 LOWER SHUNT /SUPERSEDES 1926613/

1 1933761 1956/20-22 AFTER JOBS WITH 1107652 MOTOR, 1957/20-22

1 1935128 1956-57/27-28 UPPER /SUPERSEDES 1932181/

1 1932183 1956-57/27-28 LOWER

**2.050 CONNECTOR, CRANKING MOTOR FIELD COIL TO SWITCH - SERVICED BY
DELCO-REMY DISTRIBUTORS**

1 1926619 1955/20-22

**2.051 BRUSH, STARTING MOTOR - SERVICED BY UNITED MOTOR SERVICE - AC
DISTRIBUTORS**

4 811553 1946-54/ALL

4 1906945 1955-57/ALL

4 1926648 SCREW, ATTACHING 1955-57/20-22

2.052 SPRING, STARTING MOTOR BRUSH - SERVICED BY DELCO-REMY DISTRIBUTORS

4 813521 1946-54/ALL

2 1926622 1955-57/ALL



2.052 HOLDER, MOTOR BRUSH - SERVICED BY DELCO-REMY DISTRIBUTORS

4	810226	1946-54/ALL
2	1926618	1955-57/ALL, INSULATED
2	1926617	1955-57/ALL, GROUND
2	811124	WASHER, SPACE 1955/20-22 WITH V-8

2.052 SUPPORT KIT, BRUSH HOLDER - SERVICED BY DELCO-REMY DISTRIBUTORS

2	1928015	1955/20-22, 1956-57/ALL INCLUDES ATTACHING SCREW, NUTS, LOCKWASHER, AND BRUSH GROUND LEADS
---	---------	--

2.054 PIN, STARTING MOTOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	809062	1946-54/ALL COMMUTATOR END
2	812015	1946-54/ALL BRUSH HOLDER STOP W-INSULATION
2	812016	1946-54/ALL BRUSH HOLDER HINGE W-INSULATION
2	817313	1946-55/ALL BRUSH HOLDER HINGE NO INSULATION
2	817314	1946-54/ALL BRUSH HOLDER STOP
2	1926600	1955-57/27-28 BRUSH HOLDER HING W-INSULATION
1	809593	1956-57/20-22 DRIVE END

2.055 LEAD, STARTING MOTOR BRUSH - SERVICED BY DELCO-REMY DISTRIBUTORS

AR	813554	1946-54/ALL GROUND
1	819362	1946-54/ALL FIELD
2	1926605	1955-57/ALL, GROUND

2.059 WASHER, STARTING MOTOR TERMINAL STUD - SERVICED BY DELCO-REMY DISTRIBUTORS

AR	1861076	1946-54/ALL 3/8 ID X 3/4 OD FIBRE
AR	1904669	1946-54/ALL 3/8 ID X 9/16 OD FIBRE
AR	805790	1949-54/ALL STEEL

2.059 CONNECTOR, CRANKING MOTOR FIELD COIL TO SWITCH - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1926619	1955/20-22, 1956/20-22 6 CYL.
---	---------	-------------------------------

2.063 WASHER, STARTING MOTOR THRUST - SERVICED BY UNITED MOTOR SERVICE - AC DISTRIBUTORS

1	818265	1946-57/ALL, /9/16 ID X 1-5/16 OD/ COMMUTATOR END LEATHER
1	1838568	1946-48/ALL EXC. 20-22, 1949-54/ALL, 1/2 ID X 3/4 OD DRIVE END STEEL

2.067 FRAME, STARTING MOTOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1907038	1946-54/20-22-25-26 COMMUTATOR END
1	1908580	1946-54/27-28 COMMUTATOR END
1	1926606	1955-57/ALL, INCLUDES BUSHING

2.070 BAND, STARTING MOTOR COMMUTATOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	817114	1946-54/ALL
---	--------	-------------

2.077 BOLT - STUD, STARTING MOTOR TO CLUTCH HOUSING

1	838701	STUD 1955-57/20-22 WITH 6 CYL
1	838802	BOLT, HEX. HD. 1/2-13 X 1-3/16
2	3733289	BOLT, HEX HD 3/8-16 X 3-5/8 1957/20-22 TG

2.077 BOLT, STARTING MOTOR THRU - SERVICED BY DELCO-REMY DISTRIBUTORS

2	809053	1946-54/ALL /1/4-20 X 6-5/16/
2	1931654	1955-57/ALL

2.077 SCREW, STARTING MOTOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1848837	1949-54/ALL 3/8-16 X 1-1/4 TERMINAL
4	1881869	1946-54/ALL 3/8-24 X 37/64 POLE SHOE
AR	1843646	1955-57/20-22 3/8-24 X 11/16

2.079 WICK, STARTING MOTOR OIL - SERVICED BY DELCO-REMY DISTRIBUTORS

1	804076	1946-48/20-22-25-26, 1948-50/20-22-25 COMMUTATOR END
1	804076	1946-47/27-28 DRIVE END

2.083 BUSHING, STARTING MOTOR DRIVE END - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1839345	1946-48/ALL EXC. 20-22, 1949-54/ALL
1	1923907	1955-57/ALL



ING AND BUSHING, STARTING MOTOR DRIVE - SERVICED BY DELCO-REMY2.08 DISTRIBUTORS

1	1912694	1949-52/20-22 EXC. AT -25, 1953-54/25
1	1912389	1949-54/27-28
1	1919235	1951-52/20-22 AT, 1953-54/20-22
1	1928976	1955/20-22 WITH 6 CYL., 1956/20-22 WITH 6 CYL. FIRST JOBS USE WITH 1814560 MOTOR
1	1937684	1955/20-22 WITH V-8
1	1930059	1955/27-28 EXC. POWER STEERING
1	1930076	1955/27-28 WITH POWER STEERING
1	1933768	1956/20-22 WITH 6 CYL AFTER JOBS USE WITH 1107652 MOTOR, 1957/20-22 6 CYL
1	1933766	1956/20-22 WITH V-8
1	1932187	1956-57/27-28
1	1935825	1957/20-22 TG WITH V-8
1	1935846	1957/20-22 EXC TG WITH V-8

2.086 DRIVE, STARTING MOTOR - SERVICED BY UNITED MOTOR SERVICE - ACDISTRIBUTORS

1	1873789	1946-48/ALL EXC. 20-22, 1949-54/ALL
1	1931585	1955/ALL, 1956/20-22 FIRST JOBS USE WITH 1814560 MOTOR /SUPERSEDES 1927200/
1	1932188	1956/ALL AFTER JOBS USE WITH 1107652 MOTOR, 1957/20-22 WITH 6 CYL -27-28
1	1935827	1957/20-22 WITH V-8

2.100 SWITCH, STARTING MOTOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1118140	1949-54/ALL SOLENOID STARTING
1	1119798	195727-28

2.100 SOLENOID UNIT - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1119760	1955/ALL, 1956/20-22 FIRST JOBS USE WITH 1814560 MOTOR
1	1119781	1956/ALL AFTER JOBS USE WITH 1107652 MOTOR, 1957/20-22 WITH 6 CYL
1	1119919	1957/20-22 WITH V-8

2.102 BLOCK, SOLENOID WIRES JUNCTION

1	520046	1955-56/27-28
1	523591	1957/27-28
1	520195	COVER 1955/27-28
1	2961689	WIRE, STARTER TO SOLENOID 1955/27-28
1	2964181	WIRE, STARTER TO SOLENOID 1956/27-28
1	2966973	WIRE, STARTER TO SOLENOID 1957/27-28

2.102 CONNECTOR, STARTING MOTOR SOLENOID SWITCH - SERVICED BY DELCO-REMYDISTRIBUTORS

1	1912117	1949-54/20-22-25
1	1912920	1949-54/27-28
1	1912067	INSULATOR, TERMINAL 1949-54/ALL
1	1912068	CUP, SPRING SUPPORT 1949-54/ALL
1	813731	WASHER, INSULATING TERMINAL 1949-54/ALL

2.102 GROMMET, IN FIELD FRAME - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1926604	1955/20-22, 1956/20-22 FIRST JOBS USE WITH 1814560 MOTOR
1	1933765	1956/20-22 AFTER JOBS USE WITH 1107652 MOTOR, 1957/20-22

2.102 CONNECTOR, STARTING MOTOR FIELD COIL TO SWITCH - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1930075	1955/27-28
---	---------	------------

2.104 COVER, SOLENOID SWITCH - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1926966	1955/20-22, 1956/20-22 FIRST JOBS WITH 6 CYL. USE WITH 1814560 MOTOR
1	1932249	1956/20-22 AFTER JOBS USE WITH 1107652 MOTOR, 1957/20-22 6 CYL
1	1935643	1957/20-22 WITH V-8
2	1923935	WASHER, ATTACHING SCREW

2.105 GASKET, SOLENOID SWITCH COVER - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1930629	1955/20-22, 1956/20-22 WITH 6 CYL. FIRST JOBS USE WITH 1814560 MOTOR
1	1932224	1956/20-22 WITH 6 CYL AFTER JOBS USE WITH 1107652, 1957/20-22



1946-
-1957**Pontiac** **PARTS**
CATALOGUE NO. 572**2.106 SCREW, STARTING MOTOR SOLENOID SWITCH COVER - SERVICED BY DELCO-REMY DISTRIBUTORS**

1 1912522 1949-54/ALL

2.108 LEVER, STARTING MOTOR SHIFT - SERVICED BY DELCO-REMY DISTRIBUTORS

1 1911129 1949-54/20-22-25

1 1912114 1949-54/27-28

1 1927468 1955/20-22, 1956/20-22 WITH 6 CYL. FIRST JOBS USE WITH 1814560 MOTOR

1 1926642 1955/27-28 EXC. POWER STEERING

1 1930072 1955/27-28 WITH POWER STEERING

1 1932205 1956/ALL USED AFTER JOBS WITH 6 CYL USE WITH 1107652 MOTOR, 1957/ALL

1 1913685 STUD, 1946-54/ALL

1 1926645 STUD, 1955/ALL, 1956/20-22 WITH 6 CYL. FIRST JOBS USE WITH 1814560 MOTOR

1 1932197 STUD 1956/ALL AFTER JOBS WITH 6 CYL USE WITH 1107652 MOTOR, 1957/ALL

1 1845936 SPRING, RETURN 1949-54/20-22-25

1 1881861 SPRING, RETURN 1946-48/25-26-27-28, 1946-54/27-28

1 1926607 SPRING, RETURN 1955/20-22, 1956/20-22 FIRST JOBS USE WITH 1814560 MOTOR

1 1927763 SPRING, RETURN 1955/27-28

1 1932208 SPRING, RETURN 1956/ALL AFTER JOBS WITH 6 CYL USE WITH 1107652 MOTOR, 1957/ALL

1 1935828 SPRING, RETURN 1957/20-22 WITH V-8

1 1932209 SPRING, ASSIST 1956/20-22 WITH 6 CYL -27-28, 1957/ALL

1 1933767 SPRING, ASSIST 1956/20-22 WITH V-8

1 1853305 PIN, 1946-55/ALL, 1956/20-22 FIRST JOBS USE WITH 1814560 MOTOR

1 1932204 PIN 1956/ALL AFTER JOBS WITH 6 CYL USE WITH 1107652 MOTOR, 1957/ALL

1 1926640 NUT, LEVER STUD 1956-57/27-28

2.111 SUPPORT, STARTING MOTOR SHIFT LEVER RETURN SPRING - SERVICED BY DELCO-REMY DISTRIBUTORS

1 1835998 1946-54/ALL

2.113 PLUNGER AND LINK, STARTING MOTOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1 1912055 1949-54/ALL

1 1926647 1955/20-22 /SUPERSEDES 1926646/

1 1929626 1955/27-28 WITH POWER STEERING

1 1912448 BOOT 1949-55/ALL, 1956/20-22 WITH 6 CYL.

2.113 PLUNGER, SOLENOID UNIT - SERVICED BY DELCO-REMY DISTRIBUTORS

1 1926647 1955/27-28 EXC. PS, 1956/20-22 FIRST JOBS WITH 1814560 MOTOR

1 1932200 1956/ALL AFTER JOBS WITH 6 CYL USE WITH 1107652 MOTOR, 1957/ALL

2.113 LINK, SHIFT LEVER ADJUSTING - SERVICED BY DELCO-REMY DISTRIBUTORS

1 1927033 1955/ALL, 1956/20-22 WITH 6 CYL.

2.130 CONTACT, STARTING MOTOR SOLENOID SWITCH - SERVICED BY DELCO-REMY DISTRIBUTORS

1 1912059 1949-54/ALL, 1955/20-22, 1956/20-22 6 CYL. FIRST JOBS WITH 1814560 MOTOR

1 1932243 1956/20-22 AFTER JOBS WITH 6 CYL USE WITH 1107652 MOTOR, 1957/20-22

2.134 INSULATOR, SOLENOID SWITCH TERMINAL STUD WASHER - SERVICED BY DELCO-REMY DISTRIBUTORS

2 1926969 1955-57/20-22 /#8-32/

1 1926968 1955-56/20-22 /5/16-18/

1 1927345 1955-57/20-22 /3-8-16/

2.138 SPRING, STARTING MOTOR SOLENOID SWITCH CONTACT RETURN - SERVICED BY DELCO-REMY DISTRIBUTORS

1 1853342 1949-54/ALL, 1955-57/20-22

2.145 STUD, STARTING MOTOR SOLENOID SWITCH TERMINAL - SERVICED BY DELCO-REMY DISTRIBUTORS

1 1917115 1949-54/ALL /8-32 X 15/16/ /SUPERSEDES 1868924/

1 1912066 1949-54/ALL /3/8-16 X 31/32/

1 1837533 1955/20-22 /8-32 X 23/32/ /SUPERSEDES 1927346/

1 1926959 1955/20-22 /8-32 X 35/64/



1946-
-1957

Pontiac

PARTS
CATALOGUE NO. 572

- 1 1926967 1955/20-22 /5/16-18/
1 1927344 1955-57/20-22 /3/8-16 X 1-3/16/
1 1932242 1956/20-22 WITH 6 CYL, 1957/20-22 3/8-16
1 1935644 1957/20-22 WITH V-8
- 2.145 CONTACT, SOLENOID SWITCH TERMINAL - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1935645 1955-57/20-22, 1957/20-22 WITH V-8 /#8-32/ /SUPERSEDES 1923932/
- 2.170 COIL, IGNITION - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1911441 1946-47/ALL
1 1115380 1948-54/ALL
1 1115087 1955/ALL, 1956-57/20-22 ALL -27-28 EXC DUAL 4 BC OR TRIPLE CARBS
1 1115099 1956-57/27-28 WITH EXTRA HP ENGINE
1 1845804 WASHER, IGNITION WIRE TO COIL 1946-47/ALL
1 5290441 NIPPLE 1948-57/ALL
- 2.171 WIRE, COIL TO DISTRIBUTOR
1 5299921 1955-57/20-22 WITH 6 CYL. LOW TENSION
- 2.173 SPACER, IGNITION COIL RESISTOR TO DASH
1 520294 1955-57/27-28
- 2.173 RESISTANCE UNIT, IGNITION COIL - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1931614 1955/ALL, 1956/20-22 ALL -27-28 EXC DUAL 4 BC, 1957/ALL
1 1931385 1956/27-28 WITH DUAL 4 BC, 1957/27-28 WITH TRIPLE CARB
1 3651216 SCREW, HEX. HD. #14-10 X 1
- 2.174 SLEEVE, COIL WIRE TO MANIFOLD
4 496465 1946-48/27-28 RUBBER
- 2.175 RETAINER - SUPPORT, COIL TO DISTRIBUTOR WIRE
AR 494104 1946-48/ALL, 1955-57/27-28
2 497561 SUPPORT 1946-48/20-22-25-26 EXC. HT
1 497561 SUPPORT 1948/25 HT
- 2.176 NIPPLE, IGNITION WIRE
AR 5289527 1946-47/ALL, 1948/ALL FIRST JOBS WITH SMALL DISTRIBUTOR CAP TOWERS, 1950-51/ALL 7MM-1 IN. HIGH TO DISTRIBUTOR CAP
AR 1885405 1948/20-22-25 ON AND AFTER ENGINE W75359 -27 ON AND AFTER ENGINE P2855, 1949/ALL 1-7/16 HIGH
- 2.183 BRACKET, IGNITION COIL MOUNTING
1 512170 1949-54/20-22-25
- 2.183 BRACKET, IGNITION COIL MOUNTING - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1909326 1955-57/20-22 WITH 6 CYL
1 1929496 1955-57/20-22 WITH V-8
- 2.183 BRACKET, IGNITION COIL SUPPORT
1 528723 1957/27-28 WITH TRIPLE CARB
1 1885531 SCREW, COIL MOUNTING BRACKET 1957/20-22 - SERVICED BY DELCO-REMY DISTRIBUTORS
- 2.188 CYLINDER, IGNITION LOCK
1 5794264 1946-57/ALL 2 KEYS - CODED TO ANY COMBINATION
1 5794263 1946-57/ALL LESS KEYS CODED TO SPECIAL COMBINATION - SPECIFY KEY NO
1 1458180 1946-57/ALL LESS KEYS, TUMBLERS, SPRINGS AND RETAINERS
- 2.188 SWITCH, IGNITION - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1116255 1946-47/ALL
1 1116455 1948/ALL
1 1116464 1949-52/ALL
1 1116472 1953-56/ALL ALSO STARTER
1 1116533 1957/ALL
AR 3650059 SCREW, HEX. HD. 14-10 X 3/4
- 2.189 BRACKET, IGNITION SWITCH
1 5801863 1946-48/20-22
1 512165 1949-52/ALL
2 507261 SCREW, IGNITION SWITCH AND CIGAR LIGHTER BRACKET 1946-48/ALL



1946-
-1957**Pontiac** **PARTS**
CATALOGUE NO. 572**2.189 HOUSING, IGNITION LOCK AND LAMP SUPPORT**

1	519568	1955-56/ALL
1	529055	1957/ALL /523458/

2.192 FERRULE, IGNITION SWITCH LOCK

1	507109	1946-48/ALL
1	515703	1949-52/ALL /SUPERSEDES 512499/
1	1923766	1953-54/ALL
1	1929497	1955/ALL WITH INSERT
1	1933205	1956-57/ALL WITH INSERT
1	1938604	1957/ALL

2.192 INSERT, IGNITION AND STARTER SWITCH

1	515377	1953-54/ALL
---	--------	-------------

2.239 WIRE SET, SPARK PLUG

1	5786865	1946-47/27-28-29, 1948/27 FIRST JOBS WITH SMALL DISTRIBUTOR CAP TOWERS, 1950-52/27 INCLUDES 8 SPARK PLUG WIRES, COIL WIRE, 10 CLIPS AND 11 NIPPLES /SUPERSEDES 5261886/
1	5786536	1946-47/20-22-25-26, 1948/20-22-25 FIRST JOBS WITH SMALL DISTRIBUTOR CAP TOWERS, 1950-52/20-22-25 INCLUDES 6 SPARK PLUG WIRES, COIL WIRE, 8 CLIPS AND 9 NIPPLES /SUPERSEDES 5261883/
1	5291014	1948/20-22-25 ON AND AFTER ENGINE W75359 WITH LARGE DISTRIBUTOR CAP TOWERS, 1949/20-22-25 /SUPERSEDES 5263157/
1	5263158	1948/27 ON AND AFTER ENGINE P2854 WITH LARGE DISTRIBUTOR CAP TOWERS, 1949/27
1	5794643	1953-54/20-22-25
1	5794644	1953-54/27-28
1	5794660	1955-57/20-22 WITH 6 CYL
1	5799174	1955-56/20-22 WITH V-8
1	5799053	1955/27-28, 1957/27-28 EXC TRIPLE CARB
1	2971613	1956/27-28 /SUPERSEDES 2964685/
1	2968242	1956/27-28 WITH DUAL 4 BC CARB, 1957/27-28 WITH TRIPLE CARB
1	5786872	1957/20-22 WITH V-8 /SUPERSEDES 5784229/

2.251 CLAMP, SPARK PLUG WIRE RETAINER

2	517746	1954/27-28 HALF
1	497560	BRACKET, 1946-48/20-22-25-26

2.251 MANIFOLD, SPARK PLUG WIRE

1	498988	1946-47/27-28, 1948/27 FIRST JOBS 23 IN. LONG
1	511173	1948/27 AFTER JOBS 19 IN. LONG
1	512172	1949-53/27

2.251 COVER, SPARK PLUG WIRE MANIFOLD

1	496462	1946-47/27-28, 1948/27 FIRST JOBS 23 IN. LONG
1	511171	1948/27 AFTER JOBS 19 IN. LONG
1	511172	1949-54/27-28

2.251 SUPPORT, SPARK PLUG WIRE

1	517747	1954/27-28
2	3707947	1955-56/20-22 WITH V-8 FRONT SIDE
2	3707950	1955-56/20-22 WITH V-8 REAR SIDE
1	5756144	1955-57/20-22 WITH V-8 REAR UPPER RIGHT
1	3744403	1955-56/20-22 WITH V-8 REAR UPPER LEFT /SUPERSEDES 5756145/
AR	3744405	1955-57/20-22 WITH V-8 REAR LOWER /SUPERSEDES 3719962/
2	3737834	1957/20-22 WITH V-8
1	3744413	1957/20-22 WITH V-8 REAR UPPER - LEFT /SUPERSEDES 3742561/
1	518875	BRACE, 1954/27-28

2.251 BRACKET, SPARK PLUG WIRES

1	512169	1949-54/20-22-25
2	518212	1955/27-28
2	521526	1956-57/27-28 EXC TRIPLE CARB AND DUAL 4 BC
1	522915	1956/27-28 WITH DUAL 4 BC
1	524624	1957/27-28 WITH EXTRA HP ENGINE
1	521526	1957/27-28 WITH TRIPLE CARB - LEFT
2	3659780	SCREW, HEX. HD. #14-10 X 1/2



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**2.251 GROMMET, SPARK PLUG WIRE**

2	3707952	1955-57/20-22 WITH V-8 FRONT SIDE
6	3707952	1955-57/20-22 WITH V-8 REAR SIDE
2	3719963	1955-57/20-22 WITH V-8 REAR UPPER
2	3719963	1955-57/20-22 WITH V-8 REAR LOWER
2	518217	1955/27-28

2.251 SHIELD, SPARK PLUG

2	3736303	1957/20-22 WITH V-8 - LH REAR RH FRONT
2	3736304	1957/20-22 WITH V-8 RH REAR LH FRONT

2.258 FERRULE, IGNITION WIRE INSULATING

AR	5289527	1952-57/ALL
----	---------	-------------

2.258 BOOT, SPARK PLUG

6	5297132	1955/20-22 WITH 6 CYL.
AR	2962575	1955/20-22 WITH V-8
AR	2962674	1956-57/20-22 WITH 6 CYL
AR	2962678	1956/20-22 WITH V-8

2.258 NIPPLE, SPARK PLUG TERMINAL INSULATING

AR	510269	1946-51/ALL SERVICE ONLY
AR	515604	1952-54/ALL
AR	5297901	1955/27-28
8	2962673	1956-57/27-28
8	2962992	1957/20-22 WITH V-8

2.270 PLUG, SPARK - SERVICED BY AC SPARK PLUG DISTRIBUTORS

AR	1559493	1946-51/ALL, 1957/27-28 EXC EXTRA HP ENGINE TYPE 45
AR	1559492	1952-55/ALL TYPE AC 44 /SUPERSEDES 5569761/
AR	1559492	1956-57/20-22 WITH 6 CYL -27-28 WIT BC, 1957/20-22 - TYPE AC44
8	5612002	1956/20-22 WITH V-8 AND 4 BC TYPE C-43
8	1559494	1956/27-28 EXC DUAL 4 BC TYPE 46
8	5569857	1957/27-28 USE WHEN CAR IS OPERATED AT CONSISTENTLY HIGH SPEEDS - TYPE 43

2.271 GASKET, SPARK PLUG - SERVICED BY AC SPARK PLUG DISTRIBUTORS

AR	1555475	1946-57/ALL 14 MM
----	---------	-------------------

2.274 PULLEY, GENERATOR

1	3710286	1955-56/20-22 EXC PS, 1957/20-22 EXC PS - EXC TG
1	1929764	1955-56/27-28 WITH CAR COOLING - SERVICED BY UMS-AC DISTRIBUTORS
1	1936435	1956/27-28 WITH DUAL 4 BC, 1957/27-28 WITH TRIPLE CARBS
1	3711766	1957/20-22 FIRST JOBS WITH TG EXC PS - PULLEY DIA 3.700 IN
1	3710286	1957/20-22 AFTER JOBS WITH TG PULLEY DIA 3 IN
1	1938564	1957/27-28 WITH CAR COOLING 3-1/2 IN DIAMETER

2.274 PULLEY AND FAN, GENERATOR

1	3712554	1955-57/20-22 WITH PS
---	---------	-----------------------

2.274 PULLEY AND FAN, GENERATOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1885475	1946-51/ALL, 1952/ALL FIRST JOBS 3-1/2 IN. DIA.
1	1923266	1952/ALL AFTER JOBS 3 IN. DIA.
1	1925294	1953-54/ALL
1	1921939	1955/27-28 EXC CAR COOLING, 1956/27-28 WITH 25 AMP GEN EXC DUAL 4 BC /SUPERSEDES 1924689/
1	1925586	1956/27-28 WITH 35 AMP GEN EXC. CAR COOLING, 1957/27-28
1	1935804	1955-57/27-28 WITH CAR COOLING - 2-7/8 DIA

2.274 FAN, GENERATOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1866400	1946-47/ALL
1	1922950	1955/27-28 WITH CAR COOLING, 1956/27-28 WITH DUAL 4 BC, 1957/27-28 WITH TRIPLE CARBS

2.275 GENERATOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1102810	1946-50/ALL LESS PULLEY /SUPERSEDES 1102737/
1	1102811	1951/ALL LESS PULLEY /SUPERSEDES 1102717/
1	1102785	1952/ALL WITH PULLEY /SUPERSEDES 1813400/
1	1813663	1953-54/ALL CAN. WITH PULLEY
1	1102811	1953-54/25-27-28 US LESS PULLEY /SUPERSEDES 1102797/



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572

1	1102005	1955/20-22 EXC PS, 1956-57/20-22 WITH 6 CYL EXC PS
1	1102020	1955/20-22 WITH POWER STEERING
1	1100313	1955-57/27-28 EXC CAR COOLING AND HD GENERATOR 25 AMP LESS PULLEY PULLEY
1	1102055	1955/27-28 WITH HEAVY DUTY GENERATOR EXC CAR COOLING LESS PULLEY 30 AMPS /SUPERSEDES 1102012/
1	1102050	1955/27-28 WITH CAR COOLING LESS PULLEY 35 AMPS /SUPERSEDES 1102039/
1	1102042	1956-57/20-22 WITH V-8 EXC. PS
1	1102041	1956-57/20-22 WITH PS
1	1102055	1956-57/27-28 WITH HD GEN - LESS PULLEY - 35 AMP
1	1102078	1957/27-28 WITH HD GEN - LESS PULLEY - 40 AMP

2.277 BRACKET, GENERATOR MOUNTING

1	505573	1946-54/ALL
1	3720924	1955/20-22, 1956-57/20-22 WITH 6 CYL. EXC. PS
1	518073	1955-56/27-28 EXC CAR COOLING EXC DUAL 4 BC
1	522520	1956/27-28 WITH CAR COOLING
1	3725671	1956-57/20-22 WITH V-8 EXC. PS
1	3725274	1956-57/20-22 WITH PS
1	522851	1956/27-28 WITH DUAL 4 BC
1	523817	1957/27-28 EXC TRIPLE CARB
1	524853	1957/27-28 WITH TRIPLE CARB
1	528886	1957/27-28 WITH EXTRA HP ENGINE
1	518847	SPACER, 1955-56/27-28 WITH HD GEN EXC. CAR COOLING, 1957/27-28 WITH HD GEN.
2	517011	NUT 1955-57/27-28 EXC CAR COOLING
2	3718205	BOLT 1955-57/20-22 WITH 6 CYL.
1	3718205	BOLT 1955-57/20-22 WITH V-8 EXC. PS
AR	3713742	WASHER 1956-57/20-22 GENERATOR TO BRACKET
1	346173	PIN, 1955/20-22 WITH V-8 AND POWER STEERING
AR	838819	WASHER, MEDIUM LOCK 3/8

2.277 SPRING, GENERATOR BRACKET

2	3720923	1955/20-22 WITH V-8 AND POWER STEERING
---	---------	--

2.277 PIN UNIT, GENERATOR BRACKET

1	3721042	1955/20-22 AT WITH V-8
---	---------	------------------------

2.277 BUSHING, GENERATOR BRACKET

1	3726025	1956-57/20-22 WITH V-8 EXC. PS
2	3726026	1956-57/20-22 WITH PS
1	3726027	SHIELD, HEAT 1956/20-22 WITH V-8 AND POWER STEERING
1	3736569	SHIELD 1957/20-22 WITH V-8 AND PS

2.277 SLEEVE, GENERATOR BRACKET BUSHING

1	3725275	1956-57/20-22 WITH V-8 EXC. PS
2	3725275	1956/20-22 WITH POWER STEERING

2.279 ARMATURE, GENERATOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1879002	1946-51/ALL
1	1912599	1952/ALL WITH 3-1/2 PULLEY, 1953-54/ALL
1	1923535	1955/20-22 EXC PS -27-28 WITH 30 AMP GEN EXC PS, 1956-57/20-22 EXC PS
1	1929640	1955-57/20-22 WITH PS
1	1928952	1955-57/27-28 WITH 25 AMP GEN
1	1932900	1955-57/27-28 WITH 35 AMP GEN
1	1935778	1957/27-28 WITH 40 AMP GEN

2.280 NUT, GENERATOR ARMATURE SHAFT - SERVICED BY DELCO-REMY DISTRIBUTORS

1	806915	1946-57/ALL
---	--------	-------------

2.280 WASHER, GENERATOR ARMATURE SHAFT LOCK - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1888439	1946-57/ALL /SUPERSEDES 804000/
---	---------	---------------------------------

2.285 BRUSH, GENERATOR - SERVICED BY DELCO-REMY DISTRIBUTORS

2	1878249	1946-54/ALL
2	1906931	1954/25-27 US -28, 1955/27-28 WITH 35 AMP GENERATORS
2	1932506	1955-57/20-22
2	1923295	1955/27-28 EXC. HEAVY DUTY GEN, 1956-57/27-28
AR	1904377	WASHER, 1946-54/ALL, 1955-57/20-22 - .143 ID X .330 OD



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**2.285 BRUSH HOLDER PACKAGE, GENERATOR - SERVICED BY DELCO-REMY DISTRIBUTORS**

1	1922288	1955-57/20-22 GROUND
1	1922289	1955-57/20-22 INSULATED

2.286 SPRING, GENERATOR BRUSH - SERVICED BY DELCO-REMY DISTRIBUTORS

2	1878184	1946-54/ALL, 1955/27-28 WITH 35 AMP GENERATORS
2	1908829	1955/20-22 ALL -27-28 EXC HD GEN, 1956-57/ALL

2.291 ARM, GENERATOR BRUSH - SERVICED BY DELCO-REMY DISTRIBUTORS

2	1878183	1946-57/ALL
AR	811124	WASHER, SPACER 1946-54/ALL, 1955-57/20-22.

2.297 FRAME, GENERATOR COMMUTATOR END - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1913990	1946-52/ALL, 1953-54/ALL CAN. - WITH BUSHING
1	1933933	1953-54/25-27 US -28 EXC HD GEN, 1956-57/ALL 6 CYL EXC PS
1	1933933	1955/20-22 EXC POWER STEERING, 1956/20-22 WITH 6 CYL EXC POWER STEERING /SUPERSEDES 1933934/
1	1929513	1955/20-22 WITH POWER STEERING
1	1927596	1955/27-28 WITH 25 AND 30 AMP GEN EXC CAR COOLING, 1956/27-28 WITH 25 AMP GEN - INCLUDES BUSHING
1	1930826	1955/27-28 WITH 35 AMP. GENERATOR AND CAR COOLING - INCLUDES BRUSH HOLDER
1	1933113	1956/20-22 WITH V-8 EXC POWER STEERING /SUPERSEDES 1933107/
1	1934131	1956-57/20-22 WITH PS
1	1934298	1956/27-28 WITH 35 AMP GEN, 1957/27-28
1	1933113	1957/20-22 WITH V-8 EXC PS
1	1938787	1957/ALL WITH BUSHINGS

2.298 BUSHING, GENERATOR COMMUTATOR END FRAME - SERVICED BY DELCO-REMY DISTRIBUTORS

1	812823	1946-54/ALL
1	904751	1955-57/20-22 WITH PS /954736/

2.299 BAND, GENERATOR COMMUTATOR COVER - SERVICED BY DELCO-REMY DISTRIBUTORS

1	816340	1946-54/ALL 14 3/4 IN. LONG
---	--------	-----------------------------

2.301 WICK, GENERATOR COMMUTATOR END OIL - SERVICED BY DELCO-REMY DISTRIBUTORS

1	804076	1946-50/ALL, 1952-54/ALL
---	--------	--------------------------

2.302 PIN, GENERATOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	809062	1946-54/ALL, 1955-57/20-22 COMMUTATOR END
1	809593	1946-54/ALL, 1956-57/20-22 DRIVE END

2.305 FRAME, GENERATOR DRIVE END - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1910404	1946-52/ALL, 1955/20-22, 1956-57/20-22 WITH 6 CYL EXC PS
1	1925295	1953-54/ALL
1	1927598	1955/27-28 WITH 25 AND 30 AMP GEN, 1956/27-28 WITH 25 AMP GEN
1	1930823	1955/27-28 WITH 35 AMP GENERATORS
1	1933109	1956-57/20-22 WITH 6 CYL AND PS
1	1933109	1956/20-22 WITH V-8
1	1934300	1956/27-28 WITH 35 AMP GEN, 1957/27-28

2.306 BEARING, GENERATOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	954378	1946-57/ALL NEW DEPARTURE 3203S1446
---	--------	-------------------------------------

2.307 COLLAR-GASKET-RETAINER-PLATE-WASHER GENERATOR DRIVE END - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1858603	COLLAR, SPACER 1946-57/ALL
1	1912008	GASKET, BEARING RETAINER PLATE 1946-57/ALL
1	819104	RETAINER, FELT WASHER 1946-57/ALL
1	1929959	RETAINER, BEARING 1955-56/20-22 WITH POWER STEERING
1	1911263	PLATE, BEARING RETAINER 1946-57/ALL
5	1880781	WASHER, LOCK BEARING RETAINER PLATE 1955-57/20-22
1	809945	WASHER, BEARING SPACER 1946-57/ALL - 15/16 OD
1	809961	WASHER, BEARING FELT 1946-57/ALL - 1-5/16 OD



1946-
-1957

Pontiac

PARTS
CATALOGUE NO. 572

- 2.307 SCREW, GENERATOR BALL BEARING RETAINER PLATE - SERVICED BY DELCO-REMY DISTRIBUTORS
AR 1904370 1946-51/ALL, 1952/ALL WITH GENERATOR STAMPED 1102769, 1956-57/ALL
- 2.307 RING, GENERATOR BEARING RETAINER - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1929959 1955-57/20-22 WITH PS
- 2.307 OILER, GENERATOR DRIVE END - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1880641 1955/27-28 WITH 35 AMP GENERATORS
- 2.310 COIL, GENERATOR FIELD - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1902111 1946-51/ALL
1 1912711 1952-54/ALL
1 1922701 1955/20-22 ALL -27-28 WITH 1102012 GENERATOR, 1956-57/20-22
1 1927700 1955-57/27-28 WITH 25 AMP GEN UNIT
1 1931686 1955-56/27-28 WITH 35 AMP GENERATORS KIT INCLUDES RIGHT AND LEFT COILS
1 1936388 1956/27-28 WITH GENERATOR 1102073
1 1936388 1957/27-28 WITH 35 AMP GENERATOR
1 1935779 1957/27-28 WITH 40 AMP GENERATOR
- 2.311 SCREW, GENERATOR - SERVICED BY DELCO-REMY DISTRIBUTORS
2 1843646 1946-54/ALL, 1955-57/20-22 3/8-24 X 11/16 POLE SHOE
- 2.313 STUD, GENERATOR TERMINAL - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1858749 1946-54/ALL
1 1921860 1951-54/ALL US, 1955-57/ALL
2 1885090 INSULATOR, STUD 1955-57/20-22
AR 1858753 WASHER, TERMINAL INSULATION 1946-54/ALL, 1955-57/20-22 OUTSIDE
AR 834560 WASHER, TERMINAL PLAIN 1952-57/ALL - OUTSIDE
- 2.313 BUSHING, GENERATOR ARM TERMINAL - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1921362 1951-54/ALL US, 1955-57/ALL
1 1921369 STUD, ARM TERMINAL 1951-54/ALL US, 1955-57/ALL
- 2.316 BOLT, GENERATOR THRU - SERVICED BY DELCO-REMY DISTRIBUTORS
2 809763 1946-54/ALL, 1955/20-22 EXC PS -27-28 WITH 25 AND 30 AMP GEN, 1956-57/20-22 EXC PS -27-28 - 5/16-18 X 7-7/8
2 818800 1955-57/20-22 WITH PS
2 1845053 1955/27-28 WITH 35 AMP GENERATORS
- 2.317 STRAP, GENERATOR ADJUSTING
1 516634 1949-54/ALL /SUPERSEDES 511405/
1 3836330 1955-57/20-22 WITH 6 CYL. EXC. PS - EXC. 30 AMP GEN
1 3720581 1955-57/20-22 WITH 6 CYL. AND PS
1 3760364 1955-57/20-22 WITH V-8 /SUPERSEDES 3704884/
1 518072 1955-56/27-28 EXC CAR COOLING EXC DUAL 4 BC, 1957/27-28 EXC TRIPLE CARB EXC CAR COOLING
1 519056 1955/27-28 WITH CAR COOLING
1 522521 1956/27-28 WITH CAR COOLING
1 522864 1956/27-28 WITH DUAL 4 BC, 1957/27-28 WITH TRIPLE CARB EXC CAR COOLING
1 528719 1957/27-28 WITH CAR COOLING AND TRIPLE CARB
1 529529 1957/27-28 WITH TRIPLE CARB EXC CAR COOLING
1 499778 SPACER, 1946-54/ALL
1 518266 WASHER 1955-56/20-22 ALL -27-28, 1957/ALL EXC CAR COOLING
ADJUSTING STRAP TO SCREW
1 520785 WASHER, 1955/27-28 WITH CAR COOLING ADJUSTING STRAP TO BRACKET
- 2.317 BRACE, GENERATOR REAR
1 3717412 1955/20-22 WITH V-8 AND POWER STEERING
- 2.331 BOLT, BATTERY CLAMP
2 3688699 1949-53/20-22, 1954/20-22 EXC. WITH 23 OR 19 PLATE BATTERY, 1955-56/20-22
- 2.332 BATTERIES

NOTE, FOR BATTERIES SEE SEPARATE MERCHANDISING DATA SHEET ISSUED BY GENERAL MOTORS PRODUCTS OF CANADA LIMITED



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**2.333 HANGER - SUPPORT, BATTERY**

1	501214	SUPPORT, 1946-48/ALL, 1949-54/25-27-28
1	5836155	SUPPORT, 1949-52/20-22
1	5840802	SUPPORT, 1953-54/20-22 EXC. 23 PLATE BATTERY
1	3723041	SUPPORT, 1955-56/20-22
1	518907	SUPPORT 1955-57/27-28 WITH STD. BATTERY
1	519824	SUPPORT 1955-57/27-28 WITH HD BATTERY
1	3731656	SUPPORT 1957/20-22
4	760689	SPACER 1955-56/20-22
4	522205	SPACER 1955-57/27-28
AR	365685	WASHER, BATTERY SUPPORT TO FRAME 1946-48/25-26-27-28-29
AR	1332176	WASHER, SUPPORT TO BRACKET 1955/27-28 .030 THICK
AR	1175050	WASHER, SUPPORT TO BRACKET 1955/27-28 .060 THICK /SUPERSEDES 1332177/

2.333 BRACKET, BATTERY SUPPORT

1	505415	1946-48/25-27 REAR
1	505416	1946-47/26-28 REAR
1	511862	1949-52/25-27 FRONT
1	511863	1949-52/25-27 REAR
1	515405	1953-54/25-27-28 FRONT
1	515406	1953-54/25-27-28 REAR
2	518906	1955-56/27-28 - TO FENDER SKIRT
2	523608	1957/27-28 - TO FENDER SKIRT

2.333 BRACE, BATTERY SUPPORT

1	3688557	1949-52/20-22
2	511864	1949-52/25-27 TO FENDER SKIRT
1	3697972	1953-54/20-22
2	515382	1953-54/25-27-28 TO FENDER SKIRT
2	520055	1955-56/27-28 TO FENDER SKIRT
2	523607	1957/27-28 TO FENDER SKIRT
2	520054	NUT, 1955-57/27-28 BRACE TO FENDER SKIRT ANGLE

2.334 RETAINER, BATTERY

AR	5836748	1949-53/20-22, 1954/20-22 EXC. 23 PLATE BATTERY
1	5838935	1954/20-22 WITH 23 PLATE BATTERY
1	3710825	1955-56/20-22 ALL -27-28 WITH STD BATTERY, 1957/27-28 WITH STD. BATTERY
1	519590	1955-57/27-28 WITH HEAVY DUTY BATTERY
1	533308	1957/20-22
2	508676	BOLT, 1946-54/ALL US, 1955-57/27-28 5/16-18 X 8-3/4
2	3695813	BOLT, 1954/20-22 WITH 23 OR 19 PLATE BATTERY
2	5761925	BOLT 1957/20-22
2	1774001	NUT, SPECIAL BATTERY CLAMP BOLT
2	508677	NUT, BATTERY RETAINER 1955-57/27-28
2	1309693	GROMMET, RUBBER 1946-48/20-22-25-27

2.335 STRAP ASSEMBLY, BATTERY HANGER

1	5839855	1946-48/ALL, 1949-53/25-27
---	---------	----------------------------

2.335 COVER, BATTERY

1	5846755	1954/25-27-28
1	417422	1954/25-27-28 FILLER HOLE
1	554834	CLIP

2.337 BUMPER, FRONT FENDER SKIRT BATTERY

1	508931	1946-48/25-26-27-28 LEFT SIDE
2	506351	1949-54/25-27-28 RUBBER - LEFT SIDE

2.341 CABLE, BATTERY GROUND

1	5796880	1946-52/ALL, 1953-54/25-27-28 /16-1/2/ /1878280/
1	5796845	1953-54/20-22, 17-3/4 /SUPERSEDES 5272443/
1	5798078	1955-56/20-22
1	5799268	1955-57/27-28
1	5783486	1957/20-22 WITH 6 CYL
1	3787695	1957/8 CYL /SUPERSEDES 5783573/
1	3659780	SCREW, HEX. HD. 14-10 X 1/2



2.342 CABLE, BATTERY TO STARTER SWITCH

1	1304763	1946-48/20-22 14 IN.
1	5796845	1946-48/25-26-27-28 /17-3/4/
1	5796848	1949-52/20-22, 29-1/2 /SUPERSEDES 1783156/
1	5796847	1949-50/25-27, 27-1/2 /SUPERSEDES 1843759/
1	5796846	1951-54/25-27-28 23-1/2 IN
1	5796850	1953-54/20-22, 35 IN /SUPERSEDES 227925/
1	5798073	1955/20-22 WITH 6 CYL.
1	5798074	1955-56/20-22 WITH V-8
1	2961755	1955/27-28 46 1/2 IN.
1	5787695	1956/20-22 WITH 6 CYL 22 IN /SUPERSEDES 5780364/
1	2964182	1956-57/27-28
1	2969233	1957/20-22 WITH 6 CYL /SUPERSEDES 2966846/
1	2968203	1957/20-22 WITH V-8
1	520206	CLIP 1955/27-28 - TO STARTING MOTOR

2.343 NUT, BATTERY TERMINAL

AR	2965636	1946-57/ALL /SUPERSEDES 341415/
----	---------	---------------------------------

2.343 COVER, BATTERY POSITIVE TERMINAL

1	5270405	1946-48/ALL, 1949/ALL FIRST JOBS, 1950-51/25-27 RUBBER
---	---------	--

2.343 BRACKET, BATTERY GROUND STRAP

1	520196	1955-57/27-28
---	--------	---------------

2.348 STRAP, ENGINE GROUND

1	5796887	1955-56/20-22
---	---------	---------------

2.360 REPAIR KIT, DISTRIBUTOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1913502	1946-48/20-22-25-26
1	1913500	1946-48/27-28
1	1912609	1949-54/20-22-25
1	1917253	1949-53/27-28
1	1925369	1955-56/ALL

2.361 DISTRIBUTOR, IGNITION - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1912884	1946-52/20-22-25-26
1	1912885	1946-54/27-28
1	1925988	1953/20-22-25 EXC. AT AND HT
1	1925987	1953/20-22-25 AT AND HT
1	1928821	1954/20-22-25 EXC. AT AND HT
1	1928820	1954/20-22-25 AT AND HT
1	1112403	1955-57/20-22 WITH 6 CYL
1	1110847	1955-56/20-22 V-8 EXC. 4 BARREL CARB. ON 1956
1	1930531	1955/27-28
1	1110878	1956/20-22 WITH V-8 AND 4 BC
1	1934591	1956/27-28 EXC DUAL 4 BC
1	1110875	1956/27-28 HT WITH DUAL 4 BC
1	1110888	1956/27-28 WITH DUAL 4 BC
1	1110874	1957/20-22 WITH V-8 EXC 4 BC
1	1110890	1957/20-22 WITH V-8 WITH 4 BC
1	1938591	1957/27-28

2.362 HOUSING, DISTRIBUTOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1866161	1946-48/20-22-25-26
1	1878878	1946-48/27-28
1	1912602	1949-53/20-22-25
1	1912670	1949-54/27-28
1	1927351	1954/20-22-25
1	1927384	1955/27-28, 1956/27-28 EXC DUAL 4 BC
1	1935926	1956/27-28 WITH DUAL 4 BC
1	1935669	1957/27-28

2.363 GASKET, DISTRIBUTOR TO CYLINDER BLOCK

1	495206	1946-54/ALL
1	3836247	1955-57/20-22 WITH V-8
1	516149	1955-57/27-28 TO BLOCK



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572

- 2.363 BUSHING, DISTRIBUTOR HOUSING - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1874335 1946-48/27-28, 1949-54/ALL
 1 1927386 1955-56/27-28 LOWER
- 2.363 BUSHING, DISTRIBUTOR SHAFT - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1923250 1955-56/20-22 WITH V-8 -27-28 UPPER
- 2.364 WICK, DISTRIBUTOR SHAFT OIL - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 816803 1946-48/20-22-25-26
 1 819639 1946-47/27-28, 1948-49/27, 1950-54/ALL, 1955-56/20-22 WITH V-8 -27-28
 1 805579 CUP, GREASE 1946-54/ALL, 1955-57/20-22 WITH 6 CYL
 1 1931982 TUBE 1957/ALL - V-8 - INCLUDES OILER AND WICK
 1 1935621 RETAINER 1957/20-22 WITH V-8
- 2.364 WICK, DISTRIBUTOR OILER - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1923263 1955-56/20-22 WITH V-8
 1 1931748 1957/20-22 WITH V-8
- 2.364 OILER, DISTRIBUTOR HOUSING - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1927396 1955-56/20-22 WITH V-8 -27-28
- 2.367 CAP, DISTRIBUTOR - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 824735 1946-47/20-22-25-26, 1948/20-22-25 WITH SMALL CAP TOWERS, 1950-53/20-22-25
 1 1837974 1946-47/27-28, 1948/27 WITH SMALL CAP TOWERS, 1950-54/27-28
 1 1911597 1948/20-22-25 WITH LARGE CAP TOWERS, 1949/20-22-25
 1 1911566 1948/27 WITH LARGE CAP TOWERS, 1949
 1 1924248 1954/20-22-25, 1955-57/20-22 WITH 6 CYL
 1 1917247 1955-56/20-22 WITH V-8 -27-28, 1957/27-28 WITH TRIPLE CARBS
 1 1932018 1957/ALL V-8
- 2.368 SPRING, DISTRIBUTOR CAP RETAINER - SERVICED BY DELCO-REMY DISTRIBUTORS
 2 1871838 1946-54/20-22-25-26, 1955-57/20-22 WITH 6 CYL
 2 1909594 1948-54/27-28, 1955-56/20-22 WITH V-8 -27-28
- 2.369 SPRING AND SUPPORT PACKAGE, DISTRIBUTOR CAP RETAINER - SERVICED BY DELCO-REMY DISTRIBUTORS
 2 1911336 1946-54/27-28
- 2.369 SUPPORT, DISTRIBUTOR CAP SPRING - SERVICED BY DELCO-REMY DISTRIBUTORS
 2 1847289 1946-47/20-22-25-26, 1948-57/ALL
- 2.372 SHAFT, DISTRIBUTOR - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1866886 1946-48/20-22-25-26
 1 1866458 1946-48/27-28
 1 1912607 1949-52/20-22-25
 1 1912673 1949-51/27, 1952/27 FIRST JOBS BEFORE ENGINE SERIAL P12565
 1 1923045 1952/27 AFTER JOBS ON AND AFTER ENGINE SERIAL P12565, 1953-54/27-28
 1 1925242 1953/20-22-25
 1 1927378 1954/20-22-25 EXC. AT AND HT
 1 1927354 1954/20-22-25 AT AND HT
 1 1924238 1955-57/20-22 WITH 6 CYL INCLUDES WEIGHT PLATE
 1 1928115 1955/20-22 WITH V-8, 1956/20-22 WITH V-8 EXC. 4 BARREL CARB. - INCLUDES WEIGHT PLATE
 1 1927388 1955/27-28
 1 1934660 1956/20-22 WITH V-8 AND 4 BARREL CARB. - INCLUDES WEIGHT PLATE
 1 1933383 1956/27-28 EXC DUAL 4 BC - INCLUDES WEIGHT PLATES
 1 1935929 1956/27-28 WITH DUAL 4 BC
 1 1935629 1957/20-22 WITH V-8 EXC 4 BC
 1 1937852 1957/20-22 WITH V-8 AND 4 BC
 1 1935662 1957/27-28 - WITH AUTOMATIC CAM
- 2.375 GEAR, DISTRIBUTOR DRIVE - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1921074 1955-57/20-22 WITH 6 CYL
 1 1930487 1955-57/20-22 WITH V-8
 1 1927398 1955-57/27-28
 1 822273 PIN 1955-57/27-28



2.379 COLLAR, DISTRIBUTOR SHAFT - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1858578	1946-48/20-22-25-26
1	819741	1946-48/27-28
1	821865	1949-54/ALL

2.379 PIN, DISTRIBUTOR COLLAR OR COUPLING - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1862218	1946-54/ALL
1	1857502	1955-57/20-22 WITH 6 CYL
1	829421	1955-57/20-22 WITH V-8

2.379 WASHER, DISTRIBUTOR SHAFT SPACER SHIM - SERVICED BY DELCO-REMY DISTRIBUTORS

AR	810074	1946-54/ALL / .005 THICK/
AR	810078	1946-54/ALL / .010 THICK/

2.381 CAM, DISTRIBUTOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1867181	1946-48/20-22-25-26
1	1866456	1946-48/27-28
1	1912605	1949-52/20-22-25
1	1912674	1949-54/27-28
1	1913882	1953/20-22-25
1	1927380	1954/20-22-25 EXC. AT AND HT
1	1927356	1954/20-22-25 AT AND HT
1	1929485	1955-57/20-22 WITH 6 CYL
1	1928117	1955/20-22 WITH V-8, 1956/20-22 WITH V-8 EXC. 4 BARREL CARB.
1	1929565	1955/27-28
1	1934703	1956/20-22 WITH V-8 AND 4 BARREL CARB.
1	1927126	1956/27-28 EXC DUAL 4 BC
1	1935930	1956/27-28 WITH DUAL 4 BC
1	1937853	1957/20-22 WITH V-8 AND 4 BC
1	1935632	1957/20-22 WITH V-8 EXC 4 BC
1	1935665	1957/27-28 - BREAKER WITH WEIGHT BASE

2.382 ROTOR, DISTRIBUTOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	820445	1946-53/20-22-25-26
1	1836893	1946-54/27-28
1	1924245	1954/20-22-25, 1955-57/20-22 WITH 6 CYL
1	1927393	1955-56/20-22 WITH V-8 -27-28, 1957/27-28 WITH TRIPLE CARBS
1	1932015	1957/ALL WITH V-8 - 3-1/8 IN OD

2.384 POINT SET, DISTRIBUTOR CONTACT - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1871678	1946-54/20-22-25-26
1	1918148	1946-56/27-28, 1957/27-28 WITH TRIPLE CARBS
1	1938330	1946-56/25-27-28 POINT PKG
1	1924571	1955-57/20-22 WITH 6 CYL
1	1924499	1955-56/20-22 WITH V-8
1	1931988	1957/ALL WITH V-8

2.385 PLATE, DISTRIBUTOR BREAKER - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1914448	1946-48/20-22-25-26
1	1914446	1946-48/27-28
1	1912783	1949-54/20-22-25
1	1912784	1949-54/27-28
1	1847643	1955-57/20-22 WITH 6 CYL
1	1930355	1955-56/20-22 WITH V-8
1	1925439	1955/27-28, 1956/27-28 EXC DUAL 4 BC
1	1935507	1956/27-28 WITH DUAL 4 BC, 1957/27-28 WITH TRIPLE CARBS
1	1935622	1957/ALL WITH V-8

2.385 RETAINER, DISTRIBUTOR BREAKER PLATE - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1912614	1949-54/20-22-25
1	1912226	1949-54/27-28, 1955-56/20-22 WITH V-8 -27-28
1	1925376	1955-56/20-22 WITH V-8 TENSION SPRING

2.385 SPRING, DISTRIBUTOR BREAKER PLATE WASHER - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1912227	1949-54/ALL
1	1925375	1955-56/20-22 WITH V-8 -27-28
1	1932024	1957/ALL WITH V-8



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**2.385 WASHER, DISTRIBUTOR BREAKER PLATE - SERVICED BY DELCO-REMY DISTRIBUTORS**

AR	1912225	1949-54/ALL SHIM /.010 THICK/
1	1912224	1949-54/ALL, 1955/20-22 WITH V-8 -27-28, 1956/20-22 WITH V-8 BEARING - FIBRE
1	1869357	1949-54/ALL STOP
1	1927778	1956/27-28 BEARING - FIBRE
1	1932418	1957/ALL WITH V-8 - UNDER PLATE - FELT

2.387 SCREW, DISTRIBUTOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	816784	1946-57/ALL POINT SUPPORT CLAMP
1	1858576	1946-54/ALL, 1955/27-28 SL. HD. #18-32 X 7/16 ARM SPRING
1	1931999	1957/ALL WITH V-8 BREAKER LEVER SPRING ATTACHING
1	1931996	1957/ALL WITH V-8 CONTACT ADJUSTING
1	1938527	1957/ALL WITH V-8 CONTACT ATTACHING

2.387 CLIP, DISTRIBUTOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1868992	1946-54/ALL, 1955-56/27-28 CONTACT ARM TENSION SPRING SCREW LOCK
1	1931998	1957/ALL WITH V-8 BREAKER LEVER SPRING SCREW

2.387 STUD, DISTRIBUTOR BREAKER TENSION SPRING - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1925374	1955-56/20-22 WITH V-8
---	---------	------------------------

2.387 INSULATOR, DISTRIBUTOR BREAKER LEVER SPRING SCREW

1	1931997	1957/ALL WITH V-8 NYLON
---	---------	-------------------------

2.388 WEIGHT, DISTRIBUTOR - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1881371	1946-52/20-22-25-26, 1954/20-22-25 EXC AT AND HT, 1955/27-28, 1956-57/20-22 WITH V-8 AND 4 BC -27-28 EXC DUAL 4 BC
2	1880902	1946-52/27-28, 1953/ALL, 1954/20-22-25 AT AND HT -27-28, 1955/20-22 WITH V-8, 1956-57/20-22 WITH V-8 EXC 4 BC
2	1882907	1955-57/20-22 WITH 6 CYL
2	1924737	1956/27-28 WITH DUAL 4 BC

2.389 SPRING, DISTRIBUTOR WEIGHT - SERVICED BY DELCO-REMY DISTRIBUTORS

2	823238	1946-48/20-22-25-26
2	829567	1946-47/27-28
2	1887553	1948-51/27
2	1887743	1949-53/20-22-25
2	1884610	1952-54/27-28
2	1925251	1953/20-22-25, 1954/20-22-25 AT AND HT
2	1925574	1954/20-22-25 EXC. AT AND HT
2	1906766	1955-57/20-22 WITH 6 CYL
2	1929319	1955/20-22 WITH V-8, 1956-57/20-22 WITH V-8 EXC 4 BC
2	1886277	1955/27-28
2	1886967	1956/20-22 WITH V-8 AND 4 BARREL CARB.
2	1933350	1956/27-28 EXC DUAL 4 BC
2	1935843	1956/27-28 WITH DUAL 4 BC
2	1912189	1957/20-22 WITH V-8 AND 4 BC
2	1938064	1957/27-28

2.390 PLATE, DISTRIBUTOR WEIGHT HOLD DOWN - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1885557	1949-56/ALL, 1957 WITH 6 CYL
---	---------	------------------------------

2.391 WASHER, DISTRIBUTOR WEIGHT LOCK - SERVICED BY DELCO-REMY DISTRIBUTORS

2	811124	1946-48/20-22-25-26
2	1865983	1946-47/20-22-25-26
2	1885558	1949-54/ALL, 1955-56/20-22, 1957/20-22 WITH 6 CYL

2.391 SUPPORT, DISTRIBUTOR BREAKER PLATE TERMINAL LEAD - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1919352	1954/ALL
---	---------	----------

2.391 WASHER, DISTRIBUTOR SHAFT - SERVICED BY DELCO-REMY DISTRIBUTORS

1	811912	1955-56/20-22 WITH V-8 WEIGHT PLATE
1	1849806	1955-57/20-22 WITH V-8 GEAR
AR	1848595	1955-56/20-22 WITH V-8 -27-28 SHIM /.005 THICK/
AR	1848596	1955-56/27-28 SHIM /.010 THICK/



144

PARTSEngineered for
Premium Performance

- 2.391 SPRING, BREAKER PLATE SIDE PRESSURE - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1912228 1955/20-22 WITH V-8, 1956/20-22 WITH V-8 EXC. 4 BARREL CARB.
- 2.393 CONDENSER, DISTRIBUTOR - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1869704 1946-54/ALL, 1955-56/20-22 WITH V-8 -27-28
 1 1928111 1955-57/20-22 WITH 6 CYL
 1 1932004 1957/ALL WITH V-8
 1 1935938 SCREW 1957/20-22 WITH V-8
- 2.393 BRACKET, DISTRIBUTOR CONDENSER
 1 1869573 1957/20-22 WITH V-8 -27-28
- 2.400 LEAD, DISTRIBUTOR BREAKER PLATE GROUND - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1879140 1946-54/ALL
 1 1922429 1955-56/20-22 WITH V-8
 1 1932002 1957/ALL WITH V-8 - 2-1/4 LONG
- 2.400 LEAD, DISTRIBUTOR TERMINAL CONNECTOR - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1865978 1946-54/ALL, 1955/27-28, 1956/27-28 EXC DUAL 4 BC, 1957/27-28 WITH HP ENGINE
 1 1928118 1955-56/20-22 WITH V-8
 1 1930587 1956/27-28 WITH DUAL 4 BC, 1957/27-28 WITH TRIPLE CARBS
 1 1932028 1957/20-22 WITH V-8
 1 1935668 1957/27-28 - PRIMARY
- 2.400 STUD, DISTRIBUTOR TERMINAL - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1853625 1946-49/ALL
 1 1847647 1950-54/ALL
 1 1924371 1955-57/20-22 WITH 6 CYL
 1 1904376 WASHER, INSIDE 1955-57/20-22 WITH 6 CYL
- 2.401 RUSHING, DISTRIBUTOR TERMINAL STUD - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1865985 1946-48/ALL
 1 1912229 1949/ALL INSIDE
 1 1914141 1950-54/ALL INSIDE
 1 1914142 1950-54/ALL OUTSIDE
 1 1924369 1955-57/20-22 WITH 6 CYL INSIDE
 1 1924370 1955-57/20-22 WITH 6 CYL OUTSIDE
- 2.401 CLIP, DISTRIBUTOR TERMINAL - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 026153 1946-49/ALL
 1 1914144 1950-54/ALL, 1955-57/20-22 WITH 6 CYL STUD LOCK - OUTSIDE
- 2.401 NUT, DISTRIBUTOR TERMINAL ROUND STUD - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1924372 1955-57/20-22 WITH 6 CYL OUTSIDE
- 2.401 GROMMET, DISTRIBUTOR HOUSING TERMINAL - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1928123 1955-56/20-22 WITH V-8
 1 1932023 1957/ALL WITH V-8 - LEAD RUBBER - 35/64 OD
- 2.410 CONTROL, DISTRIBUTOR VACUUM - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1116051 1946-52/20-22-25-26
 1 1116050 1946-54/27-28
 1 1116077 1953/20-22-25
 1 1116079 1954/20-22-25
 1 1116089 1955-57/20-22 WITH 6 CYL
 1 1116104 1955-56/20-22 WITH V-8
 1 1116080 1955-56/27-28
 1 1116118 1957/20-22 WITH V-8 WITH 4 BC
 1 1116108 1957/20-22 WITH V-8 EXC 4 BC
 1 1116126 1957/27-28



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572

2.414 CLAMP, DISTRIBUTOR ADJUSTING - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1914530 1946-54/ALL

2.414 CLAMP, DISTRIBUTOR HOLD DOWN
1 3704912 1955-57/20-22 WITH V-8
1 518068 1955-57/27-28

NOTE. OTHER MODELS SERVICED BY DELCO - REMY

2.414 ARM, DISTRIBUTOR VACUUM CONTROL - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1873369 1955-57/20-22 WITH 6 CYL

2.416 SPRING, DISTRIBUTOR VACUUM CONTROL DIAPHRAGM - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1907723 1946-54/20-22-25-26
1 1880197 1946-54/27-28
1 1926115 1954/20-22-25
1 1925529 1955-57/20-22 WITH 6 CYL

2.420 COUPLING, DISTRIBUTOR VACUUM CONTROL - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1865656 1946-53/20-22-25-26
1 1866166 1946-53/27-28, 1954/ALL
1 1883027 1955-57/20-22 WITH 6 CYL

2.421 WASHER, DISTRIBUTOR VACUUM CONTROL COUPLING - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1841901 1946-53/ALL, 1954/27-28, 1955-57/20-22 WITH 6 CYL

2.421 GASKET, VACUUM CONTROL TO DISTRIBUTOR HOUSING - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1917246 1955-56/27-28

2.424 PIPE, DISTRIBUTOR VACUUM CONTROL SUCTION
AR 3696822 TUBING, STEEL 3/16 /25 FT ROLL/

2.447 SWITCH, STOP LAMP
1 1997725 1946-48/25-26-27-28, 1949-54/ALL
1 5813562 1946-48/20-22
1 1998106 1955-57/20-22 - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1997923 1955-57/27-28 EXC PB /SUPERSEDES 1997919/
1 1998104 1955/27-28 WITH POWER BRAKES
1 1998142 1956-57/27-28 WITH PB
AR 858388 NUT, 1/2-20 1955-57/20-22

2.459 SWITCH, DIMMER - SERVICED BY DELCO-REMY DISTRIBUTORS
1 1997008 1946-55/ALL, 1956-57/27-28
1 1997021 1956/20-22
1 1997023 1957/20-22

2.459 GASKET, DIMMER SWITCH AND FLOOR PAN
1 5935949 1954/25-27

2.459 SHIELD, DIMMER SWITCH
1 521845 1955-56/27-28
1 524116 1957/27-28

2.459 PLATE, DIMMER SWITCH MOUNTING
1 3734592 1957/20-22

2.480 HARNESS, WIRING
1 5755082 1955/20-22 JUNCTION BLOCK
1 2961359 1955/27-28 WITH DIRECTION SIGNALS
1 2964180 1956/27-28 WITH DIRECTION SIGNALS
1 2966574 1957/27-28

2.482 CLAMP, ACCESSORY WIRES THRU DASH
1 512260 1949-54/25-27-28
1 519604 1955-57/27-28

1946-
-1957

Pontiac

PARTS
CATALOGUE NO. 5722.482 CLAMP, WIRING HARNESS AND SPEEDOMETER CABLE DASH

1	514117	1949-50/25-27
1	514372	1951-54/25-27-28
1	519607	1955/27-28 LOWER
1	519609	1955/27-28 UPPER
1	522652	1956-57/27-28 LOWER
1	522648	1956-57/27-28 UPPER

2.482 FELT, SPEEDOMETER CABLE AND WIRING HARNESS COVER PLATE

1	512518	1949-54/25-27-28
2	519848	1955-57/27-28

2.482 PLATE, SPEEDOMETER CABLE AND WIRING HARNESS COVER

1	512517	1949-54/25-27-28
1	519847	1955-57/27-28

2.482 MANIFOLD, WIRES TO DASH

1	515449	1953/ALL, 1954/25-27-28 CENTRE
1	515452	1953-54/25-27-28 LEFT SIDE
3	528308	NUT, WIRES TO MANIFOLD TO DASH SPRING #10

2.483 COVER, ACCESSORY FUSE AND JUNCTION BLOCK

1	512109	1949-50/25-27
1	514681	1951/25-27
1	516514	1952/25-27
1	515446	1953-54/25-27-28

2.483 BLOCK, FUSE AND TERMINAL

1	520217	1955-56/27-28
1	523457	1957/27-28
1	519503	RETAINER, 1955/27-28
1	521970	RETAINER, 1956/27-28

2.483 BLOCK, ACCESSORY FUSE AND TERMINAL - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1998785	1953-54/25-27-28
---	---------	------------------

2.483 BLOCK, WIRING HARNESS JUNCTION

1	1998776	1954/20-22 AT WITH POWER BRAKES SERVICED BY DELCO-REMY DISTRIBUTORS
---	---------	---

2.483 BLOCK, WIRING JUNCTION

1	3710258	1955/20-22
1	1998822	1956-57/20-22

2.483 ADAPTER, FUSE BLOCK TERMINAL

AR	523456	1957/27-28
----	--------	------------

2.485 SWITCH, LIGHTING - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1995035	1946-48/ALL
1	1995048	1949-54/20-22
1	1995052	1949-54/25-27-28
1	1995059	1955-56/ALL
1	1995073	1957/ALL

2.485 BRACKET, LIGHT SWITCH MOUNTING

1	519502	1955-56/ALL
---	--------	-------------

2.486 KNOB, LIGHTING SWITCH CONTROL

1	507216	1946-48/ALL
1	511828	1949-50/ALL
1	515708	1951-52/ALL BLACK
1	516942	1953-54/ALL
1	518909	1955/ALL
1	522296	1956/ALL
1	523455	1957/20-22 ALL -27 /-11-19-37-39-62-63/
1	523212	1957/27 /-64DF/ -28 EXC /-19D/
1	515699	FERRULE 1949-52/ALL
1	516921	FERRULE 1953-54/ALL
1	518908	FERRULE 1955-56/ALL
1	523103	FERRULE 1957/ALL EXC. -28 /-67DTX/ AND EXC. CAR COOLING
1	1165135	NUT 1956/ALL



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**2.487 BUSHING, LIGHT SWITCH KNOB**

1	505825	1946-48/ALL
1	511754	1949-52/ALL
1	515441	1953-55/ALL
1	1938995	1957/ALL
1	515699	FERRULE 1949-52/ALL

2.487 SPACER, LIGHT SWITCH

1	511508	1946-48/ALL MOUNTING
---	--------	----------------------

2.487 FLANGE, LIGHT SWITCH MOUNTING

1	505826	1946-48/ALL CHROME
---	--------	--------------------

2.487 SPRING, DISTRIBUTOR CONTACT ADJUSTING SCREW - SERVICED BY DELCO-REMY**DISTRIBUTORS**

1	1931995	1957/27-28
---	---------	------------

2.500 REGULATOR, VOLTAGE - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1118301	1946-51/ALL /SUPERSEDES 1119015/
1	1118827	1952-54/ALL
1	1119003	1955/20-22, 1956-57/20-22 /SUPERSEDES 1119001/
1	1119000	1955-57/27-28 EXC HEAVY DUTY GENERATOR AND CAR COOLING 25 AMP /SUPERSEDES 1118945/
1	1119168	1955-57/27-28 WITH CAR COOLING AND HEAVY DUTY GENERATOR USED WITH 1102012, 1102027, 1102037 AND 1105944 GENERATOR - 35 AMP /SUPERSEDES 1118967/
1	1119610	1957/27-28 WITH HD GEN 40 AMP /SUPERSEDES 1119163/
3	3650059	SCREW, HEX. HD. #14-10 X 3/4

2.500 BRACKET, VOLTAGE REGULATOR MOUNTING

1	520211	1955/27-28
1	522065	1956/27-28

2.515 AMMETER - SERVICED BY UMS SPEEDOMETER AND GAUGE DISTRIBUTORS

1	1500759	1946/ALL
1	1501349	1947/ALL /SUPERSEDES 1500880/
1	1501065	1948/ALL
1	1501156	1949-50/ALL
1	1501286	1951-52/ALL
1	1501357	1953-54/ALL
1	1501607	1955/ALL
1	1501748	1956/ALL
1	1501790	1957/27-28

2.521 PLATE, AMMETER INSULATOR - SERVICED BY UMS SPEEDOMETER AND GAUGE**DISTRIBUTORS**

1	857982	1949-53/ALL, 1955/ALL, 1956/20-22
---	--------	-----------------------------------

2.521 BUSHING, AMMETER INSULATOR - SERVICED BY UMS SPEEDOMETER AND GAUGE**DISTRIBUTORS**

4	1515884	1954/ALL
---	---------	----------

2.525 WIRE, FUEL TANK

1	1874131	1946-48/25-26-27-28 TO CONNECTOR
1	1882450	1946-48/20 ALL -22 EXC. /-27B-71/ TO GAUGE
1	5288761	1949-50/20 ALL EXC. /-71/, 1951-52/20 ALL -22 EXC. /-71/ TO GAUGE
1	5843131	1953-54/ALL EXC. /-71/
1	3114169	CONNECTOR, FUEL GAUGE WIRE 1946-48/25-26-27-28 TWO WIRE TYPE
1	556018	GROMMET, FUEL GAUGE WIRE REAR COMPARTMENT 1946-47/25 /SUPERSEDES 419654/
1	359207	GROMMET, FUEL GAUGE WIRE REAR COMPARTMENT, 1946-47/20 ALL -22 EXC /-27B-71/ /SUPERSEDES 3653799/

2.525 HARNESS, AMMETER TO STARTING SWITCH WIRING

1	5755927	1955/20-22 WITH 6 CYL. AND STD. TRANS.
1	5755927	1955/20-22 WITH 6 CYL. AND OVERDRIVE TRANSMISSION, 1956/20-22 WITH 6 CYL. EXC. AT
1	5755929	1955/20-22 AT WITH 6 CYL /SUPERSEDES 5755077/
1	5755928	1955-56/20-22 V-8 EXC. AT



1946-
-1957

Pontiac

PARTS
CATALOGUE NO. 572

1	3722934	1955/20-22 WITH V-8 AND OVERDRIVE TRANSMISSION
1	5755930	1955/20-22 AT WITH V-8 /5755078/
1	2964662	1956/20-22 WITH 6 CYL. AND OVERDRIVE TRANSMISSION
1	2964664	1956/20-22 WITH V-8 AND OVERDRIVE TRANSMISSION
1	5757449	1956/20-22 AT WITH 6 CYL.
1	5757450	1956/20-22 AT WITH V-8
1	2967265	1957/20-22
1	5761197	1957/20-22 6 CYL EXC PG
1	5761199	1957/20-22 PG WITH 6 CYL
1	5761198	1957/20-22 ST WITH V-8
1	5761200	1957/20-22 AT WITH V-8

2.530 CONNECTOR, WIRE

AR	5289849	1949/20-22, 1950-54/ALL, 1955/20-22 FOR TWO WIRES WITH FLAT TERMINALS
1	3698457	1953/25-27 EXC. TURN SIGNALS Y TYPE
AR	5297951	1955-56/20-22 SINGLE
AR	2962458	1955-56/20-22 SWITCH TO MOTOR WIRE, HEATER CONTROL SWITCH, AND BODY WIRING
2	2962032	1955-56/20-22 4 WAY
1	2962034	1955-56/20-22 6 WAY
AR	2962036	1955-56/ALL
AR	2962408	1955/20-22 EXC. 20 /-63F/, 1956/20-22 - 6 WAY MALE
1	2962629	1956/20-22 - SIGNAL LAMP SWITCH WIRES
1	2962443	1956-57/20-22 - SIGNAL FLASHER SOCKET
1	2962536	1956/20-22 - OVERDRIVE KICK DOWN SWITCH
1	2962566	1956-57/20-22 - 8 WAY FEMALE
1	2965117	1956-57/20-22 - 8 WAY MALE /SUPERSEDES 2962567/
AR	2962105	1957/20-22 - SINGLE WIRE
AR	2962448	1957/20-22 - SINGLE WIRE SHORT BLACK
AR	2962510	1957/20-22 - 3 WAY
AR	2962964	1957/20-22 - CLOCK - HORN WIRE - EXTENSION WIRE TAIL AND STOP LAMP
AR	2962551	1957/20-22 - 2 WAY
1	2962630	1957/20-22 - 6 WAY FEMALE

2.530 TERMINAL, WIRE

AR	5288026	1949/20-22, 1950-56/ALL FLAT TYPE
AR	2965078	1955-56/20-22 FEMALE /SUPERSEDES 2962351/
AR	2962958	1955-57/20-22 HORN WIRE AND LICENSE LAMP SOCKET /SUPERSEDES 2962352/
AR	2962132	1955/20-22 CHASSIS WIRING HARNESS - JUNCTION - 53/64 IN. LONG FOR USE WITH 18 AND 20 GAUGE WIRES
AR	2962405	1956/20-22 TURN SIGNAL SWITCH PLATE
AR	2962131	1956/20-22 CHASSIS WIRING HARNESS
1	3724948	1956/20-22 DIRECTION SIGNAL LAMP SWITCH
AR	2965142	1956-57/20-22 - FEMALE 14 TO 20 GAUGE /SUPERSEDES 2962573 - 2962574 - 2962718/

2.548 NUT, HEADLAMP MOUNTING

AR	5785369	1946-56/ALL, 1957/20-22 #10-12 - CONSISTS OF 50 PCS OF 3696396
----	---------	--

2.555 HARNESS, CHASSIS WIRING

1	1885004	1942-47/25-26-27-28
1	5836813	1948/20-22
1	5288134	1948/25-27
1	5838204	1949-50/20-22 SEE NOTE
1	5991191	1949-50/25-27
1	5839683	1950/20-22 EXC. AT SEE NOTE
1	5841341	1951-52/20-22 AT
1	5841556	1951-52/20-22 EXC. AT
1	5291063	1951-52/25-27
1	5844594	1953-54/20-22 EXC. AT
1	5844595	1953-54/20-22 AT EXC. POWER BRAKES
1	5292828	1953-54/25-27-28
1	5755081	1955/20-22
1	5757327	1956/20-22
1	5760463	1957/20-22 DASH WIRING
1	5760249	1957/20-22 GRILLE WIRING

NOTE. 5839683 USED ONLY ON JOBS WITH VOLTAGE REGULATOR MOUNTED ON DASH

5838204 USED ON JOBS WITH VOLTAGE REGULATOR MOUNTED ON FENDER SKIRT

2967265



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**2.555 CLAMP, WIRE ASSEMBLY - THRU DASH**

1	505915	1946-48/25-27
1	505903	1946-47/26-28

2.555 EXTENSION, WIRING HARNESS

1	2964076	1956/20-22
---	---------	------------

2.559 CLIP, WIRING

AR	4581220	1955/20-22-27, 1956/20-22
4	3714454	1955-57/20-22
2	3714373	1955-56/20-22 HEADLAMP AND PARKING LAMP
2	3714454	1957/20-22 STARTING MOTOR WIRING HARNESS
1	3750535	1957/20-22 - CHASSIS WIRING HARNESS /SUPERSEDES 1338561/

2.560 BLOCK, HEADLAMP WIRING JUNCTION

2	1998792	1946-54/ALL /SUPERSEDES 1865535/
1	520947	1955-56/27-28 RIGHT
1	520948	1955-56/27-28 LEFT

2.561 GROMMET, WIRING

1	3653762	1946-48/20-22 HARNESS THRU DASH
---	---------	---------------------------------

2.585 LAMP, PARKING

1	917302	1946/ALL RIGHT
1	917301	1946/ALL LEFT
1	928512	1947/ALL RIGHT
1	928511	1947/ALL LEFT
1	928530	1948/ALL RIGHT
1	928529	1948/ALL LEFT
1	928550	1949/ALL RIGHT
1	928549	1949/ALL LEFT
1	928094	1950/ALL RIGHT
1	928093	1950/ALL LEFT
1	928994	1951/20-22 ALL -25-27 FIRST JOBS WITH DIE CAST DOOR, 1952/20-22 RIGHT
1	928993	1951/20-22 ALL -25-27 FIRST JOBS WITH DIE CAST DOOR, 1952/20-22 LEFT
1	928696	1951/25-27 AFTER JOBS WITH STAMPED DOOR, 1952/25-27 RIGHT
1	928695	1951/25-27 AFTER JOBS WITH STAMPED DOOR, 1952/25-27 LEFT
1	928282	1953/ALL RIGHT
1	928281	1953/ALL LEFT
1	928804	1954/ALL RIGHT
1	928803	1954/ALL LEFT
1	5948940	1955/20-22 RIGHT /SUPERSEDES 5755341/
1	5948939	1955/20-22 LEFT /SUPERSEDES 5755340/
1	897588	1955/27-28 RIGHT
1	897587	1955/27-28 LEFT
1	5948938	1956/20-22-27-28 - RIGHT /SUPERSEDES 898352/
1	5948937	1956/20-22 - LEFT /5759359/
1	898351	1956/27-28 LEFT
1	5760564	1957/20-22 - RIGHT
1	5760563	1957/20-22 - LEFT
1	898486	1957/27-28 - RIGHT
1	898485	1957/27-28 - LEFT
AR	510851	WASHER, FLAT 1/4

2.585 BRACKET, DIRECTION SIGNAL LAMP FLASHER CONNECTOR MOUNTING

1	3724756	1953-54/20-22 /SUPERSEDES 3701580/
---	---------	------------------------------------

2.587 SUPPORT, PARKING LAMP

4	509546	1947/ALL
4	510541	1948/ALL

2.587 BRACKET, PARKING LAMP SUPPORT

1	5840888	1954/20-22 RIGHT
1	5840887	1954/20-22 LEFT

2.587 PLATE, PARKING LAMP MOUNTING

2	5945171	1954/ALL INNER
2	5945173	1954/ALL OUTER
1	5945785	1955/ALL LEFT
1	5945786	1955/ALL RIGHT
AR	5942856	SCREW, 1954-55/ALL



2.587 SCREW, PARKING AND SIGNAL LAMP LENS
 4 5946849 1956/ALL

2.589 LENS, PARKING LAMP

2	5935895	1946/ALL
1	5936792	1947/ALL RIGHT
1	5936791	1947/ALL LEFT
2	5937577	1948/ALL
2	5938308	1949/ALL
2	5939313	1950/ALL
2	5939984	1951-52/ALL
2	5940671	1953/ALL
1	5945178	1954/ALL RIGHT
1	5945177	1954/ALL LEFT
1	5945790	1955/ALL RIGHT
1	5945789	1955/ALL LEFT
2	5946847	1956/ALL
2	5948352	1957/ALL

2.590 GASKET, PARKING LAMP LENS

2	5935896	1946/ALL SPONGE RUBBER
2	5936778	1947-48/ALL SPONGE RUBBER
2	5938311	1949/ALL
2	5939312	1950-53/ALL
2	5945179	1954/ALL
2	5945799	1955/ALL
2	5946848	1956/ALL
2	5948351	1957/ALL

2.593 DOOR, PARKING LAMP

1	5935894	1946/ALL RIGHT
1	5935893	1946/ALL LEFT
1	5938310	1949/ALL RIGHT
1	5938309	1949/ALL LEFT
1	5939316	1950/ALL RIGHT
1	5939315	1950/ALL LEFT
1	5942576	1951/ALL FIRST JOBS, 1952/20-22 DIE CASTING RIGHT /SUPERSEDES 5940000/
1	5942575	1951/ALL FIRST JOBS, 1952/20-22 DIE CASTING LEFT /SUPERSEDES 5939999/
1	5942184	1951/25-27 AFTER JOBS, 1952/25-27 STAMPING - RIGHT
1	5942183	1951/25-27 AFTER JOBS, 1952/25-27 STAMPING LEFT /SUPERSEDES 5940835/
1	5943806	1953/ALL RIGHT
1	5943805	1953/ALL LEFT
1	5945176	1954/ALL RIGHT
1	5945175	1954/ALL LEFT
1	5945788	1955/ALL RIGHT
1	5945787	1955/ALL LEFT
4	5945852	SCREW, FRAME TO BODY 1955/ALL

2.594 SEAL, PARKING LAMP WIRE

2	511432	1949-50/ALL
2	517695	1954/ALL

2.594 GASKET, PARKING AND SIGNAL LAMP TO BUMPER

2	521485	1956/ALL
---	--------	----------

2.596 WIRING AND SOCKET, PARKING LAMP

2	5935897	1946-47/ALL
2	5937342	1948/ALL
2	5939328	1950-52/ALL
2	5940672	1953/ALL EXC. TURN SIGNALS

2.596 RETAINER, PARKING LAMP WIRE SEAL

2	5840891	1954/20-22
2	517660	1954/25-27-28

2.646 HARNESS, TAIL LAMP

1	1882029	1946-47/ALL TAIL LAMP TO FUSE
1	5287898	1948/ALL FUSE WIRE
1	5760709	1957/20-22 EXC /-62F-63F-71/ RIGHT
1	5760708	1957/20-22 EXC /-62F-63F-71/ LEFT



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**2.647** TERMINAL, BODY AND CHASSIS WIRING PLASTIC CONNECTOR

1 2962458 1956/20 /-67D/, 1957/ALL

2.649 CONNECTOR, STEERING COLUMN WIRES TO MAIN WIRE

1 2962408 1955-56/27-28 6 WAY MALE

2.649 CONNECTOR, MAIN LIGHTING SWITCH - SIX WAY

1 2962911 1957/ALL

2.649 CONNECTOR, WIRING HARNESS IGNITION SWITCH

1 2962912 1957/20-22 4 WAY - SWITCH

2.660 PAD, TAIL LAMP

2 3661630 1946/20 ALL -22 EXC. /-71/, 1947/20 EXC. /-69/ -22 EXC. /-71/
 1 3662260 1946/22 /-69/, 1947/20 /-69/ RIGHT
 1 3662259 1946/22 /-69/, 1947/20 /-69/ LEFT
 1 506059 1946-47/26-28 /-07/ RIGHT
 1 506060 1946-47/26-28 /-07/ LEFT
 2 506173 1946-47/26-28 /-09/
 2 511516 1948/20 ALL -22 EXC. /-71/ -25-27 TO BODY
 2 3688069 1949-50/20 ALL -22 EXC. /-71/
 2 511661 1949-50/25-27 TO FENDER
 2 3695952 1951-52/20 ALL -22 EXC. /-71/
 2 514648 1951-52/25-27 TO FENDER
 2 515259 1953-54/25-27 EXC. /-62-71/

2.660 GASKET, TAIL LAMP TO FENDER

2 5943402 1953/25-27 /-62-71/, 1954/25-27 /-62/
 2 5945161 1954/28 RUBBER
 2 5945920 1955/ALL EXC. /-62-63-71/, 1956/22 /-11-11B-19/ -27 /-11-19-37-39/
 2 5945814 1955-56/20 /-62F-63F/ -22 /-63F-71/ -27 /-62-63/
 2 5946942 1956/20 EXC. /-62F-63F/ -27 /-19D-39D-37D-62DF-64DF/ -28
 2 524798 1957/20-22 EXC. /-62F-63F-71/ -27 EXC. /-62-63/ -28
 2 524998 1957/20-22 /-62F-63F-71/ -27 /-62-63/

2.662 BRACKET, LICENSE PLATE AND TAIL LAMP

1 3692352 1949-52/22 /-71/
 2 524266 SCREW, 1957/20-22-27 /-62-63-71/

2.670 BAR, REAR LICENSE SUPPORT

1 5935891 1946-48/ALL
 1 519674 1955/ALL EXC. /-62-63-64-71/
 2 3685721 NUT, ANCHOR 1/4-20 U TYPE PLATE TO BRACKET
 1 506073 SPRING, REAR LICENSE PLATE ANTI-RATTLE 1946-48/ALL EXC. -22 /-71/

2.670 SUPPORT, LICENSE PLATE AND TAIL LAMP BRACKET

1 3688913 1949-52/22 /-71/ LEFT

2.670 BRACKET, REAR LICENSE

1 5942640 1949-52/ALL EXC -22 /-71/, 1953-54/22 /-71/ /SUPERSEDES 5938180/
 1 5944018 1953-54/25-27 /-62/
 1 523730 1957/ALL
 1 3650059 SCREW, HEX HD 14-10 X 3/4

2.673 SPACER, REAR LICENSE PLATE BRACKET

1 3663774 1946-48/20-22-25-27 UPPER
 1 3663784 1946-48/20 ALL -22 EXC. /-71/ -25-26-27-28 LOWER

2.673 BUMPER, LICENSE BRACKET

1 5937956 1953/25-27 /-62-71/

2.673 BUMPER, FRONT LICENSE PLATE

1 516785 1953/25-27
 1 517850 1954/25-27-28, 1955/27-28

2.674 WASHER, REAR LICENSE SUPPORT TO BODY SEALING

1 505984 1946-48/ALL RUBBER
 2 512178 1949-52/ALL EXC. 22 /-71/, 1953-54/25-27 /-62-71/



1946-
-1957

PARTS
CATALOGUE NO. 572

2.676 - 2.680

2.676 BUMPER, REAR LICENSE PLATE

1	515590	1953-54/25-27 EXC /-62-71/ -28 TO IMPACT BAR
1	516785	1957/ALL

2.679 LAMP, TAIL AND STOP

1	927566	1946/20 ALL -22 EXC. /-71/, 1947/20 EXC. /-69/ -22 EXC. /-71/ RIGHT
1	927565	1946/20 ALL -22 EXC. /-71/, 1947/20 EXC. /-69/ -22 EXC. /-71/ LEFT
1	927190	1946-47/20 /-69/ RIGHT
1	927189	1946-47/20 /-69/ LEFT
1	927162	1946-48/22 /-71/
1	927191	1946-47/25 /-69/ LEFT
1	927604	1948/20 ALL -22 EXC. /-71/ -25-27 RIGHT
1	927603	1948/20 ALL -22 EXC. /-71/ -25-27 LEFT
1	927578	1949/20 ALL -22 EXC. /-71/ RIGHT
1	927577	1949/20 ALL -22 EXC. /-71/ LEFT
1	927874	1949-52/22 /-71/ USED WHEN LICENSE PLATE IS ABOVE LAMP GUIDE #499-16
1	927608	1949-50/25-27 GUIDE NO. 3047-06 RIGHT
1	927607	1949-50/25-27 GUIDE NO. 3047-05 LEFT
1	927630	1949-52/25-27 /-61-62/ RIGHT
1	927629	1949-52/25-27 /-61-62/ LEFT
1	927756	1950/20 ALL -22 EXC. /-71/ RIGHT
1	927755	1950/20 ALL -22 EXC. /-71/ LEFT
1	927812	1951-52/20 ALL -22 EXC. /-71/ RIGHT
1	927811	1951-52/20 ALL 22 EXC. /-71/ LEFT
1	927870	1951-52/25-27 RIGHT
1	927869	1951-52/25-27 LEFT
2	928427	1953/20-22
2	927847	1953-54/25-27 EXC. /-62-71/
1	928273	1953-54/25-27 /-62-71/
2	897627	1954/20-22
2	928682	1954/28
2	897585	1955/20 EXC. /-63F/ -27 /-11D-19D-37D-64/ -28
2	897640	1955-56/20-22-27 /-62-63-71/ /SUPERSEDES 897635/
2	897818	1955-56/22 /-11-11B-19/ -27 /-11-19/
2	897932	1956/20 EXC. /-62F-63F/ -27 /-19D-37D-64DF/ -28
2	898296	1957/20 EXC /-62F-63F/ -22 EXC /-63F-71/ ALL -27 EXC /-62-63-64/ EXC BACK UP LAMPS /898297/
2	898376	1957/20 /-62F-63F/ -22 /-63F-71/ -27 /-62FC-62DF-63F/ - LAMP /SUPERSEDES 898377/
2	898294	1957/27 /-64DF/ -28
2	898295	1957/27 /-64DF/ -28 EXC BACK-UP LAMPS
2	898649	1957/27 /-62SDF/
6	5785368	NUT, SPEED 1949-50/20 ALL -22 EXC /-71/ - CONSISTS OF 25 PCS OF 5937865

2.680 BODY, TAIL AND STOP LAMP

1	5931727	1946-47/25 EXC. /-69/ -27 LEFT
1	5931560	1946-47/26-28 RIGHT
1	5931559	1946-47/26-28 LEFT
1	5932455	1947/25 /-69/ LEFT

2.680 ORNAMENT, TAIL AND STOP LAMP

2	5941700	1954/20-22
2	5945813	1955-56/20 /-62F-63F/ -22 /-63F-71/ ALL -27 /-62-63/ EXC. BACK-UP LAMPS
2	5947716	1957/20 EXC. /-62F-63F/ -22 EXC. /-63F-71/ -27 EXC. /-62-63/ -28 - BACK-UP LAMP OPENING
2	5945806	GASKET 1955-56/20 /-62F-63F/ -22 /-63F-71/ ALL 27 /-62-63/ EXC. EXC. WITH BACK-UP LAMPS
2	5947861	GASKET 1957/20 EXC. /-62F-63F/ -22 EXC. /-63F-71/ -27 EXC. /-62- 63/ -28 - BACK-UP LAMP OPENING
4	5942856	SCREW, 1957/27 /-64DF/ -28 /-19D-19SD-37SD-39SD-67DTX/

2.680 MEDALLION, TAIL LAMP

2	5943947	1953/25-27 /-62-71/, 1954/25-27 /-62/
---	---------	---------------------------------------

2.680 LENS, TAIL LAMP REFLECTOR - UPPER

2	5947863	1957/27 /-64DF/ -28
2	5947999	GASKET 1957/27 /-64DF/ -28
2	5948000	BRACKET 1957/27 /-64DF/ -28



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**2.681 DOOR, TAIL LAMP**

2	5931381	1946-47/20 ALL -22 EXC. /-71/
1	5930344	1946-48/22 /-71/ LESS LENS
1	5937596	1948/ALL EXC. -22 /-71/ RIGHT
1	5937864	1949-50/20 ALL -22 EXC. /-71/ RIGHT
1	5937863	1949-50/20 ALL -22 EXC. /-71/ LEFT
1	920628	1949-52/22 /-71/
1	5937854	1949-50/25-27 RIGHT
1	5937853	1949-50/25-27 LEFT
2	5940062	1951-52/20 ALL -22 EXC. /-71/ - HOUSING
1	5940986	1951-52/25-27 RIGHT
1	5940985	1951-52/25-27 EXC. /-62-71/ LEFT
2	5943946	1953/25-27 /-62-71/, 1954/25-27 /-62/ LESS LENS
2	5942451	1953-54/25-27 EXC. /-62-71/
2	5945158	1954/28
2	5945744	1955/20-22 EXC. /-63F-71/ -27 /-11-11D-19-19D-37D/ -28, 1956/22 /-11-11B-19/ -27 /-11-19-37-39/
2	5946938	1956/20 EXC. /-62F-63F/ -27 /-19D-37D-39D-62DF-64DF/ -28
4	5937582	NUT, 1946-47/20 ALL -22 EXC. /-71/ NO. 6-20
4	5933212	SCREW 1946-47/20 ALL -22 EXC. /-71/ NO. 6-20 X 15/32

2.681 SIGNAL, REFLEX

1	5796165	1946-53/22 /-71/ /SUPERSEDES 5790088/
2	5938323	1949-50/20 ALL -22 EXC. /-71/
2	5940066	1951-52/20 ALL -22 EXC /-71/ /SUPERSEDES 5943455/

2.681 HOUSING, TAIL AND STOP LAMP

2	5944281	1953/20-22
2	5941746	1954/20-22
2	5945801	1955-56/20 /-62F-63F/ -22 /-63F-71/ -27 /-62-62DF-63F/ INCLUDES DOOR
2	5948149	1957/20 /-62F-63F/ -22 /-63F-71/ -27 /-62FC-62DF-63F/
2	5948001	1957/20 EXC. /-62F-63F/ -22 EXC. /-63F-71/ -27 EXC. /-62-63/
2	5947997	1957/27 /-64DF/ -28
2	5948624	1957/27 /-62SDF/

2.682 LENS, TAIL AND STOP LAMP

1	5930342	1946-48/22 /-71/
2	5937794	1946/20 ALL -22 EXC. /-71/, 1947/20 EXC. /-69/ -22 EXC. /-71/
2	5931535	1946-47/25-26-27-28
1	5930830	1947/20 /-69/ RIGHT
1	5930829	1947/20 /-69/ LEFT
2	5937590	1948/20 ALL -22 EXC. /-71/ -25-27, 1949-50/25-27
AR	5937162	1949-52/22 /-71/ GLASS
2	5937861	1949/20 ALL -22 EXC. /-71/
2	5939421	1950/20 ALL -22 EXC. /-71/
2	5940038	1951-52/20 ALL -22 EXC. /-71/
2	5939888	1951-52/25-27
2	5944070	1953/20-22 INNER
2	5943403	1953/20-22 OUTER
2	5943404	1953/20-22 LOWER
2	5943406	1953/20-22 CENTER
2	5942453	1953-54/25-27 EXC. /-62-71/ SIGNAL
4	5943919	1953-54/25-27 /-62-71/ ORNAMENTAL
2	5939888	1953-54/25-27 /-62-71/ SIGNAL
2	5941701	1954/20-22 UPPER-INNER
2	5941679	1954/20-22 UPPER OUTER
2	5941699	1954/20-22 LOWER
2	5945163	1954/28 INCLUDES RING
2	5948446	1955/20 ALL -27 /-11D-19D-37D-64DF/ -28, 1956/20 EXC /-62F-63F/ -27 /-19D-37D-62DF-64DF/ -28 /SUPERSEDES 5945748/
2	5946382	1955/22 /-11-11B-19/ -27 /-11-19/, 1956/22 /-11-11B-19/ -27 /-11-19-37-39/
2	5945809	1955-56/20-22-27 /-62-63-71/
2	5948002	1957/20-22 ALL -27 EXC. /-64DF/
2	5947813	1957/27 /-64DF/ -28
4	5946946	SCREW, LENS 1956/20 EXC. /-63F/ -22 /-11-11B-19/ -27 EXC. /-62DF-62FC-63F/
4	5946946	SCREW 1956/20 EXC /-62F-63F/ -22 /-11-11B-19-71/ -27 EXC /-62DF-62FC-63F/ -28, 1957/A-L /SUPERSEDES 455601/



1946-
-1957

Pontiac

PARTS
CATALOGUE NO. 5722.683 RETAINER, TAIL AND STOP LAMP LENS

1 5931558 1946-47/25-26-27-28 INNER
2 5785318 1949-52/22 /-71/ - CONSISTS OF 10 PCS OF 827925

2.683 CLAMP, TAIL LAMP TO BODY

1 505909 1946-47/25-26-27-28 OUTER RIGHT
1 505907 1946-47/25-26-27-28 INNER RIGHT
1 505908 1946-47/25-26-27-28 INNER LEFT
4 510976 1948/20 ALL -22 EXC. /-71/ -25-27 PLAIN
4 510977 1948/20 ALL -22 EXC. /-71/ -25-27 TOOTHED

2.684 GASKET, TAIL AND STOP LAMP LENS

1 5930343 1946-48/22 /-71/
2 5931433 1946-47/20 ALL -22 EXC. /-71/
2 5931534 1946-47/25-26-27-28
2 5937599 1948/20 ALL -22 EXC. /-71/ -25-27, 1949-50/25-27
AR 920625 1949-52/22 /-71/
2 5937858 1949-50/20 ALL -22 EXC. /-71/
2 5940037 1951-52/20 ALL -22 EXC. /-71/
2 5939889 1951-52/25-27
4 5943407 1953/20-22 UPPER AND LOWER
2 5943405 1953/20-22 CENTER
2 5942457 1953-54/25-27 EXC. /-62-71/ SIGNAL
4 5943920 1953-54/25-27 /-62-71/ ORNAMENTAL
2 5939889 1953-54/25-27 /-62-71/ SIGNAL
2 5941662 1954/20-22
2 5941674 1954/20-22 USED BETWEEN UPPER, OUTER REFLEX LENS
2 5945162 1954/28
2 5945808 1955-56/20 /-62F-63F/ -22 /-63F-71/ -27 /-62-63/
2 5946945 1956/20 EXC. /-62F-63F/ -27 /-19D-39D-37D-64DF/ -28
2 5947862 1957/ALL

2.685 LENS, TAIL AND STOP LAMP SIDE AND OUTLOOK

1 920634 1949-52/22 /-71/ CLEAR

2.686 GASKET, TAIL AND STOP LAMP SIDE AND OUTLOOK LENS

1 5930358 1946-48/22 /-71/
AR 920808 1949-52/22 /-71/
2 5945747 1955/ALL EXC. /-62-63-71/, 1956/22 /-11-11B-19/ -27 EXC. /-62-62FC-62DF-63F-67DTX/ -28

2.689 LENS, TAIL AND STOP LAMP REFLEX

2 5941671 1954/20-22

2.694 SOCKET ASSEMBLY, TAIL AND STOP LAMP

2 923598 1946-47/25-26-27-28-29
2 5937588 1948/20 ALL -22 EXC. /-71/ -25-27
AR 5939945 1951-52/ALL EXC. 22 /-71/, 1953/25-27, 1954/ALL
4 5944017 1953/20-22
2 923602 GASKET 1946-47/25-26-27-28
2 5937600 GASKET, 1948/20 ALL -22 EXC. /-71/ -25-27, 1949-50/25-27
2 5939951 GASKET, 1951-52/ALL EXC. 22 /-71/, 1953-54/ALL

2.694 SPRING, TAIL AND STOP LAMP SOCKET

AR 5939950 1951-52/ALL EXC. 22 /-71/, 1953-54/ALL

2.694 PLUG, TAIL AND STOP LAMP

2 2965332 1951-52/ALL, 1953/25 /-11-11WD-27-37D-69-69WD/ -27 /-11-11WD-37D-69-69WD/, 1954/20-22 ALL -25-27 /-11WD-37D-69W-69WD/, 1955/20 /-11-11A-11D-19-19D-37D-67D/ -22 /-11-11B-19-63F-71/ -27-28, 1956-57/ALL /SUPERSEDES 5291632/
AR 2971077 1953/20-22, 1955-57/ALL /SUPERSEDES 5291638/

2.694 CLIP, TAIL LAMP WIRING

2 4576889 1955/27 /-62-62DF-63F/ ON TAIL LAMP SUPPORT

2.695 NIPPLE, LICENSE PLATE LAMP SOCKET

1 5944226 1953-54/22 /-71/



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**2.697 LAMP, BACK-UP**

1 927589 1946-47/26-27-28
1 3114169 CONNECTOR, WIRING 1946-47/26-27-28 2 WIRE TYPE

2.697 DOOR, BACK-UP LAMP

1 5931447 1946-47/26-27-28 /5937163/
2 5939817 1951-52/25-27 US EXC. /-62-71/, 1953/25-27 US /-62-71/
1 5940658 1953/25-27 EXC. /-62-71/ RIGHT /SUPERSEDES 5943794/
1 5943793 1953/25-27 EXC. /-62-71/ LEFT
1 928180 1953-54/25-27-28 US EXC. /-62-71/ RIGHT
1 928179 1953-54/25-27-28 US EXC. /-62-71/ LEFT
1 5931453 SCREW, 1946/26-28, 1947/27-28

2.697 LENS, BACK-UP LAMP DOOR

1 5938015 1946-47/26-27-28 /SUPERSEDES 5933749/
2 5940663 1953-54/25-27-28 US EXC. /-62-71/
2 5938297 1953-54/25-27-28 US /-62-71/
2 5948128 1957/20 /-62F-63F/ -22 /-63F-71/ -27 /-62DF-62FC-62SDF-63F/
2 5945807 1955/27 /-62-62DF-63F/
1 5931452 GASKET, 1946-47/26-27-28
2 5940662 GASKET, 1953-54/25-27-28 US EXC. /-62-71/
2 5935956 GASKET, 1953-54/25-27-28 US /-62-71/
2 5945806 GASKET 1955-56/27 /-62-63/ WITH BACK-UP LAMPS TO BODY
2 5947861 GASKET, 1957/20 EXC. /-62F-63F/ -22 EXC. /-63F-71/ -27 EXC. /-62-63/ -28
2 5948151 GASKET 1957/20 /-62F-63F/ -22 /-63F-71/ -27 /-62-63/
4 5945860 SCREW 1957/27-28

2.697 SWITCH, BACK-UP LAMP

1 510964 1946-47/26-27-28
1 509294 NUT, 1946-47/26-27-28
1 9400895 SCREW 1956-57/27-28 EXC. HT 5/16-24 X 1

2.697 BRACKET, BACK-UP LAMP MOUNTING

1 5936169 1946-47/26-27-28

2.697 HOLDER AND WIRE, BACK-UP LAMP FUSE

1 5933754 1946-47/26-27-28 MALE
1 5933755 1946-47/26-27-28 FEMALE

2.697 PAD, BACK-UP LAMP TO BODY

2 515479 1953-54/25-27-28 US EXC. /-62-71/
1 512320 1953-54/25-27-28 US /-62-71/ RIGHT
1 5939487 1949-50/25-27 US EXC. /-61-62-71/, 1953-54/25-27-28 US /-62-71/ LEFT

2.697 WIRE ASSEMBLY, BACK-UP LAMP

1 5293127 1953-54/25-27-28 US EXC. HT
1 5293128 1953-54/25-27-28 US HT

2.697 SPACER, BACK-UP LAMP TO BODY

4 5939849 1953-54/25-27 US /-62-71/

2.697 STRIP, BACK-UP LAMP LENS DECORATIVE

4 5940666 1953-54/25-27-28 US EXC. /-62-71/

2.697 CONNECTOR, STEERING COLUMN STOP LAMP WIRE TO BODY

1 5289770 1953-54/25-27-28 WITH TURN SIGNAL

2.697 SOCKET AND WIRE, BACK-UP LAMP

2 5940664 1953-54/25-27-28 US EXC. /-62-71/

2.697 COVER, BACK-UP LAMP OPENING

2 519637 1955-56/ALL EXC. /-62-63-71/
2 519642 GASKET 1955-56/ALL EXC. /-62-63-71/

2.697 SWITCH, BACK-UP LAMP - SERVICED BY UNITED MOTOR SERVICE - AC DISTRIBUTORS

1 1997895 1953-54/25-27-28 US EXC. HT
1 1998141 1956/27-28 EXC. HT
1 1998129 1956-57/27-28 HT WITH CC TRANS.
1 5948185 1955-57/20-22 ST - SERVICED BY GM



2.700 LAMP, REAR LICENSE

1	927421	1946-48/20 ALL -22 EXC. /-71/ -25-27/ALL -26-28 EXC. /-07/
1	927420	1946-47/26-28 /-07/
2	927594	1949/20 ALL -22 EXC /-71/ FIRST JOBS WITH BAYONET TYPE WIRING TERMINALS AND CONNECTORS -25-27 /927582/
2	927656	1949/20 ALL -22 EXC. /-71/ AFTER JOBS, 1950/ALL EXC. 22 /-71/
2	927655	1951/20 ALL -22 EXC. /-71/
1	927803	1951-52/25-27 /SUPERSEDES 927784/
1	927655	1951-52/20 ALL -22 EXC. /-71/
1	897463	1953-54/ALL EXC -22 /-71/ -25-27 /-62-71/ /SUPERSEDES 928796/
1	898585	1953-54/22 /-71/ -25-27 /-62-71/ /SUPERSEDES 897465/
1	897574	1955-56/ALL EXC. /-62-63-64-71/
2	897701	1955-56/20 /-62F-63F/ -22 /-63F-71/ -27 /-62-63-64/
2	897703	1955/27 /-62-63/
2	898302	1957/ALL

2.701 SUPPORT, REAR LICENSE BRACKET

1	604288	1946-48/22 /-71/
---	--------	------------------

2.702 PAD, REAR LICENSE LAMP

1	3663703	1946-47/20 EXC. /-07-69/ -22 EXC. /-71/ -25 EXC. /-07-69/ -27 EXC. /-07/, 1948/20 EXC. /-07-69/ -22 EXC. /-71/ -25-27 EXC. /-07-07D/
1	3663782	1946-47/20 /-07-69/ -25 /-07-69/ -26 /-09/ -27 /-07/ -28 /-09/, 1948/20 /-07-69/ -25-27 /-07-07D/
2	3688071	1949-50/ALL EXC. 22 /-71/

2.702 GROMMET, REAR LICENSE WIRE - THRU FLOOR PAN

1	514383	1951-52/25-27
1	515506	1953-54/25-27 EXC. /-62-71/
AR	518955	1955-56/ALL EXC. /-62-63-71/ - THRU BUMPER APRON
2	4648242	1957/27 EXC /-62-63-64/ -28

2.703 SPACER, REAR LICENSE LAMP

1	508702	1946-47/26-28 /-07/ LOWER
1	508701	1946-47/26-28 /-07/ LAMP TO BODY UPPER

2.705 BRACKET, LICENSE PLATE LAMP

1	5942458	1953-56/ALL EXC. /-62-63-64-71/
---	---------	---------------------------------

2.705 NIPPLE, LICENSE PLATE LAMP SOCKET

1	5943384	1953-54/ALL EXC. 22 /-71/, 1955-56/ALL EXC. /-62-63-71/
---	---------	---

2.705 BODY, LICENSE PLATE LAMP

2	5946128	1955-56/20 /-62F-63F/ -22 /-63F-71/
---	---------	-------------------------------------

2.705 SHIELD, LICENSE LAMP GRAVEL

2	5763574	1957/20-22
---	---------	------------

2.706 COVER, REAR LICENSE LAMP

1	5932763	1946-48/20 ALL -22 EXC. /-71/ -25-26-27-28 CHROME
2	5938036	1949-50/ALL EXC -22 /-71/
1	5939878	1951-52/20 ALL -22 EXC. /-71/
1	5939872	1951-52/25-27, 1953-54/22 /-71/
1	5942309	1953-54/ALL EXC /-62-71/ /SUPERSEDES 5943380/
1	5939957	1953-54/25-27 /-62-71/

2.706 DOOR, REAR LICENSE PLATE LAMP

2	5945959	1955/20 /-63F/ -22 /-63F-71/ -27 /-62-63/, 1956/20 /-63F/ -22 /-63F-71/ -27 /-62-62DF-63F-64DF/
---	---------	---

2.707 GASKET, REAR LICENSE LAMP OUTLOOK LENS

1	5932762	1946-48/20 ALL -22 EXC. /-71/ -25-26-27-28
1	5937940	1949-50/ALL EXC. 22 /-71/
1	5939870	1951-52/25-27, 1953/25-27 /-62-71/, 1954/22 /-71/ -25-27 /-62-71/
1	5935949	1953-56/ALL EXC. /-62-63-64-71/ INNER LARGE
1	5936537	1953-56/ALL EXC. /-62-63-64-71/ OUTER /1-5/16 IN. OD X 1-1/2 IN. OD/



1946-
-1957

Pontiac

PARTS
CATALOGUE NO. 572

2.708 SCREW, REAR LICENSE LAMP COVER

AR 3719610 1955-56/20 /-63F/ -22 /-63F-71/ -27 /-62-63/ LICENSE LAMP AND DOOR
8-32 X 35/64
4 524396 1957/ALL

2.708 NUT, REAR LICENSE LAMP NIPPLE

2 5943619 1953-55/ALL EXC. /-62-63-64-71/ /10-32/

2.709 LENS, REAR LICENSE LAMP OUTLOOK

1 5932761 1946-48/20 ALL -22 EXC. /-71/ -25-26-27-28
2 5938832 1949-50/ALL EXC. 22 /-71/
1 5940480 1951-52/20 ALL -22 EXC. /-71/
1 5940540 1951-52/25-27, 1953/22-25-27 /-62-71/, 1954/22 /-71/ -25-27 /-62-71/
1 5935947 1953-56/ALL EXC. /-62-63-64-71/
1 5947721 1957/ALL

2.710 EMBLEM - NAME PLATE, REAR LICENSE LAMP

1 5812150 NAME PLATE, 1946/20 ALL -22 EXC. /-71/ -25-26-28
1 505612 NAME PLATE, 1947-48/20 ALL -22 EXC. /-71/ -25-26-27-28

2.714 SOCKET AND WIRE, REAR LICENSE LAMP

1 5945492 1955-56/ALL EXC. /-62-63-64-71/ INCLUDES DOOR
2 5946129 1955/20 /-63F/ -22 /-63F-71/, 1956/20 /-62F-63F/ -22 /-63F-71/
2 5947723 1957/ALL

2.714 WIRE ASSEMBLY, REAR LICENSE LAMP

1 5932806 1946-48/ALL EXC. 22 /-71/
1 5760681 1957/20 EXC /-62F-63F/ -22 EXC /-63F-71/ EXTENSION

2.714 SOCKET, REAR LICENSE LAMP BULB

1 5932764 1946-48/ALL EXC. 22 /-71/
2 5937937 1949/ALL EXC. /-71/

2.714 GASKET, REAR LICENSE LAMP SOCKET

1 5932793 1946-48/ALL EXC. 22 /-71/

2.721 SPRING, HEADLAMP INNER TO OUTER BODY

8 1798315 1946/20-22-25, 1947/20-22-25-27 FIRST JOBS 20 COILS
4 5931749 1946/26-28, 1947/26-28 FIRST JOBS 14 COILS
2 5836781 1947/20-22-25-27 AFTER JOBS, 1948-54/ALL EXC. 28 1955/20-22 /10 COIL/

2.721 SPRING, HEADLAMP INNER BODY TENSION

2 5937452 1947-54/ALL US, 1955/27-28 FIRST JOBS 1-1/2 IN OVERALL LENGTH
2 5946543 1955/27-28 AFTER JOBS, 1956/ALL, 1957/27-28 1-1/4 IN OVERALL LENGTH

2.722 GASKET, HEADLAMP TO FENDER

2 413994 1946-48/20-22
2 3716109 1949-54/20-22 /SUPERSEDES 3691000/
2 515258 1953-54/25-27-28 TO FENDER
2 519628 1955-56/ALL TO FENDER

2.725 HEADLAMP

2 925185 1946-48/20-22
2 925177 1946-48/25-26-27-28
2 925795 1949-52/20-22 SEALED BEAM
2 925809 1949-52/25-27
2 897495 1953/20-22
2 925971 1953-54/25-27-28 WITH DOOR
2 897584 1954/20-22 WITH DOOR
2 5799863 1955/20-22 WITH DOOR
2 897852 1955/27-28 WITH DOOR
2 5799930 1956/20-22 WITH DOOR
2 898137 1956/27-28
2 5783417 1957/20
2 5783418 1957/22
2 898307 1957/27 /-19D-37D-39D-62DF-64DF/ -28 WITH CHROME DOOR
2 898526 1957/27 /-11-19-37-39-62FC-63F/ WITH PAINT DOOR



2.725 LUG, HEADLAMP DOOR MOUNTING

2	5942226	1956/20-22
2	5848615	1957/2/-22 - BOTTOM
4	5848614	1957/20-22 - TOP

2.726 RING, HEADLAMP MOUNTING

2	1798310	1946-54/ALL CAN., 1955/20-22 /2-7/16/
2	924535	1946-54/25-26-27-28 US, 1955/27-28 FIRST JOBS 3 SLOTS
2	5947771	1955/27-28 AFTER JOBS, 1956-57/ALL

2.726 BODY, HEADLAMP

2	5836792	1946-48/25-27
2	5836783	1946-48/20-22
2	5836788	1949-52/20-22
2	5836949	1949-52/25-27
2	5842908	1953/20-22
2	5842656	1953-54/25-27 CAN.
2	5940667	1953-54/25-27-28 US
2	5846876	1954/20-22
2	5847041	1955/20-22
2	5946624	1955/27-28, 1956/ALL
2	5848542	1957/20-22
2	5947832	1957/27-28

2.727 SEALED BEAM UNIT, HEADLAMP

2	5788483	1946-54/ALL GLASS BACK /SUPERSEDES 5762278 - 5947206/
2	5788484	1955-57/ALL GLASS BACK - 12 VOLT /SUPERSEDES 5947212 - 5762170/

2.728 DOOR, HEADLAMP

2	5932799	1946-48/20-22
2	5932754	1946-48/25-26-27-28
2	5941285	1949-52/20-22 COMPLETE
2	5940532	1949-52/25-27 CHROME
2	5940567	1951-52/25-27 PRIME
2	5942827	1953/20-22
2	5940574	1953-54/25-27-28
2	5944987	1954/20-22
2	5945563	1955/ALL
2	5947113	1956/ALL
2	5761879	1957/20 WITH BEZEL
2	5761880	1957/22
2	5947742	1957/27 /-19D-37D-39D-62DF-64DF/ -28 - WITH BEZEL
2	5948418	1957/27 /-11-19-37-39-62FC-63F/

2.728 BEZEL, HEADLAMP DOOR

2	5947745	1957/20 ALL -27 /-19D-37D-39D-62DF-64DF/ -28
---	---------	--

2.729 SCREW, HEADLAMP DOOR

2	924622	1946-48/20-22, 1949/ALL /513417/
2	3719483	1955/ALL, 1956/20-22

2.730 SPRING, HEADLAMP LENS GASKET RETAINING

AR	5939791	1946-52/ALL
2	5945961	1955-56/ALL

2.731 RING, HEADLAMP LENS RETAINING

2	1798304	1946-54/ALL, 1955/20-22 ALL -27-28 FIRST JOBS 3 SLOTS
2	5946431	1955/27-28 AFTER JOBS USED WITH RETAINING RING HOOKED ON WITH A SPRING, 1956/20-22 FIRST JOBS
2	5948399	1956/20-22 AFTER JOBS -27-28, 1957/ALL

2.735 SEAL, HEADLAMP LENS

2	5930594	1946-54/ALL DOOR RUBBER GASKET
---	---------	--------------------------------

2.735 GASKET, HEADLAMP DOOR SEAL

2	5945454	1954/20-22
2	5945844	1955-57/ALL

2.736 SCREW, HEADLAMP MOUNTING RING

6	924552	1946-56/ALL
---	--------	-------------



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**2.736 CLIP PACKAGE, HEADLAMP RIM SPRING**

AR 5947712 1955/27-28, 1956/20-22 FIRST JOBS - INCLUDES 10 CLIPS - FOR SPECIAL SERVICE ON MODELS HAVING SEALED BEAM UNIT RETAINING RING HOOKED ON WITH A SPRING - NO SIMILAR PART REQUIRED FOR AFTER JOBS

2.737 SCREW, HEADLAMP ADJUSTING

4 5843602 1946-55/ALL, 1956-57/20-22
4 5785367 NUT, 1946-54/ALL, 1955/20-22 - CONSISTS OF 50 PCS OF 5930896
4 5939769 NUT, 1949-56/ALL, 1957/20-22 WITH GUIDE LAMPS

2.746 SPRING, HEADLAMP DOOR SEAL RETAINING

2 5939790 1950-52/20-22
2 5939983 1951-52/25-27 TOP
2 5943966 1954/20-22
2 5940578 1953-54/25-27-28 TOP
6 5940579 1953-54/25-27-28 SIDE AND BOTTOM

2.746 SPRING, HEADLAMP DOOR GASKET RETAINING

6 5943967 1953/20-22
6 5945525 1954/20-22

2.750 WIRE AND SOCKET, HEADLAMP

2 5835681 1946-48/20-22
2 5932941 1946-47/26-28
2 5931866 1946-48/25-27
2 5837633 1949-52/20-22 USED WITH CAN. MOTOR LAMP
2 5837882 1949-52/25-27
2 5846878 1953-54/ALL
2 5945707 1955-56/20-22 /SUPERSEDES 5847001/
2 5945680 1955-56/27-28
2 5948212 1957/20-22
2 5947831 1957/27-28
2 5831756 LOOM AND BUSHING, WIRING 1946-47/20-22

2.750 CLIP, HEADLAMP CONNECTOR BODY TO FENDER SKIRT

2 523928 1957/27-28

2.761 BODY, FUSE HOLDER CONNECTOR

1 1220246 1953/20-22 WITH TURN SIGNAL MALE

2.767 HOLDER AND WIRE, DIRECTION SIGNAL FUSE

1 5846683 1953-54/20-22 WITH TURN SIGNALS /SUPERSEDES 3704586/

2.776 SOCKET AND WIRE, INSTRUMENT LAMP

1 1885070 1946-48/ALL

2.810 HORN - SERVICED BY AUTO-LITE

1 5837825 1949-50/20-22-25-27, 1951-54/25-27-28 LOW NOTE RIGHT
1 5837826 1949-50/20-22-25-27, 1951-54/25-27-28 HIGH NOTE LEFT
1 5837829 1951-54/20-22 LOW NOTE
1 5837830 1951-54/20-22 HIGH NOTE
1 5755122 1955-56/20-22 LOW NOTE RIGHT
1 5755121 1955-56/20-22 HIGH NOTE LEFT
NOTE. OTHER MODELS SERVICED BY DELCO-REMY DISTRIBUTORS

2.810 HORN - SERVICED BY DELCO-REMY DISTRIBUTORS

1 9000310 1946-48/ALL JOBS WITH DUAL HORNS LOW NOTE /1999632/
1 9000309 1946-48/ALL JOBS WITH DUAL HORNS HIGH NOTE /1999631/
1 9000303 1955-56/27-28 LOW NOTE RIGHT /SUPERSEDES 1997768/
1 9000304 1955-56/27-28 HIGH NOTE LEFT
1 9000346 1957/20-22 - VIBRATOR - HIGH NOTE - RIGHT /SUPERSEDES 9000326/
1 9000345 1957/20-22 - VIBRATOR - LEFT /SUPERSEDES 9000325/
1 9000345 1957/27-28 - LOW NOTE - RIGHT /SUPERSEDES 9000317/
1 9000346 1957/27-28 - HIGH NOTE - LEFT /SUPERSEDES 9000318/

2.815 RELAY, HORN - SERVICED BY DELCO-REMY DISTRIBUTORS

1 1116775 1946-54/ALL
1 1116781 1955-56/ALL /SUPERSEDES 1116913/
1 1116920 1957/ALL
2 3650059 SCREW, HEX. HD. #14-10 X 3/4



2.816 SPRING, HORN BLOWING

1	757518	1949-54/20-22 WITH DELUXE WHEEL ON 1949-54/22
1	760084	1955-57/20-22 WITH DELUXE WHEEL ON 1955-56/22
1	760299	1955-56/22 WITH STANDARD WHEEL

2.817 CAP, STEERING WHEEL

1	755872	1946-48/22 WITH STD. WHEEL
1	5822629	1946-47/20-22 WITH DELUXE WHEEL
1	507532	1946-47/26-28, 1948/25-27 /-07-11-19-27/ WITH STD. WHEEL
1	5835806	1948/20-22 WITH DELUXE WHEEL
1	509557	1948/25-27 WITH DELUXE WHEEL
1	5837641	1949-50/22 WITH STANDARD WHEEL
1	5837795	1949-50/20-22 WITH DELUXE WHEEL
1	511934	1949-50/25-27 EXC. /-07D-08D-11D-27D-69D/ WITH STD. WHEEL
1	512418	1949/25-27 HORN RING WITH DELUXE WHEEL
1	513826	1950/25-27 HORN RING WITH DELUXE WHEEL
1	5841961	1951-52/22 WITH STD. WHEEL
1	5840414	1951/20-22 WITH DELUXE WHEEL
1	515705	1951/25 /-07-11-27-69/ -27 /-69/, 1952/25-27 /-11-69/ WITH STD WHEEL /SUPERSEDES 514650/
1	515706	1951/25-27 HORN RING WITH DELUXE WHEEL, 1952/25-27 /-11-11D-69-69D/ ALL -37 EXC WITH TRIM 495 RED WITH DELUXE WHEEL
1	5842981	1952/20-22 WITH DELUXE WHEEL
1	516525	1952/25-27 /-37D/ WITH TRIM COMB #495 GREEN WITH DELUXE WHEEL
1	516842	1953/25-27 EXC. /-37SD/, 1954/25-27 ALL -28 EXC. /-37SD/ EXC. POWER STEERING WITH DELUXE WHEEL
1	517175	1953/25-27 /-37SD/
1	5843278	1953-54/20-22 WITH DELUXE WHEEL WITH SPRING
1	5842825	1953-54/22 WITH STD. WHEEL
1	516940	1953-54/25-27-28 WITH STD. WHEEL
1	518346	1954/25-27-28 /-37SD-69WSD/ EXC. POWER STEERING BEIGE
1	518347	1954/25-27-28 /-37SD-69WSD/ EXC. POWER STEERING CORAL RED
1	518348	1954/25-27-28 /-37SD-69WSD/ EXC. POWER STEERING YELLOW
1	518349	1954/25-27-28 /-37SD-69WSD/ WITH POWER STEERING CORAL RED
1	518350	1954/25-27-28 /-37SD-69WSD/ WITH POWER STEERING YELLOW
1	517904	1954/25-27-28 /-37SD-69WSD/ WITH POWER STEERING BEIGE
1	517903	1954/25-27-28 WITH DELUXE WHEEL AND POWER STEERING RED
1	5847296	1955/22 WITH STD. WHEEL
1	5798075	1955/20-22 FIRST JOBS WITH DELUXE WHEEL WITH ANCHOR AND SPRINGS BOSS NOT DRILLED
1	5755608	1955/20-22 AFTER JOBS, 1956/20-22, WITH DELUXE WHEEL DRILLED BOSS UNDER SPOKE
1	519591	1955/27 /-11-19-62-63F/ WITH STD. WHEEL
1	519508	1955/27-28 WITH DELUXE WHEEL EXC. POWER STEERING BLACK
1	519594	1955/27-28 WITH DELUXE WHEEL AND POWER STEERING BLACK
1	520597	1955/28 /-37SD-19SD/ EXC. POWER STEERING TURQUOISE BLUE
1	520596	1955/28 /-37SD-19SD/ WITH POWER STEERING TURQUOISE BLUE
1	520598	1955/28 /-37SD-19SD/ EXC. POWER STEERING FIREGOLD
1	520595	1955/28 /-37SD-19SD/ WITH POWER STEERING FIREGOLD
1	5757183	1956/22 WITH STD. WHEEL
1	522306	1956/27-28 WITH STD. WHEEL
1	521501	1956/27 /-19D-39D-37D-62DF-64DF/ -28 EXC. POWER STEERING
1	521488	1956/27-28 WITH POWER STEERING
1	523481	1957/27-28 WITH STD WHEEL
1	5760343	1957/20-22
3	3711503	SCREW, #6-32 X 3/8 1955-56/20-22 WITH DELUXE WHEEL
2	5755139	SCREW, 6-32 X 5/8, 1955/20-22 FIRST JOBS WITH DELUXE WHEEL

2.817 ADAPTER, HORN BUTTON CAP

1	759604	1955-56/22 WITH STANDARD WHEELS
---	--------	---------------------------------

2.817 LENS, HORN RING CAP

1	5847489	1955-56/20-22 WITH DELUXE WHEEL
---	---------	---------------------------------

2.817 PLATE, HORN RING CAP RETAINER ANCHOR

1	5847484	1955/20-22 FIRST JOBS WITH DELUXE WHEEL NO SIMILAR PART ON AFTER JOBS
---	---------	---



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**2.817 SPACER AND EMBLEM, HORN RING CAP**

1	5847485	1955/20-22 WITH DELUXE WHEEL EXC. POWER STEERING
1	5847486	1955/20-22 WITH DELUXE WHEEL AND POWER STEERING
1	5756486	1956/20-22 WITH DELUXE WHEEL EXC. POWER STEERING
1	5757809	1956/20-22 WITH DELUXE WHEEL AND POWER STEERING
1	523174	1957/27 /-19D-37D-39D-62DF-64DF/ -28

2.817 EMBLEM, STEERING WHEEL HORN RING

1	523155	1957/27 /-19D-37D-39D-62DF-64DF/ -28 EXC. PS - PLASTIC
---	--------	--

2.817 PLATE, STEERING WHEEL HORN RING

1	523931	1957/27 /-19D-37D-39D-62DF-64DF/ -28
---	--------	--------------------------------------

2.819 CONNECTOR, HORN CABLE

1	3114169	1946-48/25-26-27-28 2 WIRE TYPE
---	---------	---------------------------------

2.819 CONTACT AND SPRING, HORN CONNECTOR

1	5660046	1946-56/25-26-27-28 WITH DELUXE WHEEL /SUPERSEDES 264995/
1	761670	1957/27 /-19D-37D-39D-62DF-64DF/ -28
1	5660044	INSULATOR 1946-56/25-26-27-28 WITH DELUXE WHEEL

2.819 CUP, HORN CONTACT SUPPORT

1	756485	1946-48/20-22 WITH DELUXE WHEEL
NOTE. REPAINT TO REQUIRED COLOR FOR USE ON 1946 MODELS.		

2.819 BUSHING, HORN BLOWING RING

3	757520	1953-54/20-22 WITH DELUXE WHEEL ON 22
1	3739140	1955-56/20-22 WITH DELUXE WHEEL - INCLUDES INSERT
1	760244	1955-56/22 WITH STD. WHEEL CAP ADAPTER BUSHING
1	3737930	1957/20-22 INCLUDES INSERT

2.819 CONTACT, HORN BUTTON

1	758566	1953-54/22 EXC. DELUXE WHEEL
---	--------	------------------------------

2.820 SPRING, STEERING WHEEL HUB CAP

1	758595	1952/20-22 OPTIONAL EQUIPMENT 2200
1	758604	1953-54/20-22 WITH DELUXE WHEEL ON 22

2.820 CAP, HORN BLOWING

1	5760343	1957/20-22
---	---------	------------

2.821 RETAINER, HORN BUTTON

1	506741	1946-47/26-28, 1948-52/25-27 /-07-08-11-19-27-69/ WITH STD. WHEEL
3	3719976	1955/20-22 FIRST JOBS WITH DELUXE WHEEL NO SIMILAR PART ON AFTER JOBS
3	3712991	1955-56/22 WITH STD. WHEEL
1	263703	RING, 1946-47/26-28, 1948-52/25-27 /-07-08-11-19-27-69/ WITH STD. WHEEL

2.821 SPACER, HORN BUTTON CAP

1	511935	1949-51/25-27 EXC. /-07D-08D-11D-27D-69D/, 1952/25-27 /-11-69/ WITH STD. WHEEL
2	5755585	1955/20-22 FIRST JOBS WITH DELUXE WHEEL NO SIMILAR PART ON AFTER JOBS

2.821 CUP, HORN CONTACT

1	755856	1946/22 WITH STD. WHEEL
1	754060	1946-48/20-22 WITH DELUXE WHEEL
1	756473	1947-48/22 WITH STD. WHEEL
1	758409	1953-54/25-27-28 WITH STD. WHEEL
1	759802	1955-56/27 WITH STD. WHEEL
1	761710	1957/27 WITH STD WHEEL
1	755855	RETAINER, 1946/22 WITH STD. WHEEL

2.821 INSULATOR, HORN BUTTON RING GUIDE

AR	507440	1946-48/25-26-27-28 WITH DELUXE WHEEL
1	514412	1951-54/25-27-28 WITH DELUXE WHEEL
1	519397	1955-56/27-28 WITH DELUXE WHEEL
1	761220	1957/27 /-19D-37D-39D-62DF-64DF/ -28 HORN RING SPRING



- 2.821 SCREW, HORN BUTTON CUP BUSHING
 3 530180 1953-54/25-27-28, 1955/27, 1956-57/27 /-11-19-37-39-62FC-63F/ WITH
 STD WHEEL /SUPERSEDES 759146/
 3 761221 1957/27 /-19D-37D-39D-62DF-64DF/ -28
- 2.821 BUSHING, HORN BUTTON SPACER
 3 757440 1953-54/25-27-28, 1955/27, 1956-57/27 /-11-19-37-39-62FC-63F/ - WITH
 STD. WHEEL
- 2.821 ADAPTER, STEERING WHEEL HORN RING
 1 761219 1957/27 /-19D-39D-37D-62DF-64DF/ -28
 3 762275 INSERT 1957/27 /-19D-37D-39D-62DF-64DF/ -28 /761538/
- 2.822 CONTACT, HORN BUTTON
 1 504339 1946-48/25-26-27-28-29 WITH DELUXE WHEEL
 1 265172 1946-47/26-28, 1948-52/25-27 /-07-08-11-19-27-69/ WITH STD. WHEEL
 1 756398 1949-52/22 WITH STD. WHEEL
 1 512246 1949-56/25-27-28, WITH DELUXE WHEEL
- 2.822 SEPARATOR, HORN BUTTON CONTACT
 1 507722 1946-56/25-26-27-28 - RUBBER - WITH DELUXE WHEEL
 1 264584 1946-47/26-28, 1948-52/25-27 /-07-08-11-27-69/ RUBBER WITH STD.
 WHEEL
- 2.822 RING, HORN BUTTON CONTACT
 1 507519 1946-47/25-26-27-28 WITH DELUXE WHEEL
 1 509556 1948/25-27 WITH DELUXE WHEEL
 1 506075 1949-56/25-27-28 WITH DELUXE WHEEL
- 2.822 PLATE, HORN BUTTON CONTACT SEPARATOR BACKING
 1 508133 1946-48/25-26-27-28 WITH DELUXE WHEEL
- 2.822 SPRING, STEERING WHEEL HORN RING
 1 512247 1949-52/25-27 WITH DELUXE WHEEL GROUND
 1 761218 1957/27 /-19D-37D-39D-62DF-64DF/ -28
- 2.822 CONTACT, STEERING WHEEL HORN RING
 1 512246 1949-52/25-27 WITH DELUXE WHEEL
- 2.822 PLATE, HORN BUTTON CONTACT RETAINER
 1 512734 1949-52/25-27 WITH DELUXE WHEEL
 1 517258 1953-56/25-27-28 WITH DELUXE STEERING WHEEL
 1 761222 1957/27 /-19D-37D-39D-62DF-64DF/ -28
- 2.822 PLATE, HORN BUTTON CONTACT
 1 758407 1953-54/25-27-28, 1955/27, 1956/27 /-11-19-37-39-62FC-63F/ - WITH STD.
 WHEEL
 1 761517 1957/27 /-11-19-37-39-62FC-63F/
- 2.823 PLATE, HORN BUTTON GROUND
 2 509553 1946-47/25-27 ALL -26-28 WITH DELUXE WHEEL
- 2.823 SPRING, HORN BUTTON
 1 755854 1946-48/22 WITH STD. WHEEL
 1 758408 1953-54/25-27-28, 1955/27, 1956-57/27 /-11-19-37-39-62FC-63F/ - WITH
 STD. WHEEL
- 2.824 INSULATOR, HORN BUTTON CONNECTOR
 1 759230 1949-52/20-22, 1953-54/ALL, 1955-57/20-22-27 WITH STD. WHEEL ON 25-27-
 28
- 2.824 CONTACT AND SPRING, HORN BLOWING RING
 1 759037 1949-52/20-22, 1953-54/ALL, 1955-57/20-22-27 USED WITH STD. WHEEL ON
 25-27-28
- 2.829 RING, HORN BUTTON LOCK
 1 265173 1946-47/26-28, 1948-52/25-27 /-07-08-11-19-27-69/ WITH STD. WHEEL



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572**2.830 RING, HORN BLOWING**

1	5263283	1946-48/20-22 INCLUDES PAD WITH DELUXE WHEEL
1	508755	1946-47/25-26-27-28 WITH DELUXE WHEEL
1	510693	1948/25-27 WITH DELUXE WHEEL
1	5837677	1949-50/20-22 WITH DELUXE WHEEL
1	511993	1949-50/25-27 WITH DELUXE WHEEL
1	515701	1951-52/25-37 WITH DELUXE WHEEL
1	758573	1951-52/20-22 WITH DELUXE WHEEL
1	758475	1953-54/20-22 WITH DELUXE WHEEL ON 22
1	516941	1953-54/25-27-28 WITH DELUXE WHEEL
1	760394	1955-56/20-22
1	519302	1955-56/27-28 WITH DELUXE WHEEL
1	761436	1957/20-22
1	524174	1957/27 /-19D-39D-37D-62DF-64DF/ -28 ALL EXC. PS
1	524175	1957/27 /-19D-37D-39D-62DF-64DF/ -28 WITH PS
AR	760085	SCREW, RD. SL. HD. #10-32 X 11/16 1955-57/20-22

2.830 RING, HORN BLOWING LOCK

1	756797	1949-52/20-22 WITH DELUXE WHEEL
---	--------	---------------------------------

2.830 RING, HORN BLOWING PIVOT

1	758104	1949-52/20-22 WITH DELUXE WHEEL
1	757517	1953-54/20-22 WITH DELUXE WHEEL ON 1953-54/22
1	760083	1955-56/20-22 WITH DELUXE WHEEL ON 22
1	760222	1955-56/22 WITH STD WHEEL, 1957/20-22
1	761947	1957/20-22 ALL -27-28 WITH DELUXE WHEEL

2.830 COVER, STEERING WHEEL HORN RING

1	524239	1957/27 /-19D-37D-39D-62DF-64DF/ -28
1	524240	1957/27 /-19D-37D-39D-62DF-64DF/ -28

2.831 SPACER, HORN BUTTON RING

1	507442	1946-48/25-26-27-28 WITH DELUXE WHEEL LOWER
1	507537	1946-47/26-28, 1948/25-27 /-07-11-19-27/ WITH STD. WHEEL

2.831 INSULATOR, HORN RING

1	507959	1946-48/25-26-27-28 WITH DELUXE WHEEL
---	--------	---------------------------------------

2.834 SCREW, HORN RING CUSHION

2	754064	1946-48/20-22 WITH DELUXE WHEEL
---	--------	---------------------------------

2.835 CUSHION, HORN RING

2	754063	1946-48/20-22 WITH DELUXE WHEEL
1	754062	PAD, HORN RING 1946-48/20-22 WITH DELUXE WHEEL

2.836 SPRING, HORN RING GROUND

1	753657	1946-48/22 WITH STD. WHEEL
1	754058	1946-48/20-22 WITH DELUXE WHEEL

2.838 MOULDING, HORN RING SPOKE TRIM

1	5839022	1949-50/20-22 WITH DELUXE WHEEL RIGHT
1	5839023	1949-50/20-22 WITH DELUXE WHEEL LEFT

2.845 BRACKET, HORN

AR	505716	1946-47/25-26-27-28, 1948/ALL, 1949-54/25-27-28 WITH DUAL HORNS
1	5833728	1946-47/20-22 RIGHT
1	5833727	1946-47/20-22 LEFT
2	5837646	1949-50/20-22
1	5841524	1951-52/20-22
1	5843186	1953-54/20-22
1	3710996	1955-56/20-22 RIGHT
1	3710995	1955-56/20-22 LEFT
2	1924440	1955-56/27-28

2.845 REINFORCEMENT, HORN MOUNTING BRACKET

1	5843188	1953-54/20-22
---	---------	---------------

2.851 PLATE, HORN SUPPORT CLAMPING-SERVICED BY UNITED MOTOR SERVICE DISTRIBUTORS

1	815474	1946-54/ALL
---	--------	-------------



2.859 WIRE, HORN

1	266918	1946-48/25-26-27-28 AT HORN BUTTON
1	266058	1946-48/20-22 AT HORN BUTTON
1	5833818	1946/20-22 TO JUNCTION BLOCK
1	5660683	1949-52/25-27
1	5296935	1953-54/25-27-28 INCLUDES CONTACT
1	2961695	1955-56/27-28
1	5670954	1957/27-28

2.859 GROMMET, HORN WIRE THROUGH DASH

1	487168	1946-47/25-26-27-28
---	--------	---------------------

2.859 CLAMP, HORN WIRE TO STEERING COLUMN JACKET

1	269521	1946-48/25-26-27-28, 1949-50/ALL
1	3711106	1955/20-22 EXC. AT WITH DIRECTION SIGNALS, 1956/20-22 EXC. AT
1	3729345	1955/20-22 AT WITH DIRECTION SIGNALS, 1956/20-22 AT, 1957/20-22 /SUPERSEDES 5847407/
1	3729345	1957/20-22

2.859 STRIP, STEERING GEAR HORN GROUND

1	5683937	1957/27-28 - AT LOWER END OF UPPER STEERING SHAFT
---	---------	---

2.892 FLASHER UNIT, SIGNAL

1	5947767	1953-54/ALL /SUPERSEDES 1464798/
1	3713382	1955/20-22, 1956-57/ALL
1	5943797	1955/27-28
1	560172	CONNECTOR 1953-54/ALL, 1955/27-28
1	3712856	CLIP, MOUNTING 1955/20-22
1	3724755	CLIP, MOUNTING 1956-57/20-22

2.892 SOCKET AND WIRE, SIGNAL WIRING HARNESS

2	2963861	1955/27-28
2	1886497	1956-57/27-28

2.895 CONTROL, DIRECTION SIGNAL

1	928459	1953-54/25-27-28 EXC. HT
1	928460	1953-54/25-27-28 HT

2.895 CONTROL, DIRECTION SIGNAL - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1995593	1955/27-28 EXC. HT
1	1995592	1955/27-28 HT
1	1995804	1956/27-28 EXC. HT
1	1995803	1956/27-28 HT
1	1995812	1957/27-28 HT WITH CC TRANS. - SWITCH /LESS ROD/
1	1995813	1957/27-28 EXC. HT - SWITCH /LESS ROD/

2.895 SWITCH, SIGNAL LAMP

1	897125	1953-54/20-22
1	5847475	1955/20-22 AT
1	5757273	1956/20-22 AT
1	1998190	1957/27-28

2.895 SWITCH AND WIRING, SIGNAL

1	5947677	1953-54/20-22 /5942425/
1	5942764	1953-54/25-27-28
1	5946119	1955/20-22
1	5947081	1956/20-22
1	5948447	1957/20-22
1	1998138	1957/27-28
1	3729122	CLIP 1956-57/20-22
1	2965017	CONNECTOR 1957/20-22

2.895 BASE AND WIRE, SIGNAL SWITCH - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1929732	1955/27-28
1	1932941	1956/27-28

2.895 RING UNIT, SIGNAL LAMP SWITCH

1	897064	1953-54/ALL
1	5946114	1955-56/20-22
1	5947573	1957/20-22



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572

- 2.895 SCREW, SIGNAL SWITCH LEVER
 1 5942768 1953/ALL FIRST JOBS 13/32 LONG
 1 5944866 1953/ALL AFTER JOBS, 1954/ALL, 1955-57/20-22 3/4 LONG
- 2.895 SPRING, SIGNAL ACTUATING LEVER
 1 5942761 1953-54/ALL
- 2.895 SPRING, SIGNAL SWITCH RING CENTERING
 1 5944131 1953-54/20-22
 1 5942767 1953-54/25-27-28
- 2.895 HOUSING, STEERING WHEEL HUB COVER
 1 5946997 1955/20-22 EXC DIRECTION SIGNALS AND AT
- 2.895 PAWL, SIGNAL LAMP SWITCH
 2 5946115 1955-57/20-22
- 2.895 SPRING, SIGNAL LAMP SWITCH TENSION
 1 5946116 1955-57/20-22
- 2.895 SPRING, SIGNAL LAMP SWITCH DETENT
 1 5947013 1955-57/20-22
- 2.895 SPRING, SIGNAL SWITCH DETENT - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1925279 1955-56/27-28
- 2.895 ROLLER, SIGNAL LAMP SWITCH DETENT
 1 5946117 1955-57/20-22
- 2.895 SPRING, SIGNAL SWITCH CONTACT - SERVICED BY DELCO-REMY DISTRIBUTORS
 9 1926913 1955-56/27-28
- 2.895 CONTACTOR, SIGNAL SWITCH - SERVICED BY DELCO-REMY DISTRIBUTORS
 2 1910372 1955-56/27-28 - 3 POINTS
 1 1910373 1955-56/27-28 - 5 POINTS
- 2.895 CARRIER, SIGNAL SWITCH CONTACT - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1929763 1955-56/27-28
- 2.895 LOCKING PLATE, SIGNAL LAMP SWITCH
 1 3713031 1955-57/20-22
- 2.895 CUSHION, SIGNAL LAMP SWITCH RING
 2 5947296 1955-57/20-22
- 2.895 BEARING, DIRECTION SIGNAL ACTUATOR ROD
 1 523110 1957/27-28
- 2.895 ROD, DIRECTION SIGNAL SWITCH ACTUATOR
 1 1937041 1957/27-28
 1 1932217 SPRING 1957/27-28
- 2.896 CAM, WHEEL SIGNAL CANCELLING
 1 5943818 1953-54/20-22
 1 5942639 1953-54/25-27-28
 1 3711500 1955-56/20-22
 1 3739896 1957/20-22
 1 5942766 SPRING 1953-54/ALL
- 2.896 CAM, WHEEL SIGNAL CANCELLING - SERVICED BY DELCO-REMY DISTRIBUTORS
 1 1929717 1955/27-28
 1 1933259 1956/27-28
- 2.896 PIN, TURN SIGNAL SWITCH RELEASE
 1 271448 1957/27-28
- 2.897 LEVER, SIGNAL SWITCH
 1 5944655 1953-54/20-22
 1 5943803 1953-54/25-27-28
 1 3715098 1955-57/20-22
 1 1932216 1957/27-28 ACTUATOR ROD



2.897 LEVER, SIGNAL CONTROL - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1929716	1955/27-28
1	1933248	1956/27-28
1	523882	1957/27-28

2.899 BODY AND WIRE, PARKING LAMP

1	5940676	1953/ALL WITH SIGNALS RIGHT
1	5940675	1953/ALL WITH SIGNALS LEFT
1	5945167	1954/ALL WITH SIGNALS /SUPERSEDES 5945168/
1	5945818	1955/27-28 WITH SIGNALS RIGHT
1	5945817	1955/27-28 WITH SIGNALS LEFT
1	5847161	1955/20-22 WITH SIGNALS RIGHT
1	5847160	1955/20-22 WITH SIGNALS LEFT
1	5759358	1956/20-22 RIGHT
1	5759357	1956/20-22 LEFT
1	5947826	1956/27-28 WITH SIGNALS RIGHT /SUPERSEDES 5946852/
1	5947825	1956/27-28 WITH SIGNALS LEFT
1	5760420	1957/20-22 WITH SIGNALS RIGHT
1	5760419	1957/20-22 WITH SIGNALS - LEFT
1	5948346	1957/27-28 WITH SIGNALS RIGHT
1	5948345	1957/27-28 WITH SIGNALS LEFT

2.902 PRACKET, FLASHER SOCKET AND WIRE CONNECTOR

1	515464	1953-54/25-27-28
---	--------	------------------

2.902 CLAMP, STEERING COLUMN JACKET WIRE

1	520351	1955/27-28
1	515467	1956/27-28

2.906 HOUSING SIGNAL SWITCH - LESS WIRING

1	5942429	1953-54/20-22
1	5944624	1953-54/25-27-28 /SUPERSEDES 5944623/
1	5949082	1955-57/20-22 EXC AT /SUPERSEDES 5848209/
1	5847767	1955-56/20-22 AT
1	5762740	1957/20-22 PG /SUPERSEDES 5760151/
1	5760152	1957/20-22 TG

2.906 HOUSING, SIGNAL SWITCH - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1929785	1955/27-28 EXC. HT
1	1929731	1955/27-28 HT
1	1933565	1956/27-28 EXC. HT
1	1933564	1956/27-28 HT
1	1936556	1957/27-28 EXC. HT
1	1936555	1957/27-28 HT WITH CC TRANS.

2.906 KNOB, SIGNAL LAMP SWITCH LEVER

1	3711070	1955/20-22
1	5756963	1956/20-22
1	5760542	1957/20-22 ST

2.910 PLATE, SIGNAL SWITCH LEVER - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1929734	1955/27-28
1	1933422	1956/27-28
1	1936552	1957/27-28 - YOKE

2.910 SHIELD, DIRECTIONAL SIGNAL HOUSING

1	1936554	1957/27-28
---	---------	------------

2.914 SPRING, SIGNAL LEVER PLATE RELEASE - SERVICED BY DELCO-REMY DISTRIBUTORS

2	1921885	1955/27-28
2	1933423	1956/27-28

2.916 SPRING, TURN SIGNAL SWITCH DETENT - SERVICED BY DELCO-REMY DISTRIBUTORS

1	1929964	1957/27-28 - FLAT
---	---------	-------------------



Nut-Eze



QUICKLY



LOOSENS
SEIZED
PARTS

- CUTS THRU RUST, SCALE, PAINT, SHELLAC, CARBON, DIRT
- FREES RUSTED NUTS, BOLTS, CLAMPS, FITTINGS, JOINTS AND MOVABLE PARTS SEIZED BY CORROSION
- HANDY 8 OZ. SELF DISPENSING CONTAINER

Part No. 987882