


BRAKE OPERATING and REAR AXLE SECTION

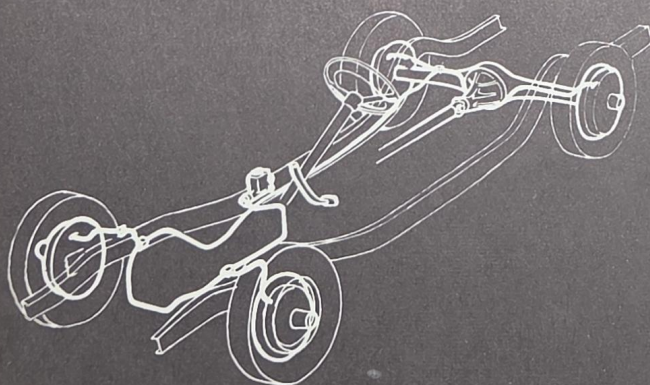

GROUP
5.000

SUB INDEX

ILLUSTRATIONS


	Page
Hydraulic Brake Parts.....	386
Hydraulic Brake Parts.....	387
Third Member Parts.....	387
Rear Axle.....	388
Rear Axle and Propeller Shaft.....	389
Differential Assembly.....	390
Universal Joint.....	390
Universal Joint.....	391
Propeller Shafts.....	392

CHART

Propeller and Axle Shafts.....	408
--------------------------------	-----


PARTS DATA

	Group
Shoe and Lining Set.....	5.017
Housing, Rear Axle.....	5.387
Shaft Axle.....	5.420
Case, Differential.....	5.510
Ring Gear and Pinion.....	5.529
Shaft Propeller.....	5.544
Joint, Universal.....	5.548
Drum, Rear Brake.....	5.809
Hub Cap.....	5.858
Wheel Disc.....	5.858

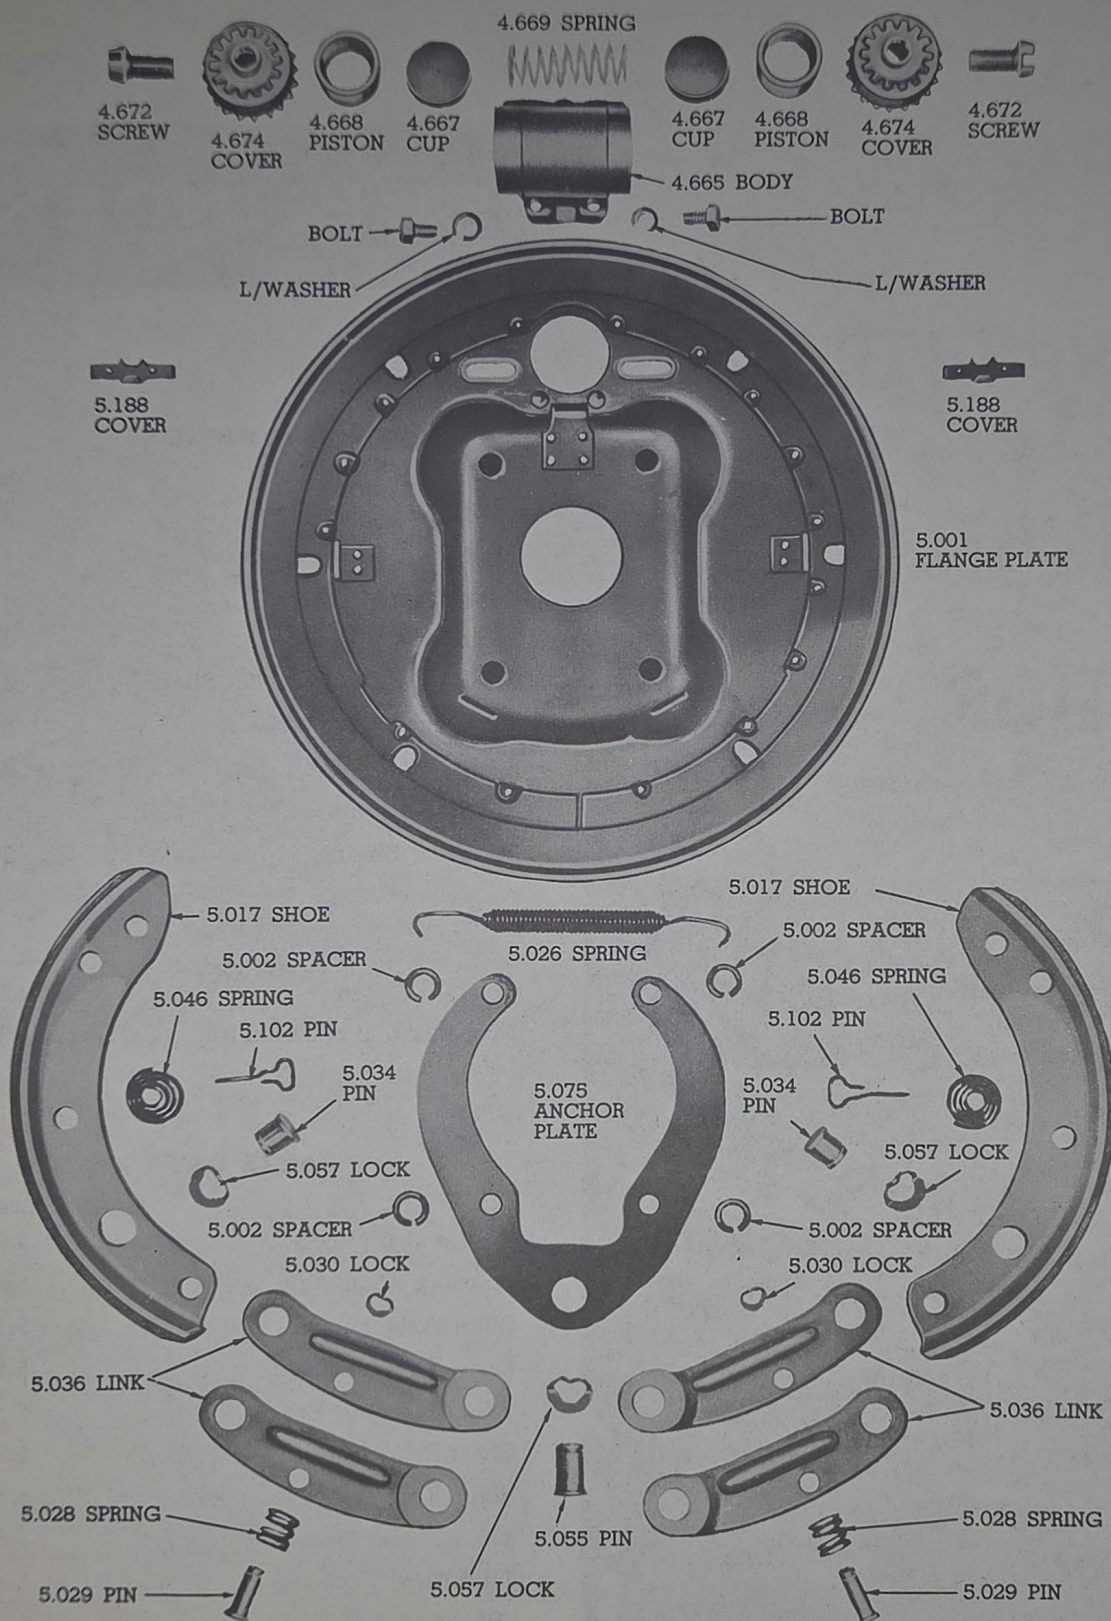
1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572BRAKES
REAR AXLE**HYDRAULIC BRAKE WHEEL INTERNAL PARTS**

386


PARTSEngineered for
Premium Performance

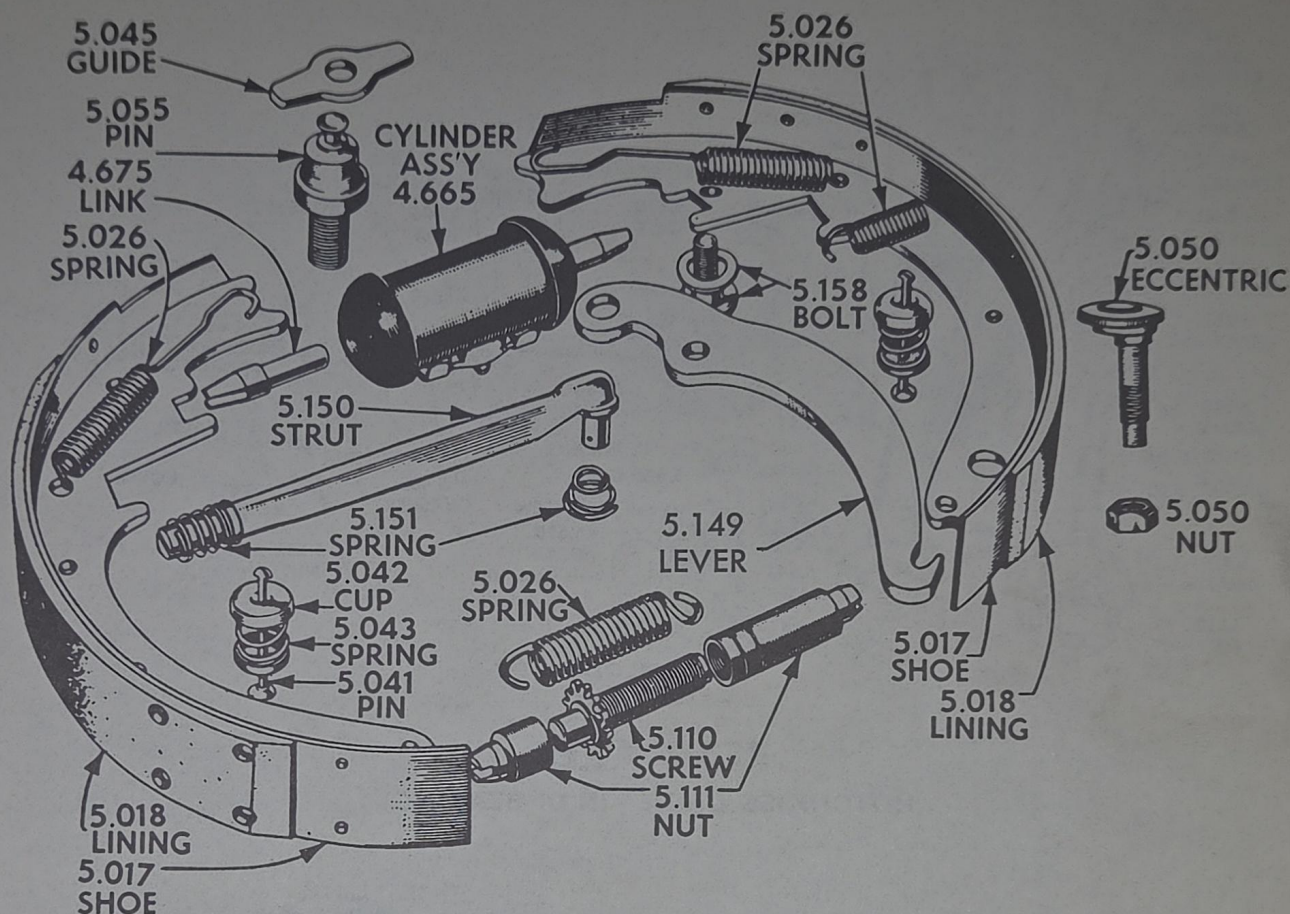


HYDRAULIC BRAKE WHEEL INTERNAL PARTS

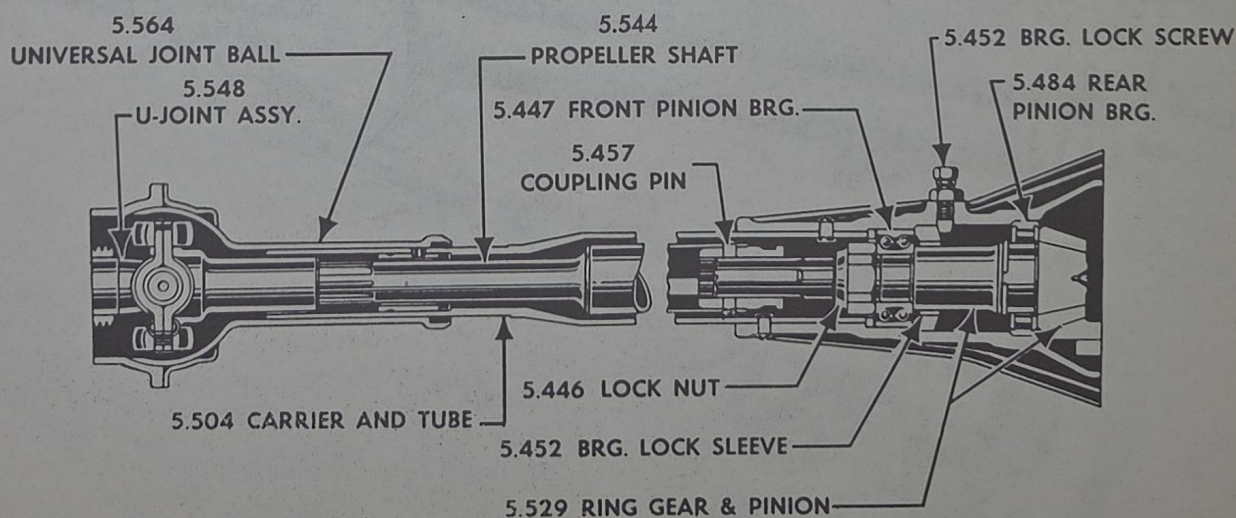


THIRD MEMBER PARTS

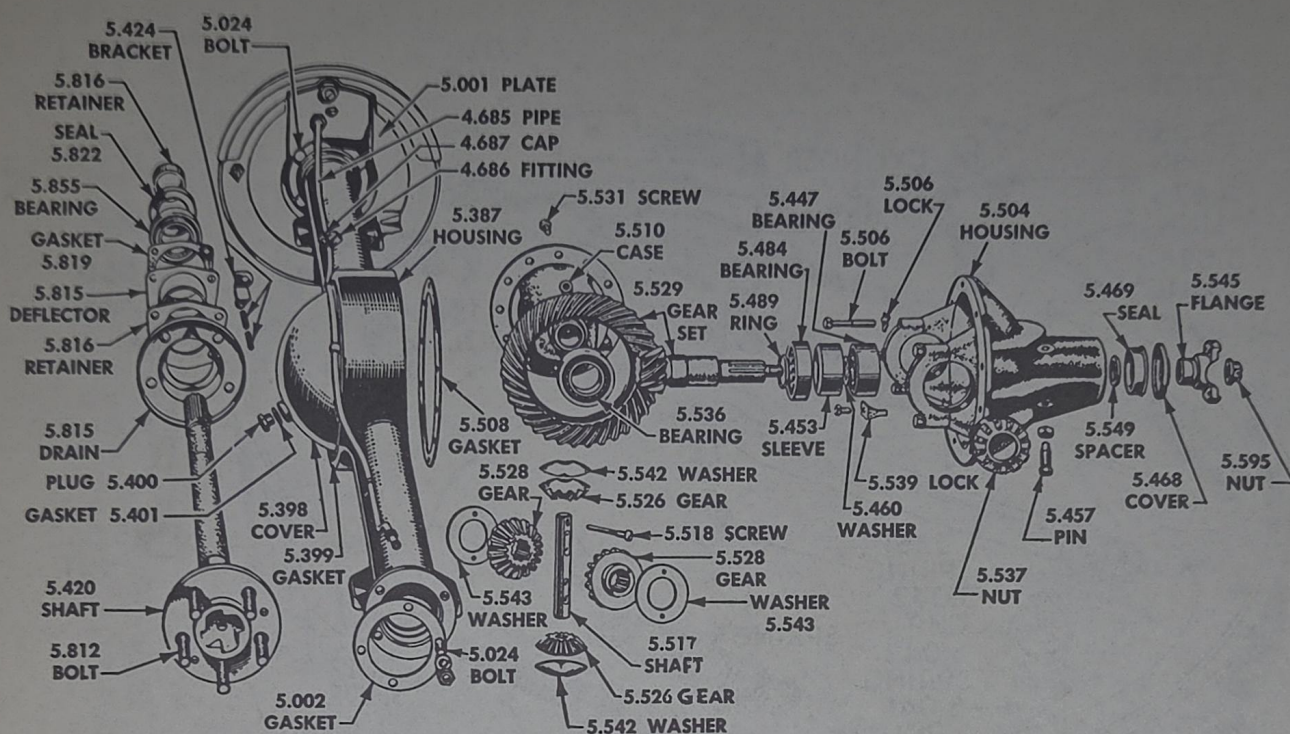**REAR AXLE**


HOTCHKISS DRIVE—(N.D. BEARING)

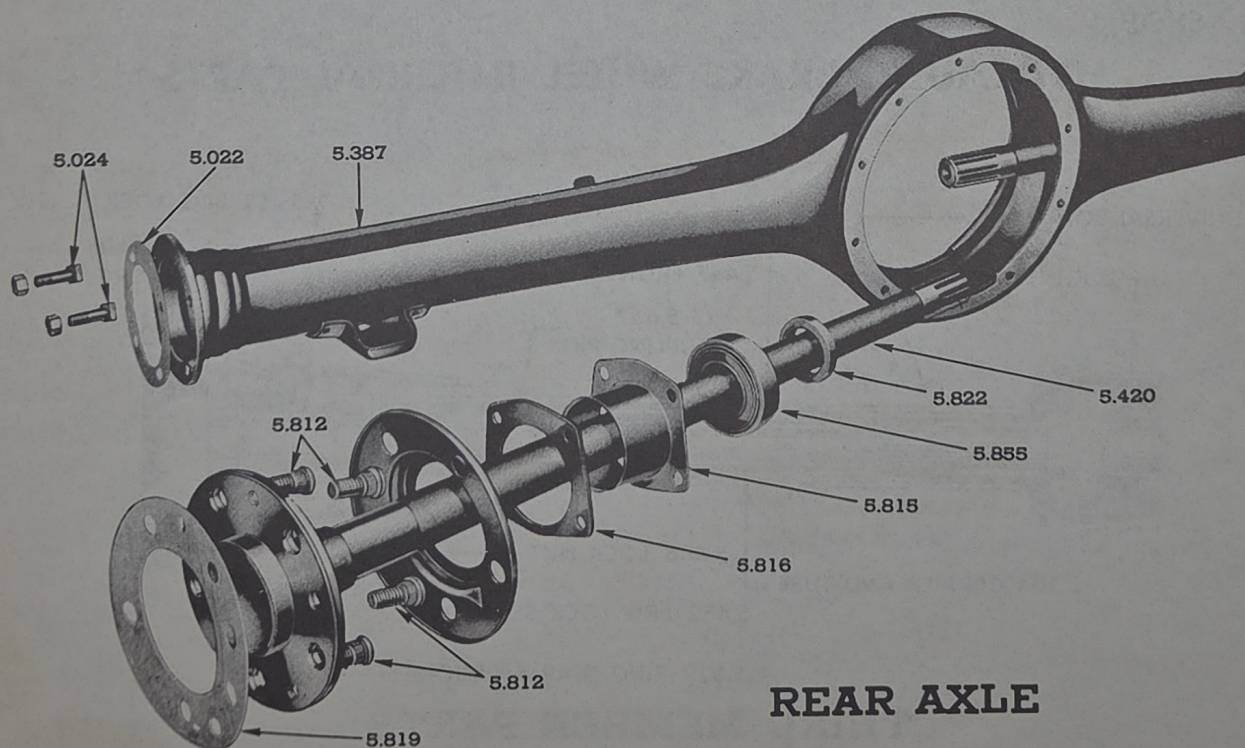**REAR AXLE**

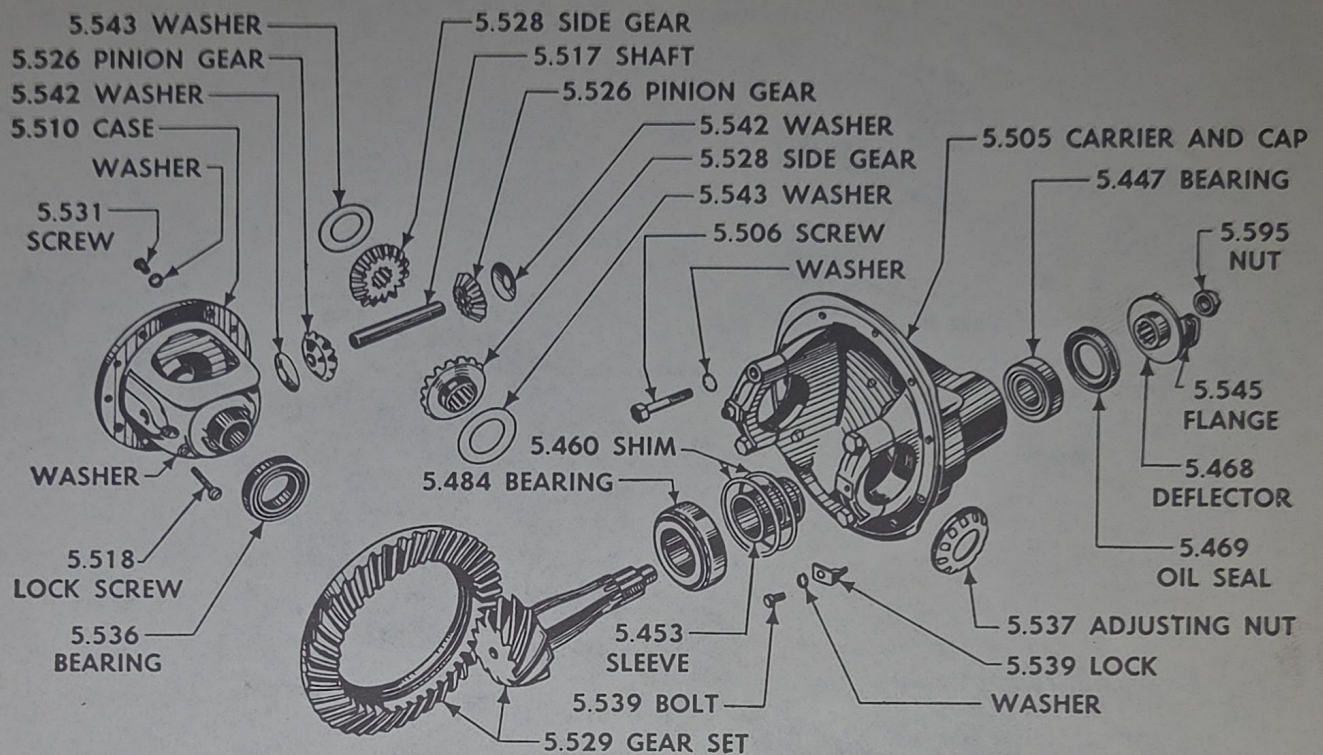



REAR AXLE

HOTCHKISS DRIVE—(HYATT BEARING)

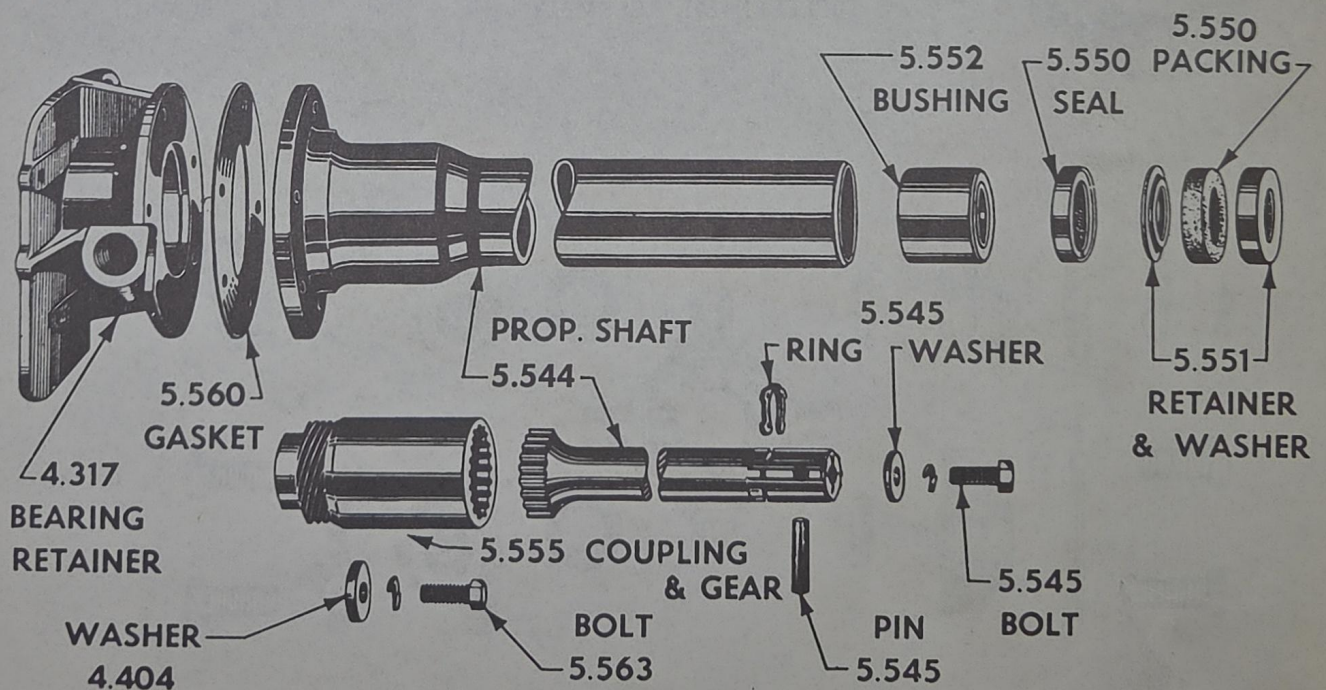


PROPELLER SHAFT

HOTCHKISS DRIVE

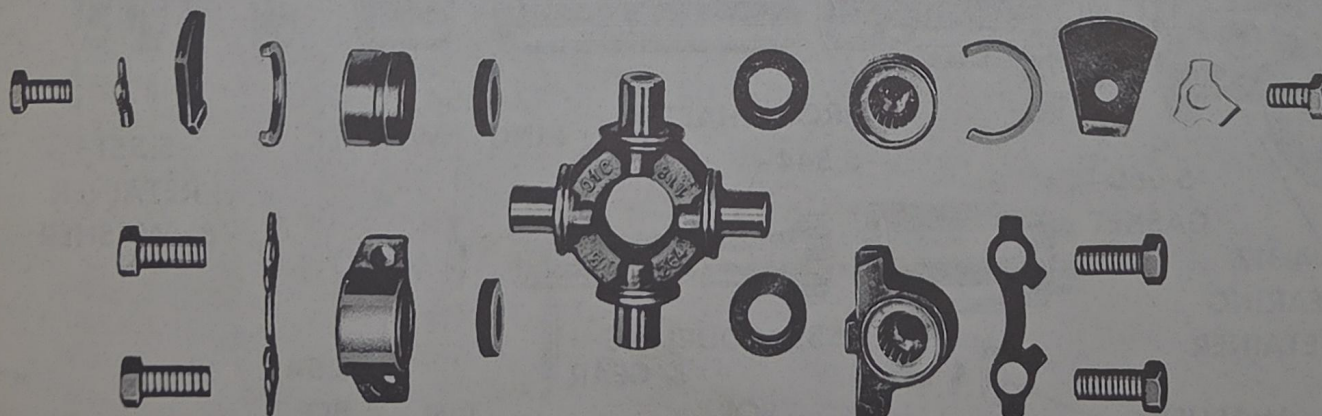
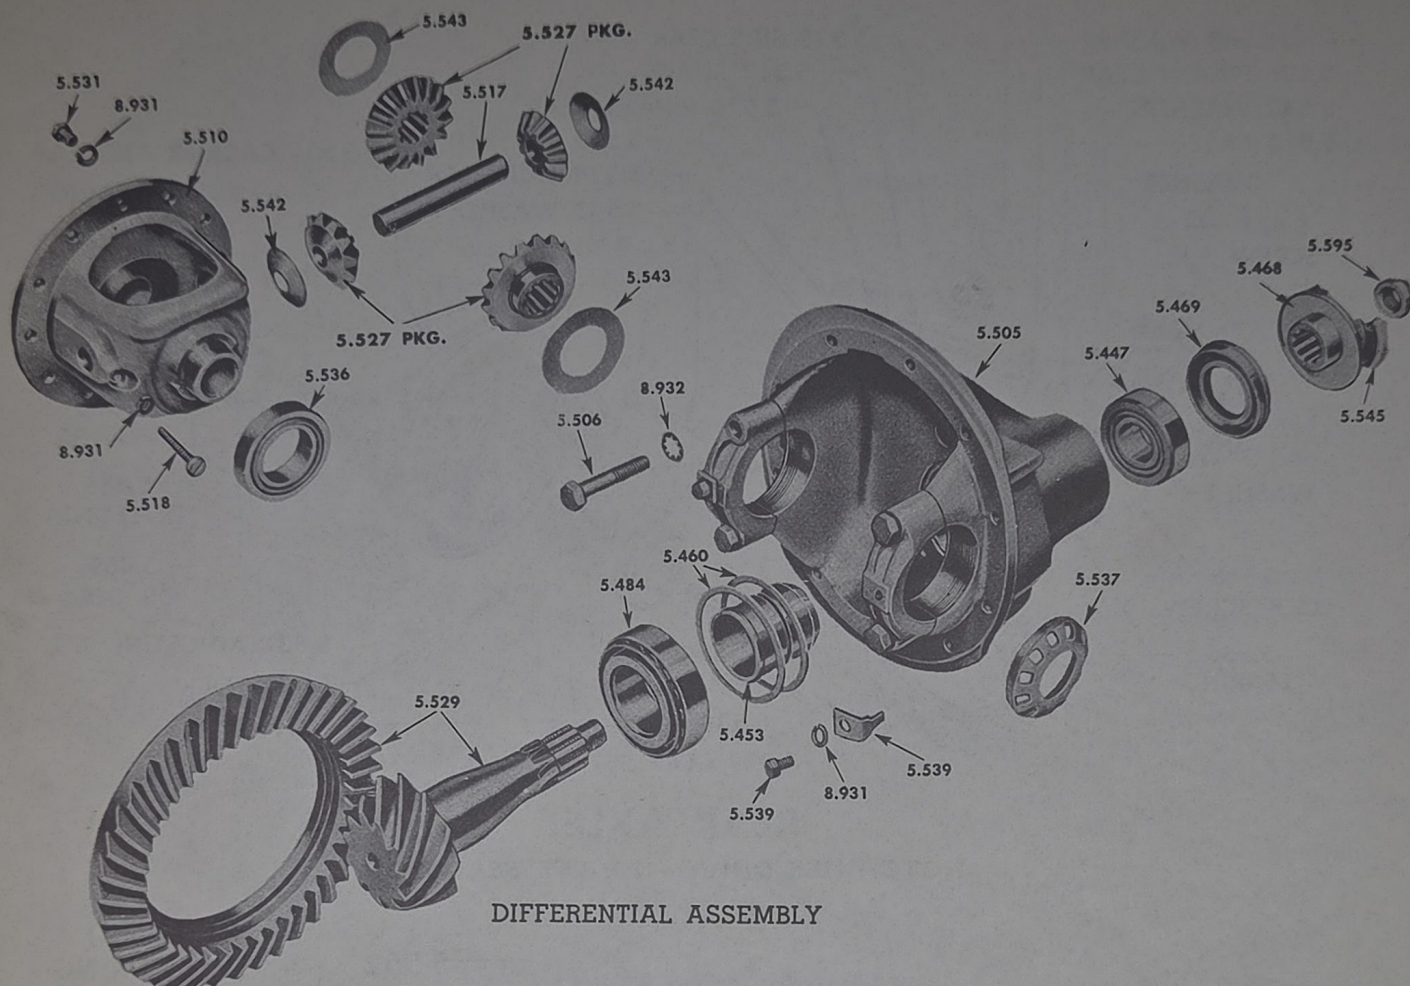
1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572BRAKES
REAR AXLE

UNIVERSAL JOINT REPAIR KIT 516406





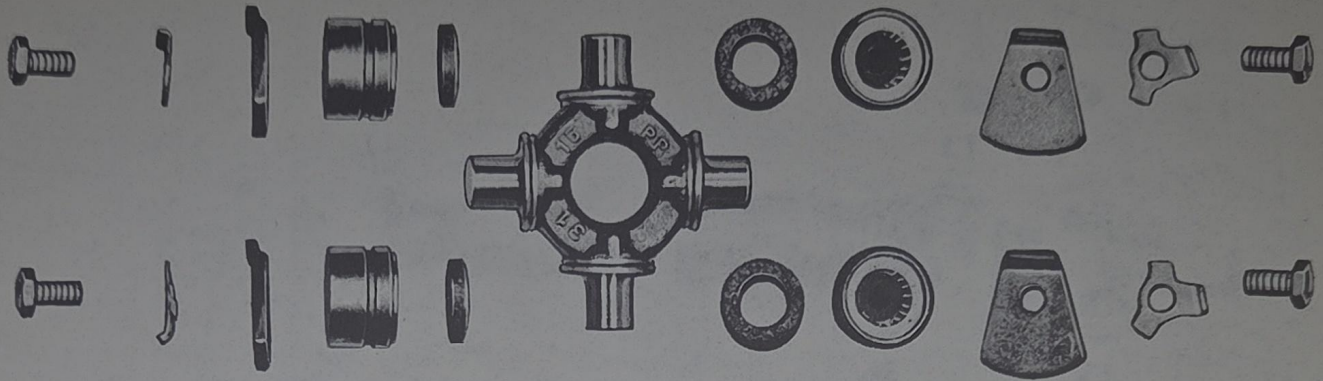



UNIVERSAL JOINT REPAIR KIT 516405

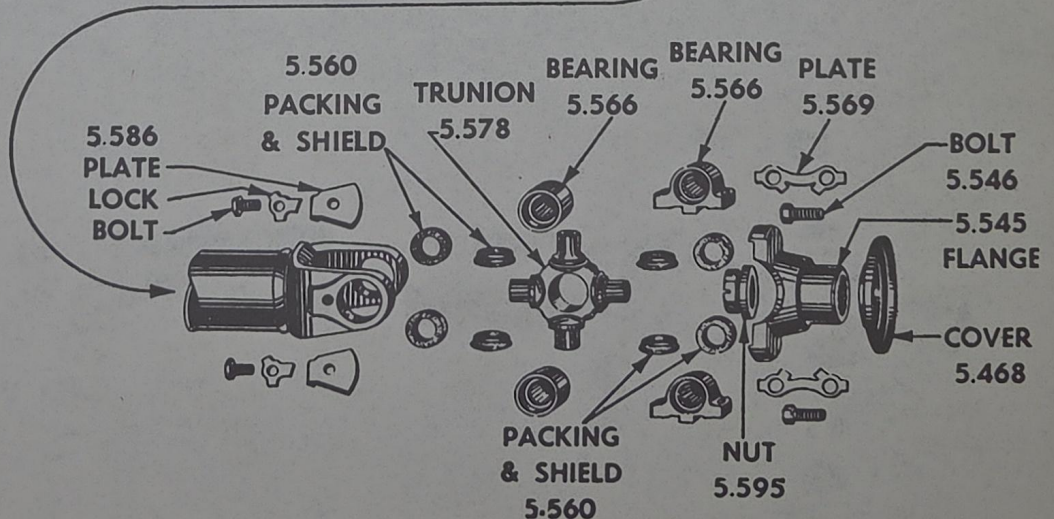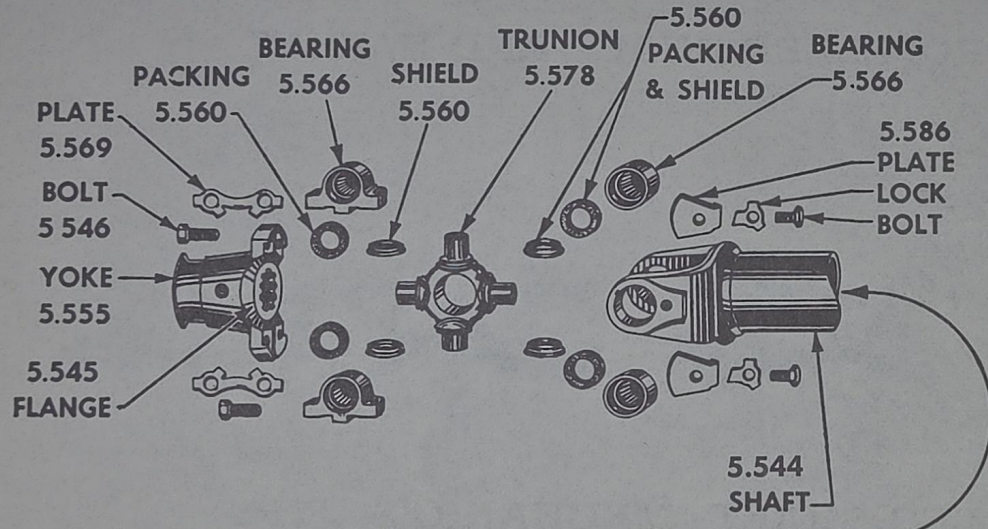



UNIVERSAL JOINTS HOTCHKISS

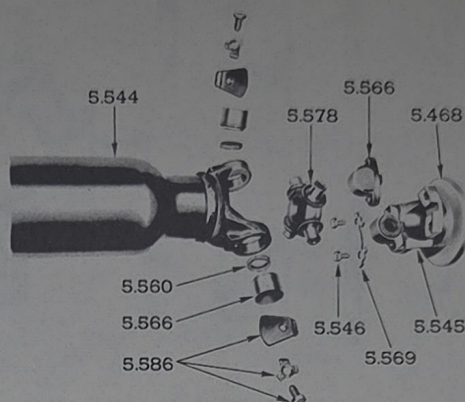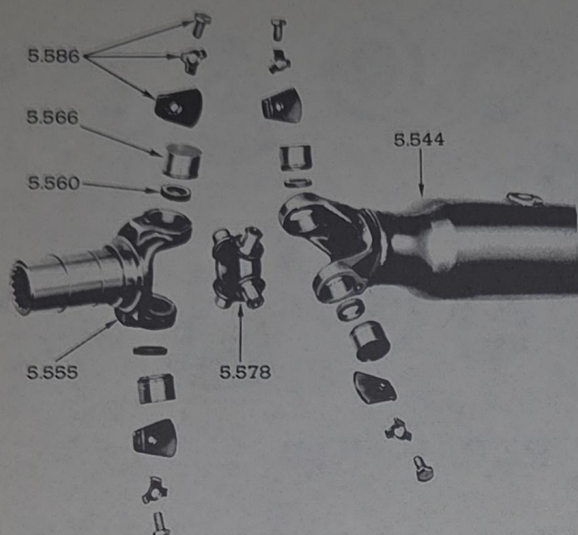

1956 PROPELLER SHAFT AND U/JOINT

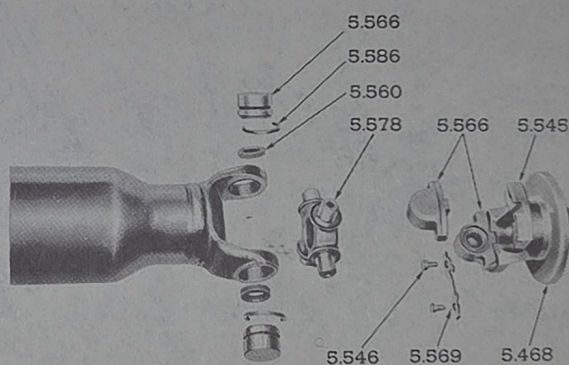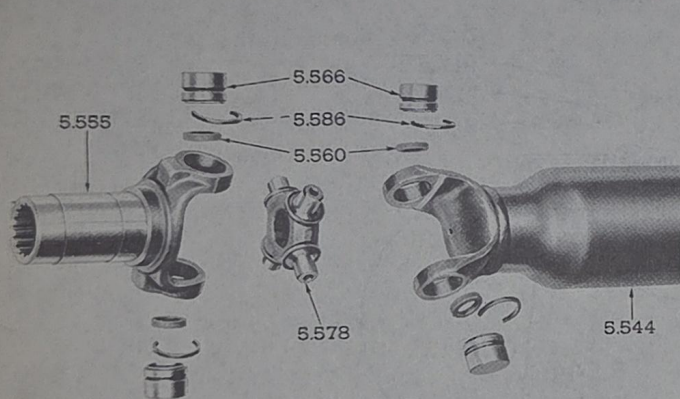

PROPELLER SHAFT (MECHANIC'S TYPE)

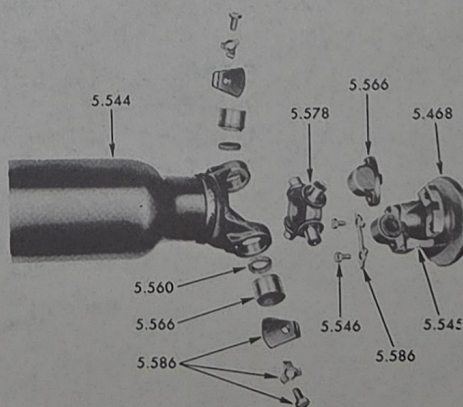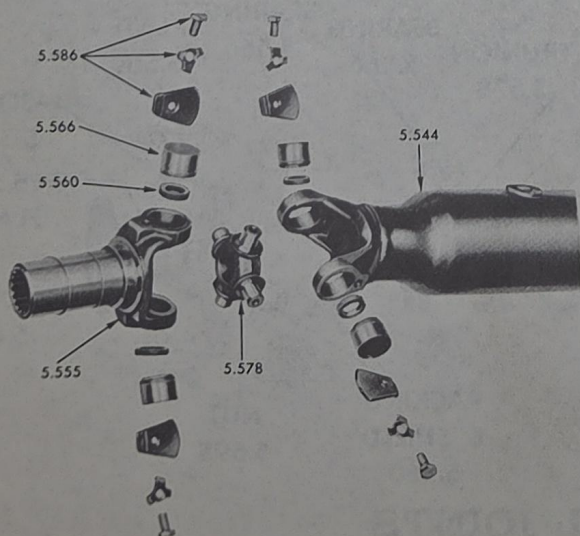

PROPELLER SHAFT (SAGINAW TYPE)

5.001 PLATE, FRONT BRAKE BACKING - FLANGE PLATE

2	3695034	1946-48/20-22
1	509214	1946-47/26-28 LEFT
2	3687700	1949-50/20-22
2	3694865	1951-52/20-22
1	513035	1951-54/26-27-28 RIGHT
1	513036	1951-54/26-27-28 LEFT
2	3694865	1953-54/20-22 FRONT
1	3707946	1955-57/20-22 - RIGHT
1	3707945	1955-57/20-22 - LEFT
2	5454513	1955-56/27-28 - SUPPORT
2	523926	1957/27-28 - SUPPORT

5.001 SUPPORT, REAR BRAKE

1	509278	1949-50/ALL US, 1951-57/25-27-28 RIGHT
1	509279	1949-50/ALL US, 1951-57/25-27-28 LEFT

5.001 SHIELD ASSEMBLY, BRAKE FLANGE

4	3701396	1951-54/20-22
---	---------	---------------

NOTE. SPECIAL SERVICE ONLY TO PROTECT BRAKES FROM SEVERE SNOW CONDITIONS.

5.001 PLATE, REAR BRAKE BACKING - FLANGE PLATE

1	3691416	1946-50/20-22 RIGHT
1	3691415	1946-50/20-22 LEFT
1	553742	1946-50/25-27 RIGHT
1	553743	1946-50/25-27 LEFT
1	509215	1946-47/26-28 RIGHT
1	509216	1946-47/26-28 LEFT
1	3693452	1951-54/20-22 RIGHT
1	3693451	1951-54/20-22 LEFT
1	3708842	1955-57/20-22 - RIGHT
1	3708841	1955-57/20-22 - LEFT

5.001 PLUG, REAR BRAKE BACKING PLATE

4	5833648	1946-50/25-27
---	---------	---------------

5.002 BOLT, FRONT BACKING PLATE

AR	599843	1946-48/20-22 ARM TO STEERING KNUCKLE FRONT
4	599250	1946-48/20-22 PLATE TO STEERING KNUCKLE
2	417912	1946-52/25-27 KNUCKLE TO BACKING PLATE
6	502321	1946-50/25-27 US -26-28, 1953-57/25-27-28 TO KNUCKLE
2	502322	1946-50/25-27 US -26-28, 1953-57/25-27-28 TO KNUCKLE
6	411171	1946-52/25-27 BRAKE TO STEERING KNUCKLE
4	3658625	1949-50/20-22 LONG
4	3687649	1949-50/20-22 7/16-20 X 2-7/8-SHORT
4	3693612	1951-54/20-22 SHORT
4	3693621	1951-54/20-22 LONG
1	3748370	1955-57/20-22, 7/16-20 X 2 FLANGE PLATE /SUPERSEDES 3707482/
2	3748401	1955-57/20-22 - FLANGE PLATE - 7/16-20 X 2-15/64 ALSO USE 7/16-20 LOCK NUT /SUPERSEDES 3708121/

5.002 SPACER, FRONT BACKING PLATE

8	599226	1946-50/20-22
4	556941	1956/25-26-27-28

5.003 BOLT, AXLE SHAFT AND WHEEL BEARING RETAINER

8	3711427	1955-57/20-22 3/8-24 X 1.08
---	---------	-----------------------------

5.017 SHOE AND LINING SET, BRAKE-PRIMARY AND SECONDARY

AR	3697061	1946-50/20-22 FRONT OR REAR SEE NOTE
1	1813183	1946-50/20-22 FRONT OR REAR
1	561636	1946-50/25-27 FOR 2 WHEELS-FRONT
1	417984	1946-50/25-27 FOR 2 WHEELS-REAR
1	516552	1946-47/26-28 FOR 2 WHEELS-FRONT
1	514475	1946-47/26-28, 1951-54/25-27-28 2 WHEEL SET REAR
1	5786904	1951-57/20-22 - FRONT - FOR 2 WHEELS /SUPERSEDES 3696177 - 3752312/
1	5786903	1951-57/20-22 - REAR - FOR 2 WHEELS /SUPERSEDES 3695709 - 3752313/
1	3752753	1951-57/20-22 - .030 OVERSIZE - FRONT /SUPERSEDES 3697770/
1	3754070	1951-57/20-22 - .030 OVERSIZE REAR /SUPERSEDES 3732984/
1	5795969	1951-57/20-22 SEE NOTE A - FRONT HEAVY DUTY
1	5795970	1951-57/20-22 SEE NOTE A - REAR - HEAVY DUTY



- 1 514472 1951-54/25-27-28 FOR 2 WHEELS-FRONT
 1 519983 1955-57/27-28 FOR 2 WHEELS - FRONT
 1 520887 1955-57/27-28 FOR 2 WHEELS - REAR
 NOTE. FOR USE WHEN BRAKE DRUM IS BORED OUT TO .060 OVERSIZE.
 A. FOR SPECIAL SERVICE ONLY. INCLUDES 2 PRIMARY AND 2 SECONDARY
 SHOE ASSEMBLIES

5.017 SHOE AND SECONDARY FACING BRAKE

- 2 1816208 1951-57/20-22 FRONT /SUPERSEDES 3694754/
 2 1816210 1951-57/20-22 REAR /SUPERSEDES 3694772/

5.018 LINING SET, BRAKE - FOR 2 WHEELS

- 1 561637 1946/25, 1947-50/25-27 FRONT
 1 417987 1946/25, 1947-50/25-27 REAR
 1 516562 1946-47/26-28
 1 516543 1946-47/26-28, 1951-54/25-27-28 REAR
 1 516540 1951-54/25-27-28 FRONT
 1 519993 1955-57/27-28 FRONT
 1 520889 1955-57/27-28 REAR

5.018 LINING SET, BRAKE - FOR 4 WHEELS

- 1 5792147 1946-48/20-22 REGULAR DUTY
 1 5263871 1946-48/20-22 HEAVY DUTY
 1 5792910 1946-48/20-22 .030 OVERSIZE

5.019 RIVET, BRAKE LINING

- AR 355994 1946-48/20-22
 AR 413901 1946-55/25-26-27-28

5.022 GASKET, REAR BRAKE BACKING PLATE TO AXLE HOUSING

- 2 231888 1946-57/25-26-27-28

5.024 BOLT, REAR BRAKE BACKING PLATE TO AXLE HOUSING

- 8 414999 1946-57/25-26-27-28
 8 560545 NUT 1946-55/25-26-27-28

5.026 SPRING, BRAKE SHOE ADJUSTING SCREW

- 4 475511 1946-50/20-22
 4 3707417 1946-50/25-26-27-28, 1951-57/ALL FRONT AND REAR /SUPERSEDES 493987/
 4 1415663 1946-47/26-28 SECONDARY SHOE
 4 508126 1946-53/25-26-27-28 JOBS WITH 5 HUB BOLTS 1954/25-27-28-FRONT ONLY
 ANCHOR TO SHOE
 AR 3694822 1951-55/20-22 ALL -25-27-28, 1956/20-22 FIRST JOBS ALL -27-28 REAR
 ONLY, 1957/20-22 ALL -27-28 REAR ONLY GREY
 8 497834 1955-57/27-28 ANCHOR TO SHOE FRONT
 2 3739278 1956/20-22 AFTER JOBS, 1957/20-22 FRONT BRAKE SECONDARY SHOE - WHITE

5.026 PARTS KIT, BRAKE REPAIR

- 1 3696706 1951-55/20-22 - INCLUDES 8 SPRINGS, 4 PINS, 2 COVERS
 1 3719279 1957/20-22 - REAR
 1 3740014 1956/20-22 AFTER JOBS, 1957/20-22 - FRONT - GREY SPRINGS
 1 3719279 1956/20-22 FIRST JOBS - FRONT - WHITE SPRING

5.028 SPRING, BRAKE SHOE FRICTION

- 8 592417 1946-50/20-22

5.029 PIN, BRAKE SHOE FRICTION SPRING

- 8 592418 1946-50/20-22

5.030 LOCK, BRAKE SHOE FRICTION SPRING PIN


- 8 475508 1946-50/20-22

5.034 PIN, BRAKE SHOE LINK

- 8 592419 1946-50/20-22

5.036 LINK, BRAKE FORWARD SHOE

- 4 592416 1946-50/20-22 RIGHT
 4 592415 1946-50/20-22 LEFT

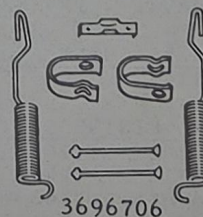

- 5.037 LINK, BRAKE REVERSE SHOE
4 592414 1946-50/20-22 RIGHT
4 592413 1946-50/20-22 LEFT
- 5.041 PIN, BRAKE SHOE HOLD DOWN SPRING
4 5300962 1946-57/25-26-27-28 REAR
4 412685 1946-50/25-26-27-28 FRONT
4 512132 1951-54/25-27-28 FRONT
4 1293908 1955-57/27-28 1/8 IN X 2-13/64 IN FRONT
- 5.042 CUP, BRAKE SHOE HOLD DOWN SPRING
AR 493997 1946-57/25-26-27-28
- 5.043 SPRING, BRAKE SHOE HOLD DOWN
8 231186 1946-57/25-26-27-28
- 5.043 SPRING PACKAGE, BRAKE SHOE HOLD DOWN
2 510330 1946-50/25-26-27-28 FRONT
2 510329 1946-57/25-26-27-28 REAR
2 513399 1951-54/25-27-28 FRONT
NOTE. PACKAGE INCLUDES CUPS, SPRINGS AND PINS.
- 5.043 SPRING AND PIN UNIT, BRAKE SHOE HOLD DOWN
8 3719280 1951-57/20-22 /SUPERSEDES 3696704/
- 5.045 GUIDE, BRAKE SHOE ANCHOR PIN
4 497812 1946-50/25-26-27-28, 1951-57/ALL FRONT AND REAR
- 5.046 SPRING AND PIN UNIT, BRAKE SHOE GUIDE
8 3696830 1946-48/20-22 JOBS WITH 6 HUB BOLTS
- 5.050 ECCENTRIC AND ROLLER, BRAKE SHOE
4 497811 1946-47/26-28
- 5.055 PIN, BRAKE SHOE ANCHOR
4 592420 1946-50/20-22
4 5454791 1946-57/25-26-27-28
2 3707156 1955-57/20-22 - FRONT
2 3705732 1955-57/20-22 - REAR
- 5.055 PIN UNIT, BRAKE SHOE ANCHOR
4 3696705 1951-54/20-22 INCLUDES PIN, 2 WASHERS, NUT
- 5.055 PLATE, BRAKE SHOE GUIDE
4 497812 1951/20-22
- 5.056 WASHER, BRAKE SHOE ANCHOR PIN LOCK
4 494177 1946-57/25-26-27-28 5/8 IN HEAVY
4 3694704 1951-54/20-22
2 3710492 1955-57/20-22 - FRONT
- 5.057 LOCK, BRAKE SHOE ANCHOR PIN
AR 358829 1946-50/20-22
- 5.057 NUT, BRAKE SHOE ANCHOR PIN AND SHOE GUIDE
2 553746 1951-57/25-27-28 FRONT
- 5.075 PLATE, BRAKE SHOE ANCHOR
2 475474 1946-50/20-22 REAR BRAKES
2 599230 1946-48/20-22 FRONT BRAKES
2 3687658 1949-50/20-22 FRONT BRAKES
- 5.102 PIN, BRAKE SHOE GUIDE SPRING
8 3696830 1946-48/20-22
- 5.110 SCREW, BRAKE SHOE ADJUSTING
4 496351 1946-50/25-26-27-28, 1951-57/ALL - FRONT AND REAR



5.111 NUT, BRAKE SHOE ADJUSTING SCREW

AR 3694702 1946-50/25-26-27, 1951-57/ALL 1/2-20 X 2-5/16 SLOTTED /509208/

5.111 SOCKET, BRAKE SHOE ADJUSTING SCREW

AR 3768027 1946-50/25-26-27, 1951-57/ALL /SUPERSEDES 3694700/

5.149 LEVER, HAND BRAKE OPERATING

1 475478 1946-50/20-22 RIGHT
 1 475477 1946-50/20-22 LEFT
 1 509210 1946-50/ALL US, 1951-57/25-26-27-28 RIGHT
 1 509211 1946-50/ALL US, 1951-57/25-26-27-28 LEFT
 1 5455217 1946-50/25-27 CAN RIGHT
 1 5544216 1946-50/25-27 CAN LEFT /SUPERSEDES 553747/
 1 3693604 1951-57/20-22 RIGHT
 1 3693603 1951-57/20-22 LEFT

5.150 STRUT, HAND BRAKE OPERATING LEVER

2 553738 1946-57/25-26-27-28

5.150 STRUT, HAND BRAKE SHOE LEVER

2 3694879 1951-57/20-22

5.151 SPRING, HAND BRAKE OPERATING LEVER STRUT

2 1312281 1951-57/20-22

5.151 SPRING, REAR BRAKE LEVER STRUT TO SHOE

2 502327 1946-57/25-26-27-28

5.158 BOLT, HAND BRAKE OPERATING LEVER

2 475492 1946-50/20-22 ANCHOR
 2 3693605 1946-50/25-26-27-28, 1951/ALL, 1952-57/ALL ANCHOR - 3/8-24 X 27/32
 /SUPERSEDES 502305/

5.158 CLIP, HAND BRAKE ACTUATING LEVER PIVOT PIN SPRING

2 514276 1951/25-27

5.158 WASHER, HAND BRAKE REAR LEVER PIVOT SPRING

2 1300540 1946-50/25-26-27-28, 1951-57/ALL

5.182 EXTENSION, HAND BRAKE OPERATING LEVER

1 475482 1946-50/20-22 RIGHT
 1 475481 1946-50/20-22 LEFT

5.184 SPRING, HAND BRAKE OPERATING LEVER EXTENSION

2 476104 1946-50/20-22

5.188 COVER, BRAKE ADJUSTING HOLE

AR 475516 1952-57/ALL

5.387 HOUSING, REAR AXLE

1 5790030 1949-50/20-22
 1 511248 1949/25-27
 1 513615 1950-54/25-27-28
 1 5794567 1951-54/20-22
 1 3730168 1955-56/20-22 WHEN USING IN PLACE OF 3729467 ON 1955 AND EARLY 1956
 USE 3729483-4 BRAKE PIPES
 1 521667 1955-56/27-28
 1 523417 1957/27-28 INCLUDES BOLT
 1 3739443 1957/20-22

5.387 BOLT, REAR AXLE HOUSING

AR 348402 1946-54/20-22 3/8-24 X 1-1/8
 10 3707320 1955-57/20-22

5.387 CAP, AXLE HOUSING BREATHER SCREW

1 498373 1946-57/25-26-27-28

5.394 RETAINER, REAR AXLE BUMPER

2 502257 1946-53/25-26-27-28
 2 517532 1954/25-27-28
 2 520875 1955-57/27-28



5.394 BUMPER, DIFFERENTIAL CARRIER CASE

1	516442	1955-57/27-28 - ON FLOOR PAN
1	519256	BRACKET 1955-57/27 EXC /-62-63-64/
1	519257	BRACKET 1955-57/27 /-62-63-64/
1	519258	BRACKET 1955-57/28

5.395 BUMPER, REAR AXLE

2	3719960	1946-53/25-26-27-28, 1955-57/20-22
2	520881	1954/25-27-28 /517531/
2	520874	1955-56/27-28
2	524519	1957/27-28

5.398 COVER, REAR AXLE HOUSING

1	3656821	1946-54/20-22
---	---------	---------------

5.399 GASKET, AXLE HOUSING COVER

1	593017	1946-54/20-22
---	--------	---------------

5.400 PLUG, AXLE HOUSING FILLER

1	344829	1946-57/20-22
1	1299807	1946-47/25-26-27-28
1	1390566	1946-48/25-26-27-28, 1949/25-27 FIRST JOBS INCLUDES GASKETS

5.400 SCREW, REAR AXLE DRAIN PLUG

1	3739264	1957/20-22
1	513975	GASKET 1957/20-22

5.401 GASKET, AXLE HOUSING FILLER PLUG

1	3714775	1946-57/20-22 /SUPERSEDES 344830/
---	---------	-----------------------------------

5.403 SEAT, REAR SPRING

2	3652182	1946-54/20-22
---	---------	---------------

5.404 SEAL, REAR SPRING SEAT

4	597267	1946-54/20-22
---	--------	---------------

5.406 BOLT, SPRING SEAT TO HOUSING

2	597268	1946-54/20-22 5/8-18 X 4-1/8
---	--------	------------------------------

5.420 SHAFT, AXLE

1	3657314	1946-48/20-22 RIGHT
1	3657313	1946-48/20-22 LEFT
1	414414	1946-48/25-27 RIGHT
1	414415	1946-48/25-27 LEFT
1	505118	1946-47/26-28 RIGHT
1	505119	1946-47/26-28 LEFT
1	3687768	1949-50/20-22 RIGHT
1	3687767	1949-50/20-22 LEFT
1	555632	1949-53/25-27, 1954/25-27 CAN. RIGHT
1	555633	1949-53/25-27, 1954/25-27 CAN. LEFT
1	3694756	1951-54/20-22 RIGHT
1	3694755	1951-54/20-22 LEFT
1	502063	1953-54/25-27 US -28, 1955-56/27-28 RIGHT
1	502064	1953-54/25-27 US -28, 1955-56/27-28 LEFT
1	3714782	1955-56/20-22 - RIGHT
1	3714781	1955-56/20-22 - LEFT
1	3739108	1957/20-22 - RIGHT
1	3739107	1957/20-22 - LEFT
1	522986	1957/27-28 - RIGHT
1	522987	1957/27-28 - LEFT
1	3743838	1957/20-22 RIGHT - FOR SPECIAL SERVICE WHEN POSITRACTION REAR AXLE IS USED
1	3743837	1957/20-22 LEFT - FOR SPECIAL SERVICE WHEN POSITRACTION REAR AXLE IS USED

5.422 LOCK, AXLE SHAFT

2	472613	1946-54/20-22
---	--------	---------------



5.422 SPACER, AXLE SHAFT

1	597251	1949-54/20-22	1.013-1.011
1	473603	1949-54/20-22	MEDIUM-1.0195-1.0295
1	597254	1949-54/20-22	WIDE-1.034

NOTE. ALSO SEE GROUP 5.523 FOR OTHER MODELS.

5.424 BRACKET, REAR WHEEL STATIC COLLECTOR

2	231895	1946-50/ALL US, 1953-55/25-27-28	US
---	--------	----------------------------------	----

5.424 SPRING, REAR WHEEL STATIC COLLECTOR

2	231896	1946-50/ALL US, 1953-55/25-27-28	US
---	--------	----------------------------------	----

5.424 BRUSH, REAR WHEEL STATIC COLLECTOR

2	1862394	1946-50/ALL US, 1953-55/25-27-28	US
---	---------	----------------------------------	----

5.446 NUT, PINION SHAFT BEARING LOCK

1	3703782	1946-54/20-22	
---	---------	---------------	--

5.447 BEARING, PINION SHAFT FRONT

1	954780	1946/ALL, 1947/20-22	ALL -26-28 WITH NEW DEPARTURE FRONT PINION BEARING, 1948-54/20-22
1	188963	1947/25-26-27-28	WITH HYATT BEARING, 1948-56/25-27-28 HYATT A-150277-Z
1	7450373	1955-57/20-22	
1	7450302	1957/27-28	- FRONT

5.450 DOWEL, PROPELLER SHAFT HOUSING BUSHING

2	347813	1946-49/20-22, 1950/20-22	
---	--------	---------------------------	--

5.451 BUSHING, PROPELLER SHAFT HOUSING

1	3652601	1946-50/20-22	FRONT
1	3652328	1946-50/20-22	REAR
1	3694732	1951-54/20-22	FRONT
1	3694733	1951-54/20-22	REAR

5.451 BUSHING AND SEAL KIT, PROPELLER SHAFT

1	609930	1946-50/20-22	
1	5795952	1951-54/20-22	

NOTE. INCLUDES FRONT AND REAR BUSHINGS AND OIL SEAL.

5.452 SCREW, PINION SHAFT BEARING LOCK

3	358073	1946/ALL, 1947/20-22	ALL -26-28 WITH NEW DEPARTURE FRONT PINION BEARING, 1948-54/20-22
---	--------	----------------------	---

5.453 SLEEVE, PINION SHAFT BEARING LOCK

1	3685189	1946-54/20-22	
1	499532	1946/25-26-28, 1947/26-28	WITH NEW DEPARTURE FRONT PINION BEARINGS

5.453 SPACER, PINION BEARING

1	510424	1947-56/25-26-27-28	SEE NOTE - FRONT - SHORT
1	510425	1947-56/25-26-27-28	SEE NOTE - REAR - LONG
1	3705722	1955-57/20-22	
1	528485	1957/27-28	

NOTE. USED WITH FRONT PINION TAPERED ROLLER BEARING ONLY ON 1947/26-28.

5.457 PIN, PROPELLER SHAFT COUPLING

1	5843651	1946-54/20-22	
---	---------	---------------	--

5.460 SHIM, PINION SHAFT BEARING

AR	3657740	1946-54/20-22	.012
AR	3657741	1946-54/20-22	.015
AR	3657742	1946-54/20-22	.018
AR	3657743	1946-54/20-22	.021
AR	499530	1946/25-26-28, 1947/26-28	WITH NEW DEPARTURE FRONT PINION BEARING .018
AR	503063	1946/25-26-28, 1947/26-28	WITH NEW DEPARTURE FRONT PINION BEARING .014
AR	509263	1947/25-27	ALL -26-28 WITH HYATT BEARING, 1948-56/25-27-28 FRONT .002
AR	509264	1947/25-27	ALL -26-28 WITH HYATT BEARING, 1948-56/25-27-28 FRONT .003
AR	509265	1947/25-27	ALL -26-28 WITH HYATT BEARING, 1948-56/25-27-28 FRONT .004
AR	509266	1947/25-27	ALL -26-28 WITH HYATT BEARING, 1948-56/25-27-28 FRONT .005



AR	509267	1947/25-27 ALL -26-28 WITH HYATT BEARING, 1948-56/25-27-28 FRONT .010
AR	3708823	1955-56/20-22 - / .021/
AR	3708824	1955-56/20-22 - / .024/
AR	3708825	1955-56/20-22 - / .027/
AR	3708826	1955-56/20-22 - / .030/
AR	3708827	1955-56/20-22 - / .033/
AR	3708828	1955-56/20-22 - / .036/
AR	3740876	1957/20-22 - / .021/
AR	3740877	1957/20-22 - / .024/
AR	3740878	1957/20-22 - / .027/
AR	3740879	1957/20-22 - / .030/
AR	3740880	1957/20-22 - / .033/
AR	3740881	1957/20-22 - / .036/
AR	524014	1957/27-28 - / .004/
AR	524015	1957/27-28 - / .005/
AR	524016	1957/27-28 - / .006/
AR	524017	1957/27-28 - / .007/
AR	524020	1957/27-28 - / .010/

5.468 COVER, PINION DUST SLEEVE

1	506929	1947/25-27 ALL -26-28 WITH HYATT FRONT PINION BEARING, 1948-55/25-27-28
1	522131	1956/27-28
1	516749	1957/27-28 - PINION SPLASH

5.469 SEAL, PINION SHAFT FRONT BEARING OIL

1	3691457	1946-50/20-22 TORQUE TUBE OIL
1	501839	1946/25-26-28, 1947/26-28 WITH NEW DEPARTURE FRONT PINION BEARING
1	514066	1947/25-27 ALL -26-28 WITH HYATT BEARING, 1948-56/25-27-28
1	3694736	1951-54/20-22
1	3705725	1955-57/20-22
1	565889	1957/27-28 /523834/

5.484 BEARING, REAR PINION SHAFT

1	125630	1946-54/20-22 HYATT C-1506 SEE NOTE
1	107391	1946/25-26-28, 1947/26-28 WITH NEW DEPARTURE FRONT PINION BEARING HYATT C-1509 SEE NOTE
1	188960	1947/25-27 ALL -26-28 WITH HYATT BEARING, 1948-56/25-27-28 HYATT A-127341-Y
1	7450373	1955-57/20-22 - FRONT
1	7450371	1955-57/20-22 - REAR
1	7450646	1957/27-28 - REAR
NOTE. 125630 USED WITH RING GEAR AND PINION HAVING 1804892 STAMPED ON END OF PINION.		
107391 USED WITH RING GEAR AND PINION HAVING 1805387 STAMPED ON END OF PINION.		

5.489 RING, PINION SHAFT REAR BEARING LOCK

1	377722	1946/ALL, 1947/20-22 ALL -26-28 WITH NEW DEPARTURE FRONT PINION BEARING 1948-54/20-22
---	--------	---

5.502 VENTILATOR, REAR AXLE

1	2140049	1946-57/20-22
---	---------	---------------

5.504 PROPELLER SHAFT HOUSING AND DIFFERENTIAL CARRIER ASSEMBLY

1	3710402	1946-54/20-22
1	524559	1957/27-28 /39-10 TEETH/
1	524560	1957/27-28 /40-11 TEETH/
1	524561	1957/27-28 /40-13 TEETH/
1	524562	1957/27-28 /42-13 TEETH/
1	524563	1957/27-28 /41-12 TEETH/

5.504 CARRIER UNIT, DIFFERENTIAL

1	3744422	1955-57/20-22 - INCLUDES CARRIER AND CAP AND 2 ADJUSTING NUTS /SUPERSEDES 3735691/
1	3733899	1957/20-22 - COMPLETE EXC TG, PG, OVERDRIVE /9-32 TEETH/
1	3734182	1957/20-22 PG OR TG COMPLETE /11-37 TEETH/



5.505 CARRIER AND CAP, DIFFERENTIAL

1	501825	1946/25-26-28, 1947/26-28 WITH NEW DEPARTURE FRONT PINION BEARING
1	515458	1947/25-27 ALL -26-28 WITH HYATT FRONT PINION BEARINGS, 1948-53/ALL, 1954/25-27-28
1	520761	1955-56/27-28
1	524792	1957/27-28
1	506926	PLUG, CARRIER OIL HOLE 1947-48/25-26-27-28 426 DIA.
1	510712	PLUG, CARRIER OIL 1947-56/25-26-27-28 / .448 DIA./
1	522497	PLUG, 1957/27-28

5.506 SCREW, DIFFERENTIAL CARRIER BEARING CAP

4	472544	1946-54/20-22 7/16-14 X 2-1/8
4	499515	1946-56/25-26-27-28 1/2-13 X 2-1/2
4	3705721	1955-57/20-22
4	516743	1957/27-28

5.506 BOLT, DIFFERENTIAL CARRIER TO HOUSING

2	518243	1955-56/27-28 HEX HD 7/16 X 1-5/8 8
8	512389	1955-56/27-28 HEX. HD. 7/16-20 X 1
10	570222	1957/27-28 3/8-24 X 1-1/2
10	529548	NUT 1957/27-28
10	418641	WASHER, LOCK DOUBLE RIBBED 3/8 1946-48/25-26-27-28

5.508 GASKET, AXLE HOUSING TO DIFFERENTIAL CARRIER - PAPER

1	593012	1946-54/20-22
1	555262	1946-48/25-26-27-28
1	556042	1949-56/25-27-28
1	3769870	1955-57/20-22 /SUPERSEDES 3750513/
1	569569	1957/27-28

5.510 CASE, DIFFERENTIAL

1	593009	1946-54/20-22 EXC. AT
1	523023	1946-51/25-26-27-28, 1952-55/25-27-28 EXC HT AND 40-13, 41-12, 42-13 TEETH, 1956/27-28 EXC 40-13, 41-12, 42-13 /SUPERSEDES 522135/
1	3691463	1951-54/20-22 AT
1	523070	1952-54/25-27-28 HT, 1955-56/27-28 HT WITH 40-13, 41-12, 42-13 TEETH
1	3707311	1955-56/20-22 EXC. OVERDRIVE
1	3707312	1955-56/20-22 WITH OVERDRIVE
1	3748256	1957/20-22 /SUPERSEDES 3737717/
1	522498	1957/27-28 HT WITH 40-13, 42-13 TEETH
1	522499	1957/27-28 WITH 40-11, 41-12 TEETH

5.510 DIFFERENTIAL AND CASE ASSEMBLY

1	3743941	1955-56/20-22 WITH OVERDRIVE - FOR SPECIAL SERVICE WHEN POSITRACTION REAR AXLE IS REQUIRED
1	3743839	1955-57/20-22 EXC OVERDRIVE - FOR SPECIAL SERVICE WHEN POSITRACTION REAR AXLE IS REQUIRED

5.517 SHAFT, DIFFERENTIAL PINION

1	3714784	1946-57/20-22
1	501833	1946-57/25-26-27-28

5.518 SCREW, DIFFERENTIAL PINION SHAFT LOCK

1	472546	1946-55/ALL, 1956/20-22, 1957/ALL
1	521658	1956/27-28

5.523 SPACER, DIFFERENTIAL PINION

1	597254	1946-48/20-22 WIDE 1.034
1	473603	1946-48/20-22 MEDIUM 1.0195, 1.0295
1	597251	1946-48/20-22 NARROW 1.0105
NOTE. ALSO SEE GROUP 5.422 FOR OTHER MODELS.		

5.526 GEAR, DIFFERENTIAL PINION

2	1805230	1946/20-22 FIRST JOBS
2	3748259	1946/20-22 AFTER JOBS WITH REVACYCLE CUT GEAR, 1947-57/20-22 STAMPED R /SUPERSEDES 3682121/

5.527 GEAR PACKAGE, DIFFERENTIAL

1	509520	1946-56/25-26-27-28 INCLUDES SIDE GEARS AND PINIONS
1	524573	1957/27-28 - SIDE GEARS AND PINIONS

5.528 GEAR, DIFFERENTIAL SIDE

2	1805067	1946/20-22 FIRST JOBS
2	3682122	1946/20-22 AFTER JOBS WITH REVACYCLE CUT GEAR, 1947-54/20-22 STAMPED R
2	3748257	1955-57/20-22 /SUPERSEDES 3708862/

5.529 RING GEAR AND PINION SET

1	5796115	1946-47/20-22, 1948/20-22 BEFORE SERIAL #82----08709 AND ON AND AFTER SERIAL 82---10751, ALSO SERIALS 82---08738, 82---08743, 82--- 08774, 82---08775, 82---08779, 82---08782, 82---08789, 82---08795, 82---08804, 82---08845, 82---08929, 82---08932 TO 82---08936, 82---08939 AND 82---08947, 1949-54/20-22 EXC. AT 39-10 RATIO
1	513458	1946/25-26-28 41-10 RATIO
1	513457	1946/26-28, 1947/26-28 WITH NEW DEPARTURE FRONT PINION BEARING 43-10 RATIO
1	513462	1947-49/25-27 EXC. HT, 1950-54/25 EXC. HT 41-10 RATIO
1	513461	1947/26-28 WITH HYATT FRONT PINION BEARING, 1953-54/25-27-28 US 43-10 RATIO
1	5796128	1948/20-22 ON AND AFTER SERIAL 82---08709 BEFORE SERIAL 82---10751 EXC. SERIALS 82---08738, 82---08743, 82---08774, 82---08775, 82---08779, 82---08782, 82---08789, 82---08795, 82---08804, 82---08845, 82---08929, 82---08932 TO 82---08936, 82---08939 AND 82---08947 37-9 RATIO
1	516700	1948-51/25-27 HT, 1952-53/25-27 US HT, 1954-56/25-27-28 HT WITH 40-11 TEETH
1	516699	1950-54/27 EXC HT, 1955-56/27-28 - 39-10 TEETH
1	5795959	1951-54/20-22 AT 39-11 RATIO HYPOID DRIVE
1	516701	1952-54/25-27-28 HT 40-13 TEETH
1	516698	1953-54/25-27-28 US 41-12 TEETH
1	518565	1954/25-27-28 HT US 42-13 TEETH
1	5797565	1955-56/20-22 EXC AT AND OVERDRIVE - 11-41 TEETH
1	5797566	1955-56/20-22 AT - 11-39 TEETH
1	5797567	1955-56/20-22 WITH OVERDRIVE - 9-37 TEETH
1	3748438	1955-56/20-22 STD TRANS - WITH POSITRACTION REAR AXLE - 37-10 TEETH
1	521423	1955-56/27-28 HT 42-13 TEETH
1	522144	1955-56/27-28 HT 40-13 TEETH
1	5782725	1957/20-22 ST - 9-32 TEETH
1	5782724	1957/20-22 PG OR TG, 11-37 TEETH
1	3739690	1957/20-22 FOR USE WITH POSITRACTION REAR AXLE - 37-10 TEETH
1	531549	1957/27-28, 39-10 TEETH /524567/
1	531550	1957/27-28, 40-11 TEETH /SUPERSEDES 524568/
1	531553	1957/27-28, 40-13 TEETH /SUPERSEDES 524569/
1	531551	1957/27-28, 41-12 TEETH /SUPERSEDES 524571/
1	531552	1957/27-28, 42-13 TEETH /SUPERSEDES 524570/

5.531 SCREW, RING GEAR

10	596529	1946-54/20-22 EXC. AT, 1955-57/20-22 3/8-24 X 25/32
12	517082	1946-51/25-26-27-28, 1952-53/25-27 EXC HT, 1954-57/25-27-28 SEE NOTE /3/8-24 X 3/4/
10	3691466	1951-54/20-22 AT
12	517083	1953-56/25-27-28 HT SEE NOTE - /3/8-24 X 11/16/ NOTE. DO NOT USE LOCK WASHER WITH THIS BOLT.

5.536 BEARING, DIFFERENTIAL SIDE

2	127861	1946-54/20-22
2	7450385	1955-56/20-22 HYATT #KC-11445-Y
2	179243	1946-56/25-26-27-28
2	7450745	1957/20-22 HYATT #A159286Z
2	7450299	1957/27-28

5.537 NUT, DIFFERENTIAL SIDE BEARING ADJUSTING

2	3707301	1946-54/20-22
2	3707303	1955-57/20-22
2	515535	1946-56/25-26-27-28
2	516758	1957/27-28

5.539 LOCK, DIFFERENTIAL SIDE BEARING ADJUSTING NUT

2	344052	1946-54/20-22
2	501806	1946-57/25-26-27-28
2	3705726	1955-57/20-22

5.539 SEAL, DIFFERENTIAL CARRIER NUT

10	1456254	1955-57/20-22
----	---------	---------------



5.542 WASHER, DIFFERENTIAL PINION THRUST

2	1773020	1946/20-22
2	513714	1946-57/25-26-27-28 FIBRE

5.543 WASHER, DIFFERENTIAL SIDE GEAR THRUST

2	1773021	1946/20-22
2	531776	1946-57/25-26-27-28 / .030 THICK / - STEEL / SUPERSEDES 513713 /
2	557944	1946-56/25-26-27-28 / .035 THICK - STEEL
2	557945	1946-56/25-26-27-28 / .040 THICK - STEEL /
2	3748258	1957/20-22 EXC WITH DIFFERENTIAL CASE 3737717 OR 3731614 TOGETHER WITH DIFFERENTIAL SIDE GEAR 3708862 AS THERE IS NO CLEARANCE BETWEEN CASE AND GEARS

5.544 SHAFT, PROPELLER

1	3704406	1946-54/20-22
1	506065	1946-48/25 EXC. HT GREEN BAND
1	506067	1946-47/26 EXC. HT YELLOW BAND
1	506068	1946-47/28 EXC. HT BLUE BAND
1	506066	1947-48/27 EXC. HT RED BAND
1	510781	1948/25-27 HT
1	511291	1949-52/25-27
1	515502	1953-54/25-27
1	517527	1954/28
1	5667452	1954/28 EXC. HT
1	3719428	1955/20-22 FIRST JOBS BEFORE SERIAL 52019626280
1	3722117	1955/20-22 AFTER JOBS ON AND AFTER SERIAL 52019626280, 1956-57/20-22
1	5667470	1955/27
1	5667475	1955/28
1	5670041	1956/27
1	5670042	1956/28
1	523819	1957/27 ST
1	523822	1957/27 HT
1	523820	1957/28 ST
1	523823	1957/28 HT

5.545 FLANGE, UNIVERSAL JOINT

1	504740	1946/25-26-28, 1947/26-28 WITH NEW DEPARTURE FRONT PINION BEARING
1	506927	1947/25-27 ALL -26-28 WITH HYATT FRONT PINION BEARING, 1948-55/25-27-28 REAR
1	522078	1956/27-28 REAR
1	523302	1957/27-28 - AXLE END

5.545 FLANGE AND DEFLECTOR, PROPELLER SHAFT PINION

1	3714791	1955-57/20-22
1	3714788	DEFLECTOR 1955-57/20-22
1	3705782	WASHER 1955-57/20-22

5.546 BOLT, PROPELLER SHAFT FLANGE

4	505653	1946-55/25-26-27-28 5/16-24 X 3/4
---	--------	-----------------------------------

5.546 U BOLT, PROPELLER SHAFT TO REAR AXLE

2	2118319	1955-57/20-22
---	---------	---------------

5.548 JOINT ASSEMBLY, UNIVERSAL

1	606779	1946-48/20-22 JOBS WITH TRUNNION BUSHINGS
1	591642	1949-54/20-22 EXC. AT
1	3704232	1951-54/20-22 AT
1	3652935	WASHER, YOKE 1949-54/20-22
1	838819	WASHER 3/8 MEDIUM LOCK 1949-54/20-22 TO TRANSMISSION MAINSHAFT BOLT LOCK NUT

5.548 REPAIR KIT, UNIVERSAL JOINT

AR	609944	1946-54/20-22 SEE NOTE
1	516406	1946-55/25-26-27-28 SEE NOTE REAR
1	516405	1946-55/25-26-27-28 SEE NOTE FRONT
1	3713926	1955-57/20-22
2	522163	1956-57/27-28 FRONT AND REAR

NOTE. 609944 INCLUDES TRUNNION, BEARINGS, RINGS, BOLTS, AND PLATES.
 516405 INCLUDES 4 BEARINGS, JOURNAL, 4 BOLTS, 4 LOCK PLATES, 4 WASHERS, 4 RETAINER PLATES, 4 RETAINER RINGS.
 516406 INCLUDES 4 BEARINGS, JOURNAL, 4 LOCK PLATES 6 BOLTS, 4 WASHERS, 2 RETAINER PLATES, 2 RETAINER RINGS.



3713926

5.548 WASHER, UNIVERSAL JOINT YOKE

1 3652935 1946-48/20-22, 1952/20-22
1 838819 1946-48/20-22, 1952/20-22 UNIVERSAL JOINT TO SHAFT LOCK

5.548 SEAL AND LOCK PLATE KIT, UNIVERSAL JOINT

1 5799920 1946-54/20-22

5.549 SPACER, REAR UNIVERSAL JOINT FLANGE

1 499551 1946/25-26-28, 1947/26-28 WITH NEW DEPARTURE FRONT ROLLER BEARING

5.555 YOKE, UNIVERSAL JOINT

1 3653057 1946-48/20-22 FRONT
1 3665768 1946-54/20-22 REAR
1 506414 1946-51/25-26-27-28, 1952/25-27 FIRST JOBS WITH 19 ROLLERS
PACKAGE INCLUDES BEARINGS, CORK WASHERS AND ATTACHING PARTS FRONT
1 591644 1949-54/20-22 EXC. AT FRONT
1 3703214 1951-54/20-22 AT FRONT /SUPERSEDES 3689857/
1 516601 1952/25-27 AFTER JOBS WITH 26 ROLLERS, 1953-54/25-27-28 PACKAGE-
INCLUDES BEARINGS, CORK WASHERS AND ATTACHING PARTS-FRONT
1 3707059 1955-57/20-22
1 519976 1955/27-28 EXC. HT-WITH BEARINGS
1 519977 1955/27-28 HT-WITH BEARINGS
1 5670047 1956-57/27-28 EXC HT
1 5670049 1956-57/27-28 HT

5.557 PLUG, UNIVERSAL JOINT DUST

1 502237 1946-56/25-26-27-28 BEARINGS RETAINED WITH PLATE CUP TYPE
1 506538 1946-47/26-28, 1948-50/25-26-27-28 JOBS WITH BEARINGS RETAINED BY
SNAP RING-CUP TYPE
1 5670044 1956-57/27-28 HT

5.560 PACKING, UNIVERSAL JOINT TRUNNION

8 406813 1946-51/25-26-27-28 CORK
8 5663699 1952/25-27 WITH BEARINGS HAVING 26 ROLLERS, 1953-55/25-27-28, CORK
8 406813 1952/25-27 WITH BEARINGS HAVING 19 ROLLERS

5.560 SHIELD, UNIVERSAL JOINT DUST

8 406805 1946-55/25-26-27-28
8 1406099 1956-57/27-28

5.560 SEAL, UNIVERSAL JOINT YOKE TRUNNION BEARING

AR 3707064 1955-57/20-22

5.560 WASHER, UNIVERSAL JOINT JOURNAL

8 1406101 1956-57/27-28

5.563 BOLT UNIT, UNIVERSAL JOINT RING

4 3723489 1946-54/20-22 CONSISTS OF 591869 BOLT AND 3655364 PLATE

5.564 BALL, UNIVERSAL JOINT

1 602688 1946-54/20-22

5.565 RETAINER, UNIVERSAL JOINT BALL

1 348131 1946-54/20-22 EXC. AT
1 3692835 1951/20-22, 1952-54/20-22 AT
6 838819 WASHER, LOCK 1951-54/20-22 AT

5.565 SEAT, TRANSMISSION BALL JOINT

1 3692838 1951-54/20-22 AT

5.565 SEAL, UNIVERSAL BALL JOINT COLLAR -O- RING

2 3689826 1951-57/20-22 PG

5.566 BEARING, UNIVERSAL JOINT YOKE

2 3665770 1946-54/20-22 FRONT
2 3665771 1946-54/20-22 REAR
AR 514270 1946-51/25-26-27-28, 1952/25-27 ROUND TYPE /SUPERSEDES 506048/
AR 406829 1946-51/25-26-27-28 FLANGE TYPE
6 5664303 1952/25-27 WITH BEARINGS HAVING 26 ROLLERS, 1953-55/25-27-28 ROUND
2 5663696 1952/25-27 WITH BEARINGS HAVING 26 ROLLERS, 1953-55/25-27-28 FLANGED
2 406829 1952/25-27 WITH BEARINGS HAVING 19 ROLLERS FLANGED
AR 3709838 1955-57/20-22 TRUNNION
8 5662717 1956-57/27-28 WITH ROLLERS ROUND



5.566 ROLLER, UNIVERSAL JOINT YOKE TRUNNION BEARING

AR 606868 1955-57/20-22

5.567 SHIM, UNIVERSAL JOINT HOUSING

AR 3699727 1946-54/20-22 EXC. AT

AR 3692836 1951-54/20-22 AT

5.569 PLATE, UNIVERSAL JOINT FLANGE BOLT LOCK

AR 406822 1946-55/25-26-27-28

2 5671530 1956-57/27-28 -U- SHAPE /SUPERSEDES 5670765/

5.569 U BOLT, PROPELLER SHAFT AND UNIVERSAL JOINT TO REAR COMPANION FLANGE

2 522380 1956-57/27-28 /5670084/

5.572 SEAL, UNIVERSAL JOINT BALL RETAINER

AR 3723490 1946-54/20-22 EXC AT - PACKAGE /SUPERSEDES 3707194/

5.576 WASHER, UNIVERSAL JOINT BALL OIL SEAL

2 595013 1946-54/20-22

5.576 RETAINER, UNIVERSAL JOINT BALL OIL SEAL

1 595012 1946-54/20-22

5.578 TRUNNION, UNIVERSAL JOINT

2 3708042 1955-57/20-22

5.578 JOURNAL ASSEMBLY, UNIVERSAL JOINT

2 406803 1946-51/25-26-27-28, 1952/25-27 WITH BEARINGS HAVING 19 ROLLERS

2 5663692 1952/25-27 WITH BEARING HAVING 26 ROLLERS, 1953-55/25-27-28

2 5662652 1956-57/27-28

5.579 SPACER, UNIVERSAL JOINT

1 591202 1946-48/20-22

1 591758 1949-54/20-22 EXC. AT

5.580 SEAL, UNIVERSAL JOINT BALL OIL

1 3707193 1946-54/20-22 /3723490/

5.586 PLATE - BOLT - LOCK RING, UNIVERSAL JOINT BEARING RETAINING

AR 514393 PLATE, 1946-55/25-26-27-28 /SUPERSEDES 1418081/

2 3652927 RING 1946-54/20-22

AR 406808 BOLT 1946-55/25-26-27-28

AR 1418080 LOCK 1946-55/25-26-27-28 WITH BEARING RETAINED BY PLATE

5.586 RING, UNIVERSAL JOINT YOKE BEARING RETAINER

6 506034 1946-47/26-28, 1948-55/25-27 JOBS WITH BEARINGS RETAINED BY SNAP RING

AR 3721887 1955-57/20-22 TRUNNION BEARING SNAP

8 1456507 1956-57/27-28

5.595 NUT, UNIVERSAL JOINT FLANGE TO PINION

1 499562 1946/25-26-27-28, 1947/26-28 WITH NEW DEPARTURE FRONT PINION BEARING

1 513715 NUT 1947/25-27 ALL -26-28 WITH HYATT BEARING 1948-56/25-27-28

1 513716 WASHER 1947/25-27 ALL -26-28 WITH HYATT BEARING, 1948-56/25-27-28

1 517900 WASHER 1957/27-28 - REAR

5.595 NUT, PROPELLER SHAFT PINION FLANGE

1 3752901 1955-57/20-22 /SUPERSEDES 3705781/

5.803 WHEEL, STEEL

5 3693214 1946-48/20-22 16 X 4.50 E

5 3718632 1946-48/20-22 WITH 6.70 X 15 TIRES FOR SERVICE ONLY 15 X 5K

5 508847 1946-48/25-26-27-28 16 X 5.00

5 5841515 1948-55/25-27-28 - 15 X 5-1/2K

5 3687980 1949-53/20-22 15 X 5K

5 3714744 1954-56/20-22 15 X 5K /3714202/

5 521551 1956/27-28 15 X 5-1/2 K

5 3750590 1957/20-22 14 X 5J /SUPERSEDES 3735591/

5 524271 1957/27-28 - HEAVY DUTY

5.807 COVER, BRAKE ADJUSTING OR INSPECTION HOLE

AR 475516 1946-51/ALL

5.809 DRUM, REAR BRAKE

2 601985 1946-48/20-22
2 505300 1946-50/ALL US, 1953-57/25-27-28 US SEE NOTE - KELSEY HAYES
2 5832555 1946/25, 1947/25-27, 1948/25-27 WITH 15 IN. WHEELS ON AND AFTER SERIAL
82---01912, 1949-52/25-27, 1953-54/25-27 CAN.
2 412556 1948/25-27 WITH 15 IN. WHEELS FIRST JOBS TO SERIAL 82---01912
2 3690338 1949-50/20-22
3868801 3752622 1951-57/20-22 /SUPERSEDES 3719249/
NOTE. 505300 IS OPTIONAL WITH 409176 IN SETS ONLY.

5.810 NUT, REAR BRAKE DRUM RETAINING

AR 358501 1955-57/20-22

5.810 SPRING, BRAKE DRUM DAMPENER

AR 5839607 1949-57/20-22 FRONT

5.811 GASKET, BRAKE DRUM

2 476518 1946-48/20-22 FRONT
2 499930 1946-57/25-26-27-28 REAR TO AXLE SHAFT

5.812 BOLT, WHEEL HUB

AR 476515 1946-54/20-22 FRONT
AR 375696 1946-54/20-22 REAR
4 501503 1946-50/ALL US, 1953-57/25-27-28 US REAR DRUM TO AXLE
5 1462678 1946-56/25-26-27-28 FRONT - RIGHT /SUPERSEDES 506051/
5 1463257 1946-56/25-26-27-28 FRONT - LEFT /SUPERSEDES 506052/
5 499542 1946-57/25-26-27-28 RIGHT - REAR
5 499543 1946-57/25-26-27-28 LEFT - REAR
10 375696 1955-57/20-22 - FRONT
10 3705752 1955-57/20-22 REAR
5 523777 1957/27-28 FRONT - RIGHT
5 523778 1957/27-28 FRONT - LEFT

5.812 NUT, REAR BRAKE DRUM RETAINER SPRING

4 5785310 1946-55/25-26-27-28 CONSISTS OF 50 PCS OF 554544

5.813 NUT, WHEEL HUB BOLT

AR 358501 1946-57/20-22
AR 405984 1946-57/25-26-27-28 RIGHT
AR 499550 1946-57/25-26-27-28 LEFT

5.815 DEFLECTOR, REAR BRAKE DRUM OIL

2 593253 1946-48/20-22
2 3687775 1949-54/20-22

5.815 DRAIN, REAR BRAKE OIL

2 499929 1946-50/ALL US, 1953-57/25-27-28 US

5.815 DEFLECTOR, AXLE HOUSING OIL

2 3694711 1946-54/20-22
2 499928 1946-57/25-26-27-28 US

5.816 RETAINER, AXLE SHAFT BEARING

2 472521 1946-54/20-22 INNER
2 567105 1946-57/25-26-27-28 INNER
2 555467 1946-53/25-27, 1954/25-27 CAN. OUTER
2 499932 1946-50/ALL US, 1953-57/25-27-28 US OUTER
2 3708829 1955-56/20-22
2 3739104 1957/20-22
2 3714770 RING, RETAINING 1955-57/20-22
2 7450794 RING, RETAINING, 1955-56/20-22 WITH USE OF 7450792 WHEEL BRG UNIT

5.816 SPACER, REAR WHEEL BEARING

2 3750617 1957/20-22 USE WITH BEARING 3750616



5.819 GASKET, BRAKE DRUM OIL DEFLECTOR

2	365673	1946-48/20-22 REAR
2	476124	1946-48/20-22 FRONT
2	499933	1946-50/ALL US, 1953-57/25-27-28 US REAR
2	410909	1946-53/25-27, 1954/25-27 CAN. REAR
4	3687627	1949-54/20-22 FRONT AND REAR
2	3742928	1955-57/20-22 RETAINER

5.822 SEAL, AXLE SHAFT OIL

2	3705796	1946-54/20-22
2	412111	1946-54/25-26-27-28 INNER-LEATHER
2	1455257	1955/27-28
2	521665	1956-57/27-28 WHEEL BEARING
2	521666	1956-57/27-28 -O- RING

5.822 SEAL UNIT, REAR WHEEL BEARING

2	3717671	1955/20-22, 1956/20-22 FIRST JOBS - METAL BACKING
2	3730317	1956/20-22 AFTER JOBS - NEOPRENE BACKING
2	3750294	1955-56/20-22 USED WHEN WHEEL BRG UNITS 7450792 AND 3750616 ARE INSTALLED
2	3739435	1957/20-22

5.855 BEARING, AXLE SHAFT

2	111119	1946-54/20-22 HYATT C-1500 OUTER
2	954848	1946-55/25-26-27-28
2	3729375	1955-56/20-22
2	7450792	1955-56/20-22 - SPECIAL SERVICE ONLY
2	7451112	1957/20-22 - SPECIAL SERVICE /SUPERSEDES 3750616/
2	955000	1956-57/27-28 NEW DEPARTURE #RW-508 /SUPERSEDES 954946/
2	904278	1957/20-22 /3739109/

5.858 CAP, HUB

4	508607	1946/25-26-28
1	506080	1946-48/25-27 EXC. /-27/ -26-28 /-09/ FOR SPARE WHEEL
4	5834042	1947-48/20-22
4	509418	1947-48/25-26-27-28
4	5837194	1949-50/20-22
4	511541	1949-50/25-27 EXC. /-07D-08D-69D/
4	5839964	1951-52/20-22, 1953/20 /-11W-27-69W/ -22
4	514588	1951-52/25 /-07-11-27-69/ -27 /-69/, 1953/25 /-11-27-69-62D/ -27 /-11-69-62D/, 1954/25-27 /-27-27B-11W-69W-62-62F-62FD/ -28 /-69W/
4	5845500	1954/20 EXC. /-11WD-37D-69WD/ -22
4	5759534	1955/20 EXC /-11D-19D-37D-67D/ -22, 1956/20 /-11-11A-19-37-39-62F-63F/ -22, 1957/20 EXC /-11D-19D-37D-39D-67D/ -22 /SUPERSEDES 5846973/
4	518947	1955-57/ALL -27-28 WITH STD HUB CAP

5.858 CAP, FRONT HUB GREASE RETAINING

2	3744926	1946-54/20-22 /SUPERSEDES 370262/
2	405999	1946-57/25-26-27-28
2	3707121	1955/20-22
2	1812805	1956-57/20-22

5.858 DISC, WHEEL

5	510690	1948/25-27 /-07D-19D/ STANDARD EQUIPMENT
5	510690	1948/25-27 /-07-11-19-27/ OPTIONAL EQUIPMENT
4	512583	1949-50/25-27 /-07D-08D-11D-27D-69D/ CHROME
4	514789	1951/ALL CHROME
4	516496	1952/25-27 CHROME
4	516696	1953/25-27 /-11WD-37D-37SD-69WD-67DTX/
4	5846139	1953-54/20-22
4	517869	1954/25-27-28 EXC. /-62/ OPTIONAL EQUIPMENT
4	5847869	1955/20-22 FIRST JOBS WITH RED CENTER
4	5756124	1955/20-22 AFTER JOBS WITH WHITE CENTER
4	520941	1955/27 EXC. /-64DF/ 28 /-19D-67DTX/
4	519843	1955/27 /-64DF/ 28 /-19SD-37SD/
4	5756695	1956/20-22
4	521451	1956/27-28
4	5759653	1957/20-22 STD. ON DELUXE JOBS OPTION ON OTHER JOBS
4	523648	1957/27 /-19D-39D-37D-62DF-64DF/ -28 EXC /-67SDTX/
4	528406	1957/28 /-67SDTX/ STD



5.864 CLIP, HUB CAP RETAINING

AR	3704844	1949-52/20-22, 1953/20 EXC. /-11WD-37D-69WD/ 22
15	521508	1946-57/25-26-27-28 WITH HUB CAPS OR SIMULATED WIRE WHEELS
AR	564692	1946-53/25-26-27-28, 1954/25-27 /502122/

5.871 MOULDING, WHEEL TRIM

5	3690229	1948/25-27 /-07-11-19-27/ WITH 15 IN. WHEELS ON AND AFTER SERIAL 82---01912, 1949-51/20-22 ALL -25-27 EXC. /-07D-08D-69D/, 1952/20-22 ALL -25-27 /-11-69/, 1953/20 /-11W-27-37-69W/ -22 ALL -25 /-11-27-69/ -27 /-11-69/ OPTIONAL EQUIPMENT - SEE NOTE
---	---------	--

NOTE. 986259 CAN BE USED IN SETS ONLY TO REPLACE ORIGINAL.

5.871 PLUG, WHEEL

20	514896	1949-54/25-27-28 US
20	5846812	1953-56/20-22 WITH CHROME WHEEL DISCS
20	5845830	1953-54/25-27 CAN.

5.871 RING, WHEEL TRIM

5	512498	1955-56/27-28
---	--------	---------------

5.871 EXTENSION, TIRE VALVE

5	111566	1957/20-22
---	--------	------------



5.875 CAP, TIRE VALVE EXTENSION

5	513410	1949-50/25-27 /-07D-08D-11D-27D-69D/, 1953-56/ALL WIRE WHEEL DISCS, 1957/28 /-67SDTX/ WITH CUSTOM DISCS
AR	125641	1955-57/20-22 - DUST /SUPERSEDES 273301/

5.875 STEM, TIRE VALVE


5	273232	1955-56/ALL WITH TUBELESS TIRES
5	274083	1957/20 /-11-11A-19-37-39-62F-63F/ -22 EXC WHEEL DISCS
5	274288	1957/27-28 - WITH TUBELESS TIRE
AR	274119	1957/20-22 WITH WHEEL TRIM DISCS



1946-
-1957*Pontiac***PARTS**
CATALOGUE NO. 572BRAKES
REAR AXLE

PROPELLER SHAFT CHART

Part No.	Type	Length	Models
506065	H	58-11/16	1946-48/25 exc. HT
506066	H	58-11/16	1947-48/27 exc. HT
506067	H	61-7/8	1946-47/26 exc. HT
506068	H	61-7/8	1946-47/28 exc. HT
510781	H	50-1/8	1948/25-27 HT
511291	H	54-11/16	1949-52/25-27
515502	H	56-45/64	1953-54/25-27
517527	H	58-45/64	1954/28
3704406	C	63-1/16	1946-54/20-22
3719428	H	53-1/2	1955/20-22 first jobs
3722117	H	53.90	1955/20-22 after jobs; 1956-57/20-22
5667452			1954/28 exc. HT
5667470	H	61-13/16	1955/27
5667475	H	63-13/16	1955/28
5670041		60.58"	1956/27
5670042		62.58"	1956/28
523819	H		1957/27 ST
523822	H		1957/27 HT
523820	H		1957/28 ST
523823	H		1957/28 HT

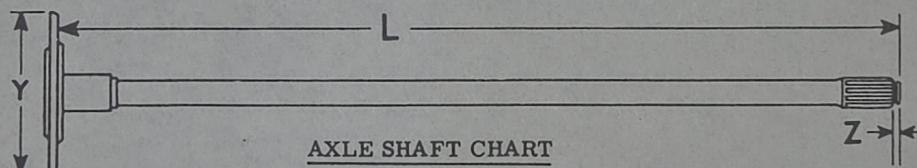

AXLE SHAFT CHART

Part	Identification			Models
	L	Y	Z	
414414	30-9/16	6-1/4		1946-48/25-27 Right
414415	30-9/16	6-1/4		1946-48/25-27 Left
502063	29-3/16	6-3/8		1953-54/25-27 US -28; 1955-56/27-28 Right
502064	29-3/16	6-3/8		1953-54/25-27 US -28; 1955-56/27-28 Left
505118	30-27/32	6-13/32		1946-47/26-28 Right
505119	30-27/32			1946-47/26-28 Left
555632	29-11/16	6-3/8		1949-53/25-27; 1954/25-27 Can. Right
555633	29-11/16	6-3/8		1949-53/25-27; 1954/25-27 Can. Left
3657313	29-9/64	6-3/4	.141	1946-48/20-22 Left
3657314	30-9/64	6-3/4	.141	1946-48/20-22 Right
3687767	28-31/32	6-3/16	.140	1949-50/20-22 Left
3687768	29-31/32	6-3/16	.140	1949-50/20-22 Right
3694755	29-31/32	6-3/16	.140	1951-54/20-22 Left
3694756	29-31/32	6-3/16	.140	1951-54/20-22 Right
3714781	28-19/64	6-5/32		1955-56/20-22 Left
3714782	29-51/64	6-5/32		1955-56/20-22 Right
3739108	28-19/64	6-5/32		1957/20-22 Right
3739107	29-51/64	6-5/32		1957/20-22 Left
3743838	30-3/16			1957/20-22 Right with Positraction Rear Axle
3743837	28-11/16			1957/20-22 Left with Positraction Rear Axle



408

PARTSEngineered for
Premium Performance